
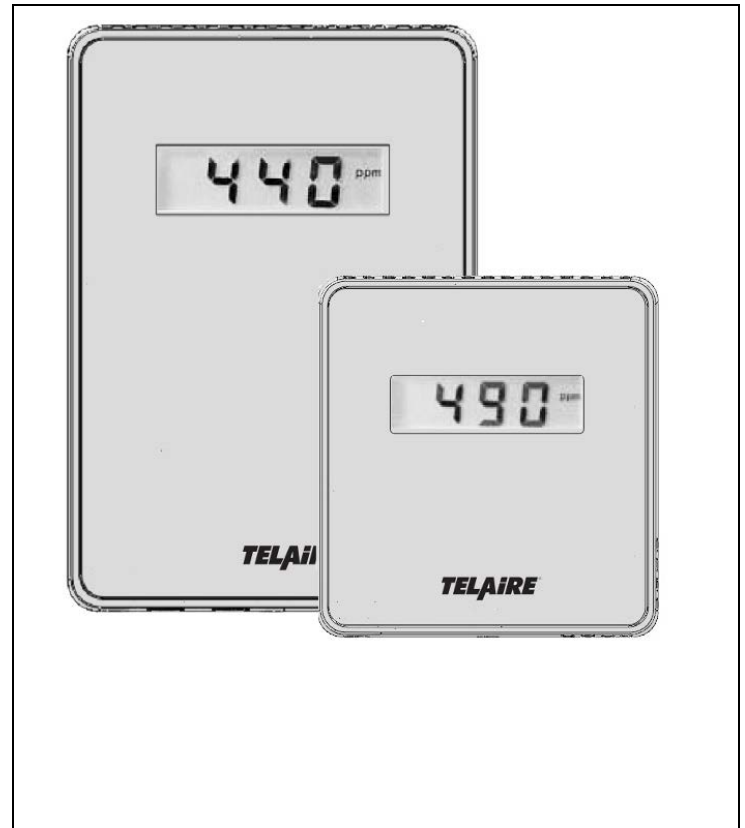


Installing the Sensor


!WARNING!

Before performing service or maintenance operations on the systems, turn OFF main power switches to the unit. Electric shock can cause personal injury. Please read and follow the wiring instructions precisely; miswiring may cause permanent damage to the product.

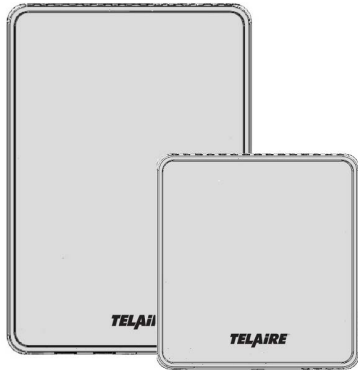

Basic Installation

1. Separate the case into its front and rear sections.
2. Secure the rear section of the case to the wall or junction box using the supplied screws, and make necessary wire connections.
3. Mount the Controller on the base by aligning the top clips and then securing to the bottom clips. Secure the RH transmitter with the supplied set screw. A one-minute stabilization warmup will take place.

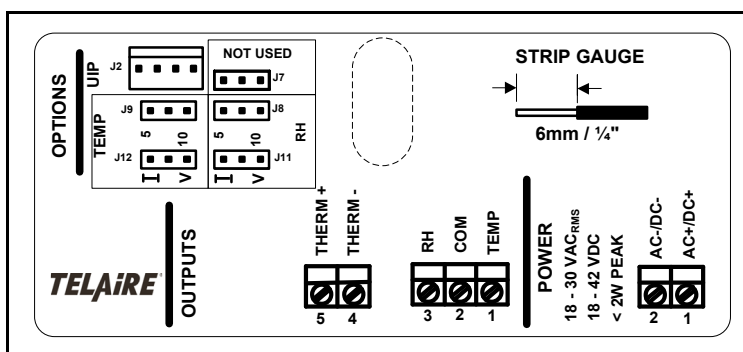

Internal Label for Display Units

Telaire Humidity/Temperature Wiring Diagrams

The T8700 Telaire Humidity/Temperature family of products has a configuration that provides active outputs for RH and Temperature (terminals 1, 2 and 3) as well as a passive connected 10k type II Thermistor (terminals 4 and 5) and an independent thermistor.

For electrical wiring and power supply requirements, please follow the specific instructions for wiring. The recommended wire gauge is 18-22 AWG (1.0 to 0.75 metric).

!WARNING!

The T8700 Telaire Humidity/Temperature products have two terminal pins that are connected inside the sensor to a common/ground: pin #2 on the I/O terminal block and pin #2 on the power block. Do NOT connect positive (hot) 24 VAC power line to terminal number 2 of the power block.

Caution!

The Telaire Humidity/Temperature products are either 3-wire or 4-wire type configurations, powered by either AC or DC voltage. They are not 2-wire or loop-powered devices. Wiring the units as 2-wire or loop-powered devices will irreparably damage the sensors and void the warranty.

Note: For additional flexibility of temperature measurements, the T8700 models contain a passive thermistor (terminal pins #4 and 5), which is electrically isolated from the other circuitry and should be wired independently from active RH/temperature outputs. The thermistor has no connection to the RH transmitter common ground and/or power.

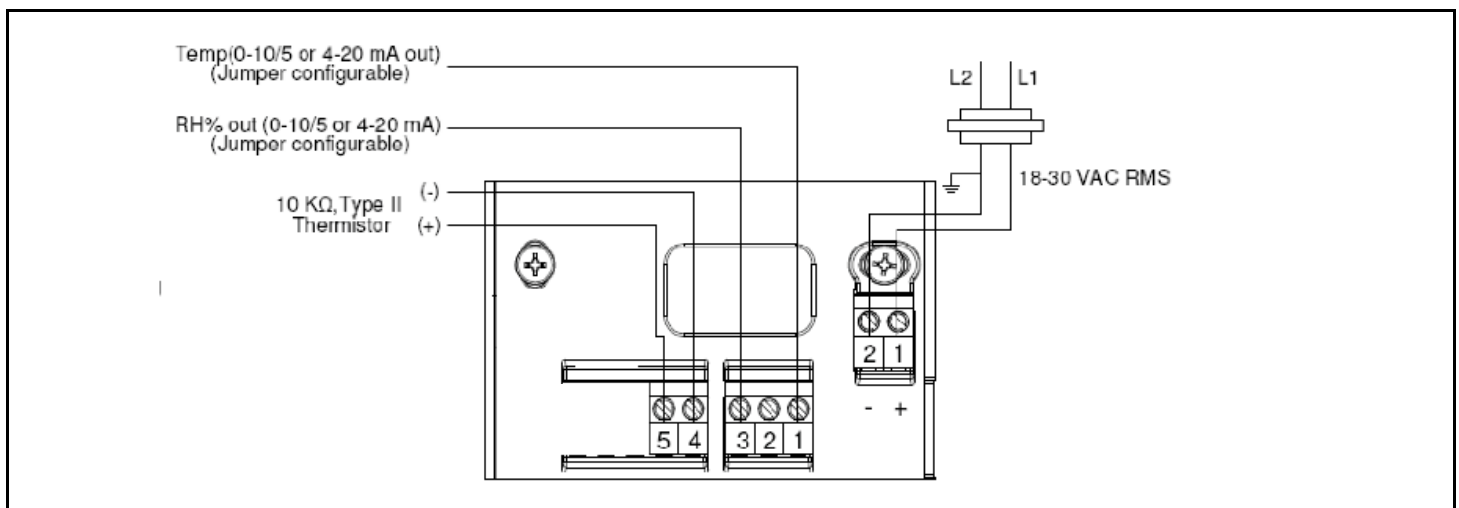


Figure 1: Wiring for 3-Wire System, AC Power

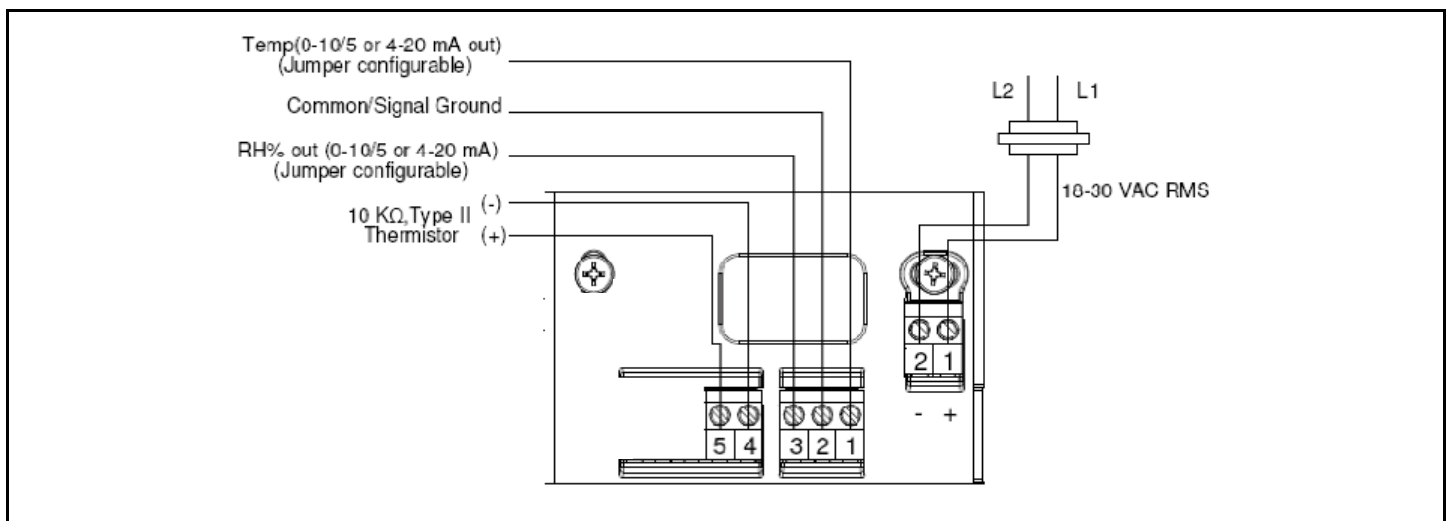


Figure 2: Wiring for 4-Wire System, AC Power

8700 Specifications

Sensing Method

Fully integrated humidity and temperature

RH Sensing Element

Capacitive polymer sensor

RH Range

0% to 99% RH (non-condensing)

RH Accuracy (25°C)

±2.5% RH (20 to 80% RH)

±3.5% RH (<20% and >80% RH)

Active Temperature Range

0 to 50°C

Active Temperature Accuracy

±0.8°C @ 22°C

Thermistor Type

NTC 10 K thermistor (passive) datasheet available on request.

Thermistor Accuracy

±1°C (15° to 35°C)

Output

Analog

- 0 to 10 V (100Ω output impedance) or
- 4 to 20mA (RL maximum 500Ω)

Digital to Analog Error ±1%

Power Supply Requirements

18-30 VAC RMS, 50/60 Hz, or 18 to 42 VDC, polarity protected

Power Consumption

< 0.3 W using voltage outputs

<1.1 W using two current outputs

0.8 W typical using two current outputs

Certifications CE

and RoHS compliant

Operating Conditions

- 32°F to 122°F (0°C to 50°C)
- 0 to 95% RH, non-condensing

Storage Conditions

-40°F to 158°F (-40°C to 70°C)

Flammability Classification

UL94 5VA

Enhanced Field Serviceability

The T8700 series features a field-replaceable Relative Humidity (RH) sensor tip module that allows the end user to replace the sensor on-site while maintaining ±2.5% RH accuracy. The user simply powers off the unit, installs the new sensor module and powers back the unit. This virtually eliminates the need for time consuming and costly factory calibration, while reducing downtime during service intervals to near zero.

Warranty/Other

Warranty

24 months parts and labor

Warranty Repairs

Amphenol Advanced Sensors will repair Telaire product that fails to meet the terms provided for in the Return and Warranty Policy Statement (See, [http:// www.telaire.com](http://www.telaire.com)). Warranty period shall start from date of manufacture and be based on product category and type of equipment as specified in Table 1: Product Warranty Periods. For all warranty repairs, Amphenol Advanced Sensors will bear all product repair parts, labor, and standard ground shipping charges.

Contact

www.telaire.com

North America and Asia +1 814 834 9140

Europe +44 1823 335 200

