


729/729 FC

Automatic Pressure Calibrator



To prevent possible electrical shock, fire, or personal injury, read the “729/729 FC Safety Sheet” before you use this Product.
Go to www.fluke.com to register your product, download manuals, and find more information.

Display

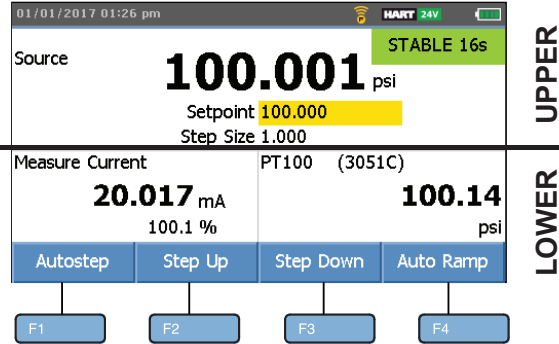

Upper Display

Pressure

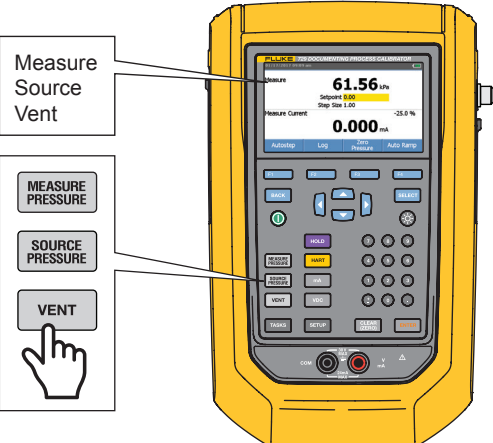


Measure Source Vent

MEASURE PRESSURE

SOURCE PRESSURE


VENT

Unit Select

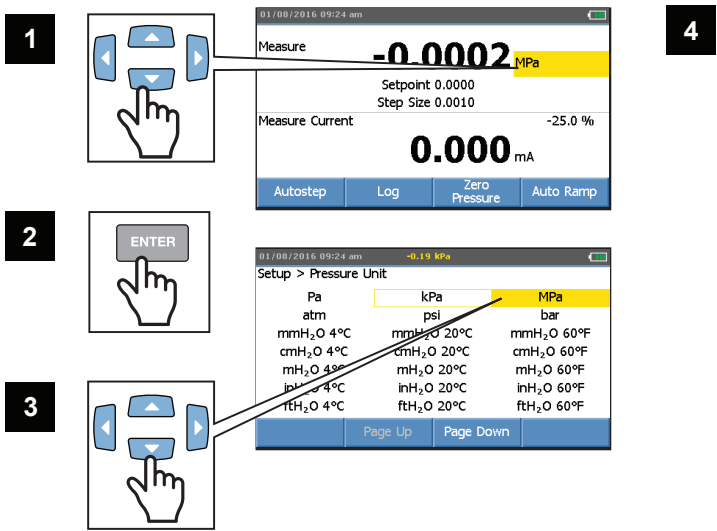

1. Press the left arrow key.
2. Press the ENTER key.
3. Press the right arrow key.
4. Press the ENTER key.

External Connection

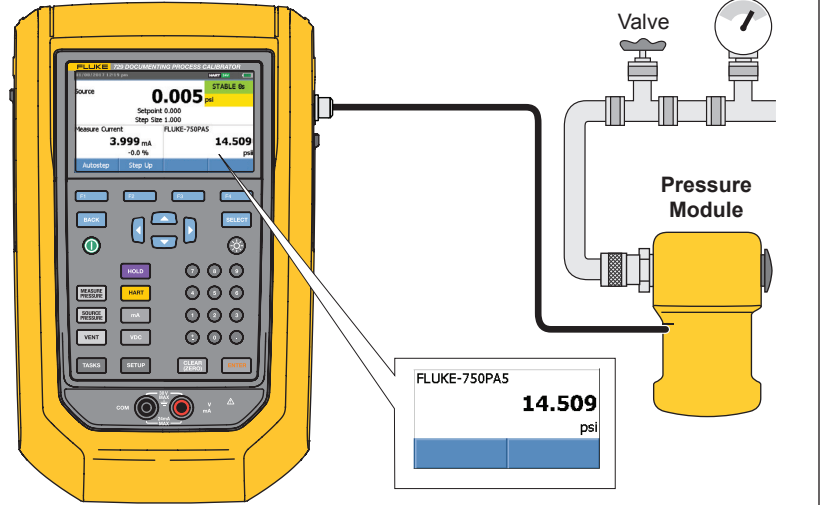

Valve


Pressure Module

FLUKE-750PA5

14.509 psi

Lower Display

Measure mA

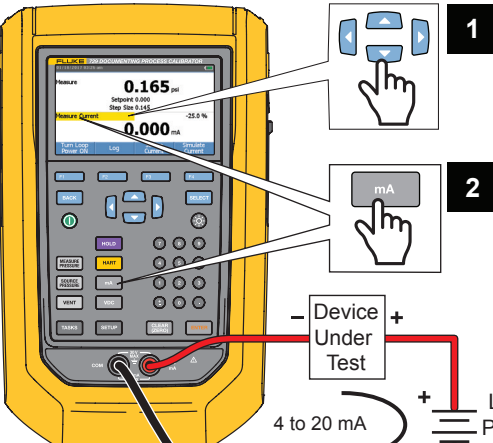

1. Press the left arrow key.


2. Press the mA key.

Device Under Test

4 to 20 mA

Loop Power Supply

Measure mA 24 V Loop

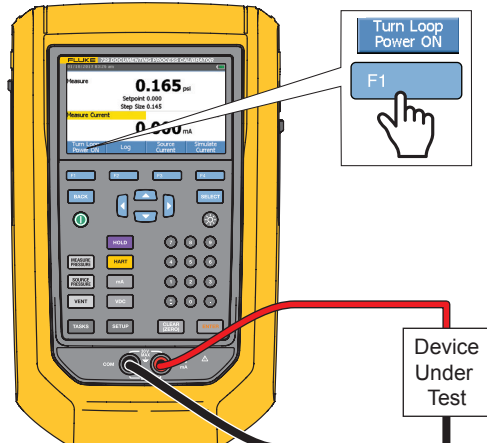


Turn Loop Power ON

F1

Device Under Test

Source mA

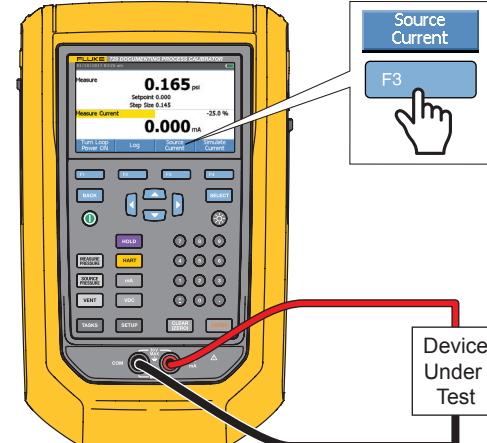


Source Current

F3

Device Under Test

mA Simulate

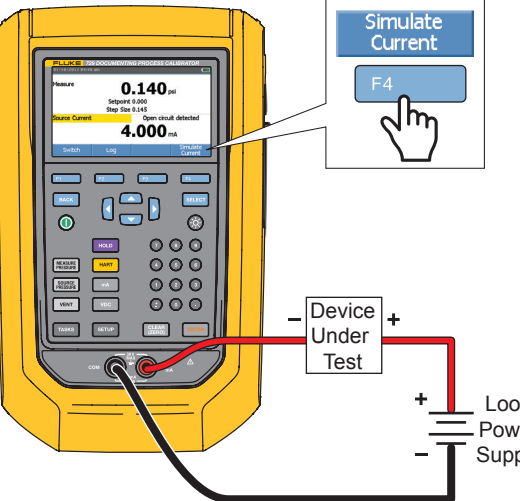

Simulate Current


F4

Device Under Test


Loop Power Supply

Lower Display


Measure Volts

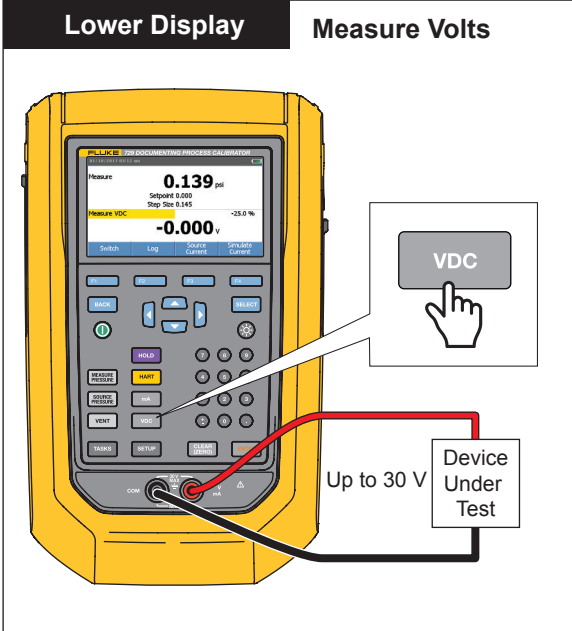


Measure RTD

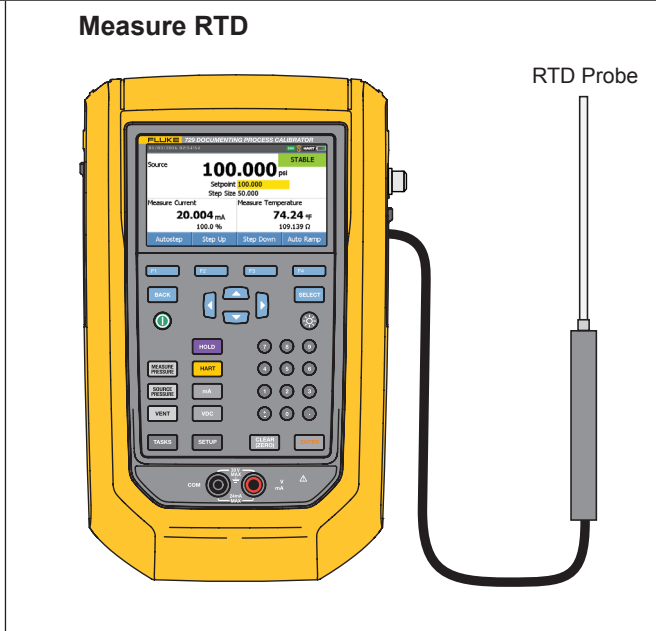


Temperature Units

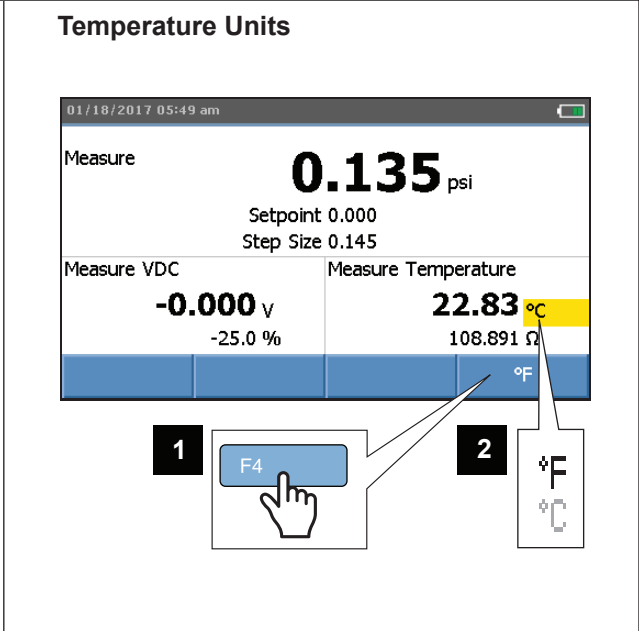


Batteries

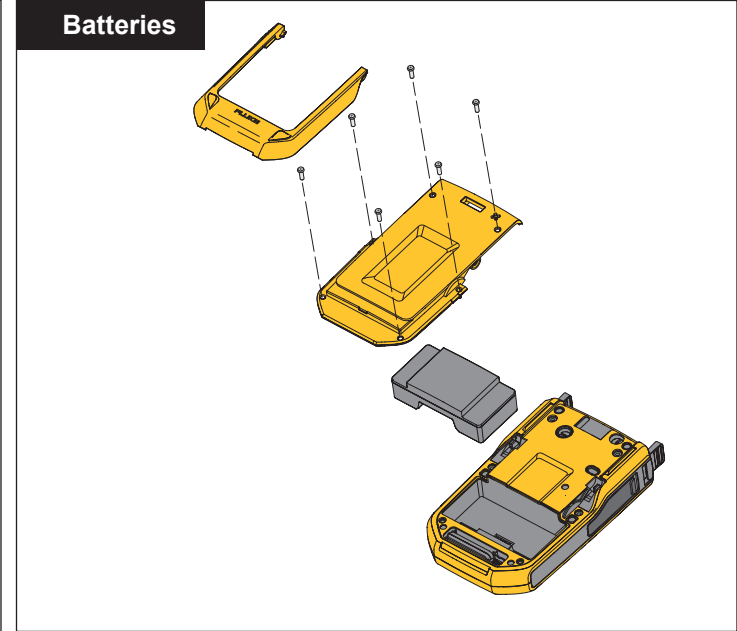

USB

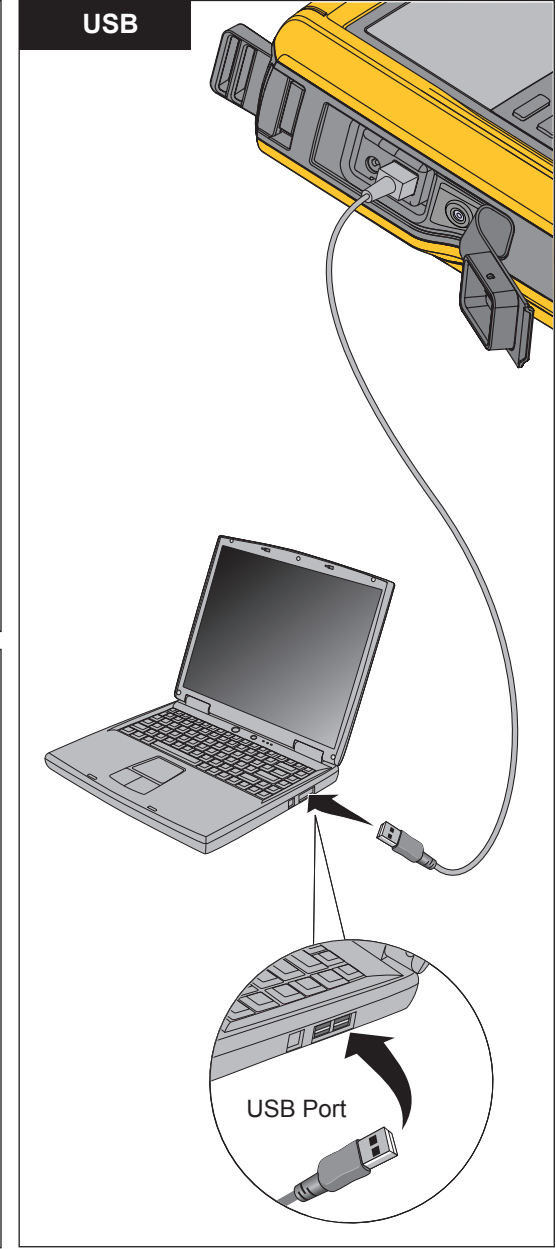

Tasks

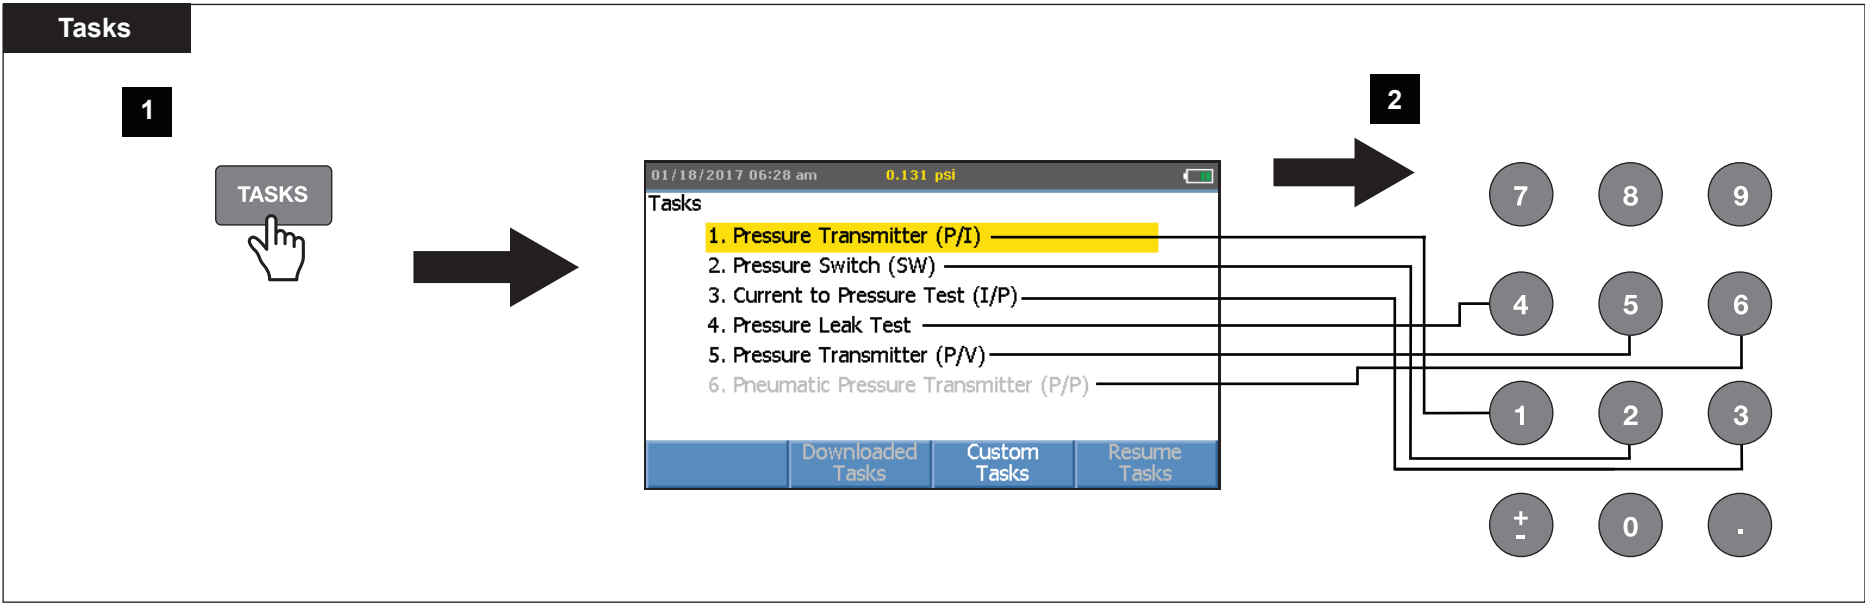

Set Language

