

Rosemount™ 1208C Level and Flow Transmitter

Non-Contacting Radar with HART® Protocol



Safety messages

NOTICE

Read this manual before working with the product. For personal and system safety and for optimum product performance, ensure that you thoroughly understand the contents before installing, using, or maintaining this product.

For technical assistance, contacts are listed below:

Customer Central

Technical support, quoting, and order-related questions.

- United States - 1-800-999-9307 (7:00 am to 7:00 pm CST)
- Asia Pacific- 65 777 8211

North American Response Center

Equipment service needs.

- 1-800-654-7768 (24 hours a day — includes Canada)
- Outside of these areas, contact your local Emerson representative.

⚠ WARNING

Failure to follow safe installation and servicing guidelines could result in death or serious injury.

Ensure the transmitter is installed by qualified personnel and in accordance with applicable code of practice.

Inspection and maintenance of this equipment shall be carried out by suitably trained personnel, in accordance with the applicable standards and code of practice.

Use the equipment only as specified in this manual. Failure to do so may impair the protection provided by the equipment.

For installations in hazardous locations, the transmitter must be installed according to the Rosemount 1208C [Product Certifications](#) document.

Repair, e.g. substitution of components, etc. may jeopardize safety and is under no circumstances allowed.

⚠ WARNING

Explosions could result in death or serious injury.

To prevent ignition of flammable or combustible atmospheres, disconnect power before servicing.

Before connecting a handheld communicator in an explosive atmosphere, ensure that the instruments are installed in accordance with intrinsically safe or non-incendive field wiring practices.

⚠ WARNING

Process leaks could result in death or serious injury.

Handle the transmitter carefully.

Install and tighten process connectors before applying pressure.

Do not attempt to loosen or remove process connectors while the transmitter is in service.

⚠ WARNING

Physical access

Unauthorized personnel may potentially cause significant damage to and/or misconfiguration of end users' equipment. This could be intentional or unintentional and needs to be protected against.

Physical security is an important part of any security program and fundamental in protecting your system. Restrict physical access by unauthorized personnel to protect end users' assets. This is true for all systems used within the facility.

⚠ CAUTION

Hot surfaces

The transmitter and process seal may be hot at high process temperatures. Allow to cool before servicing.



Contents

Chapter 1	Introduction.....	7
	1.1 Using this manual.....	7
	1.2 Product certifications.....	7
	1.3 Open source licenses.....	7
	1.4 Product recycling/disposal.....	7
Chapter 2	Transmitter overview.....	9
	2.1 Measurement principle.....	9
	2.2 Process characteristics.....	9
	2.3 Vessel characteristics.....	10
	2.4 Non-contacting radar technology.....	10
	2.5 Components of the transmitter.....	12
	2.6 System integration.....	13
Chapter 3	Mechanical installation.....	15
	3.1 Safety messages.....	15
	3.2 Installation considerations.....	15
	3.3 Bracket mounting.....	19
	3.4 Installing on a tank.....	26
Chapter 4	Electrical installation.....	29
	4.1 Safety messages.....	29
	4.2 Hazardous areas.....	29
	4.3 Prepare the electrical connections.....	30
	4.4 Power up transmitter.....	31
	4.5 Optional devices.....	32
Chapter 5	Configuration.....	33
	5.1 Safety messages.....	33
	5.2 Overview.....	33
	5.3 Configuration tools.....	34
	5.4 Confirm correct device driver.....	34
	5.5 AMS Device Configurator.....	34
	5.6 Configure transmitter using guided setup.....	35
	5.7 Wireless configuration via Bluetooth® technology.....	35
	5.8 Multidrop communication.....	36
	5.9 Write protect a transmitter.....	36
	5.10 Advanced setup.....	37
Chapter 6	Operation and maintenance.....	39
	6.1 Safety messages.....	39
	6.2 View measurement data.....	40
	6.3 Check device status.....	40
Chapter 7	Service and troubleshooting.....	43
	7.1 Safety messages.....	43

	7.2 Diagnostic messages per NAMUR NE 107.....	44
	7.3 Troubleshooting guides.....	52
	7.4 Managing disturbance echoes.....	66
	7.5 Service and troubleshooting tools.....	67
	7.6 Service support.....	69
Appendix A	Specifications and reference data.....	71
	A.1 Performance specifications.....	71
	A.2 Functional specifications.....	73
	A.3 Physical specifications.....	76
	A.4 Dimensional drawings.....	77
Appendix B	Configuration parameters.....	80
	B.1 Menu tree.....	80
	B.2 Device setup.....	80
	B.3 Level setup.....	84

1 Introduction

1.1 Using this manual

The sections in this manual provide information on installing, operating, and maintaining the Rosemount™ 1208C Level and Flow Transmitter – Non-Contacting Radar.

The sections are organized as follows:

[Transmitter overview](#) provides an introduction to theory of operation, a description of the transmitter, information on typical applications, and process characteristics.

[Mechanical installation](#) contains mechanical installation instructions.

[Electrical installation](#) contains electrical installation instructions.

[Configuration](#) provides instructions on configuration of the transmitter.

[Operation and maintenance](#) contains operation and maintenance techniques.

[Service and troubleshooting](#) provides troubleshooting techniques for the most common operating problems.

[Specifications and reference data](#) supplies reference and specification data.

[Configuration parameters](#) provides extended information about the configuration parameters.

1.2 Product certifications

See the Rosemount 1208C [Product Certifications](#) document for detailed information on the existing approvals and certifications.

1.3 Open source licenses

This device uses open source software. Further information can be found in the [License Information](#) document available at Emerson.com/Rosemount.

1.4 Product recycling/disposal

Recycling of equipment and packaging should be taken into consideration and disposed of in accordance with local and national legislation or regulations.

Related information

[Service support](#)

2 Transmitter overview


2.1 Measurement principle

The Rosemount 1208C is a device for continuous level measurements using fast-sweep Frequency Modulated Continuous Wave (FMCW) technology.

The device continuously emits signal sweeps with a constantly varying frequency towards the product surface. Since the device continuously changes the frequency of the transmitted signal, there will be a difference in frequency between the transmitted and the reflected signals (see [Figure 2-1](#)).

The frequency of the reflected signal is subtracted from the frequency of the signal transmitted at that moment, resulting in a low frequency signal which is proportional to the distance to the product surface. This signal is further processed to obtain fast, reliable, and highly accurate level measurements.

Figure 2-1: FMCW-method

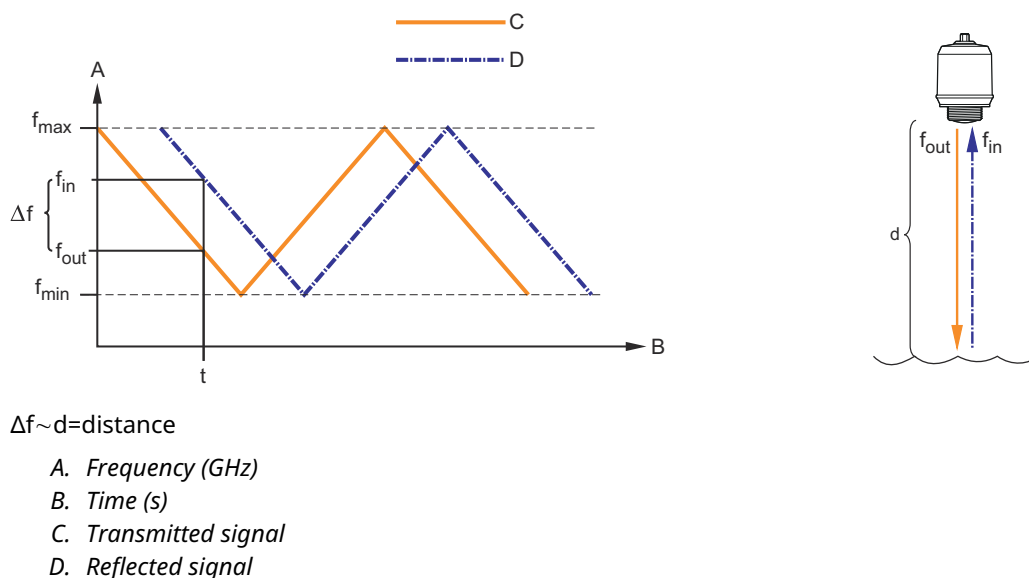

2.1.1 Volume flow measurement

The Rosemount 1208C can calculate the volume flow rate in an open channel.

2.2 Process characteristics

2.2.1 Dielectric constant

A key parameter for measurement performance is reflectivity. A high dielectric constant of the medium provides better reflection and enables a longer measuring range.

2.2.2 Foam and turbulence

Foaming liquids or turbulence may cause weak and varying surface echo amplitudes. Surface turbulence is not normally a problem unless it is excessive.

Measurement in foamy applications depends largely on the foam properties. When the foam is light and airy, the actual product level is measured. For heavy and dense foam, the device may measure the level of the foam's upper surface.

2.3 Vessel characteristics

2.3.1 In-tank obstructions

The device should be mounted so that objects such as heating coils, ladders, and agitators are not within the radar beam. These objects may cause false echoes resulting in reduced measurement performance. However, the device has built-in functions designed to reduce the influence from disturbing objects where such objects cannot be totally avoided.

Vertical and inclined structures cause minimal effect since the radar signal is scattered rather than directed back to the antenna.

2.4 Non-contacting radar technology


Non-contacting radar technology is ideal for a wide range of applications as it is maintenance-free, has a top-down installation that reduces the risk of leakages, and is unaffected by process conditions such as density, viscosity, temperature, pressure, and pH.

The Rosemount 1208C uses Frequency Modulated Continuous Wave (FMCW) technology and smart algorithms to maximize measurement accuracy and reliability, even in small tanks and challenging fast-filling vessels.

2.4.1 Application examples


Level and pump control

Pump stations need accurate measurement and control to ensure an optimal water flow to the next stage of the potabilization process, while also avoiding overflows and pumps from dry-running. Level measurement is essential to ensure a sustainable extraction of water and a sufficient supply of water to the next phases of the potabilization process.

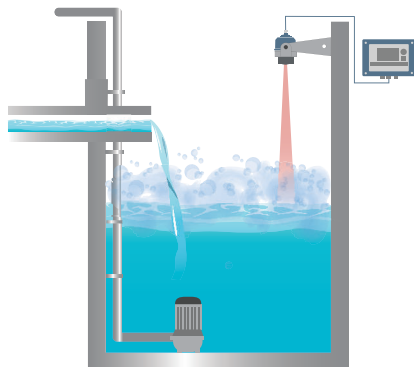


Open channel flow

Open-air channels transport water from a water source to a water plant where it will be processed. Flow monitoring in open channels is important to know the amount of water that is flowing to comply with regulations and avoid flooding.

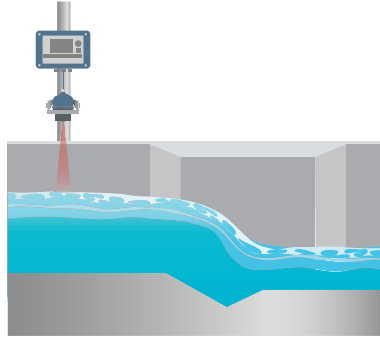


Differential level

In the screening process level measurement is necessary to monitor the level of water in the different parts of the screen, which will determine when to start the cleaning of the sieve.

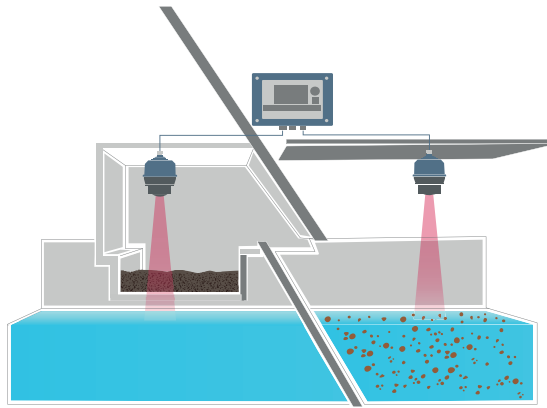


Tank volume

Storage tanks are used in water processes to store chemical substances, which are needed to treat the water. Level measurement is necessary to monitor, optimize chemical dosing, and avoid overfilling.

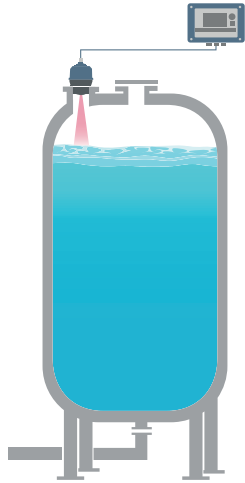

2.5 Components of the transmitter

Figure 2-2: Components

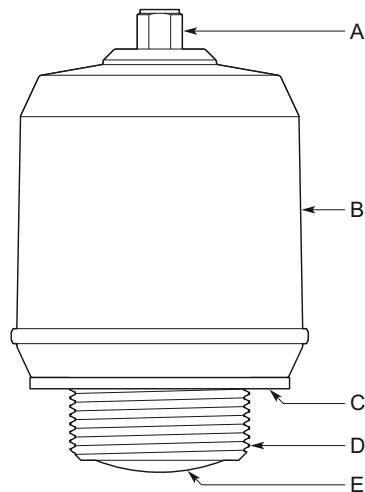

- A. M12 male connector (A-coded)
- B. Transmitter housing
- C. Gasket for G threaded version
- D. NPT 1½-in. or ISO 228/1-G1½-in. thread
- E. Antenna

Related information


[Dimensional drawings](#)

2.6 System integration

The transmitter is loop-powered, and uses the same two wires for power supply and output signal. The output is a 4-20 mA analog signal superimposed with a digital HART® signal.

With the HART protocol, multidrop configuration is possible. In this case, communication is restricted to digital, since current is fixed to the 4 mA minimum value.

Figure 2-3: System Architecture

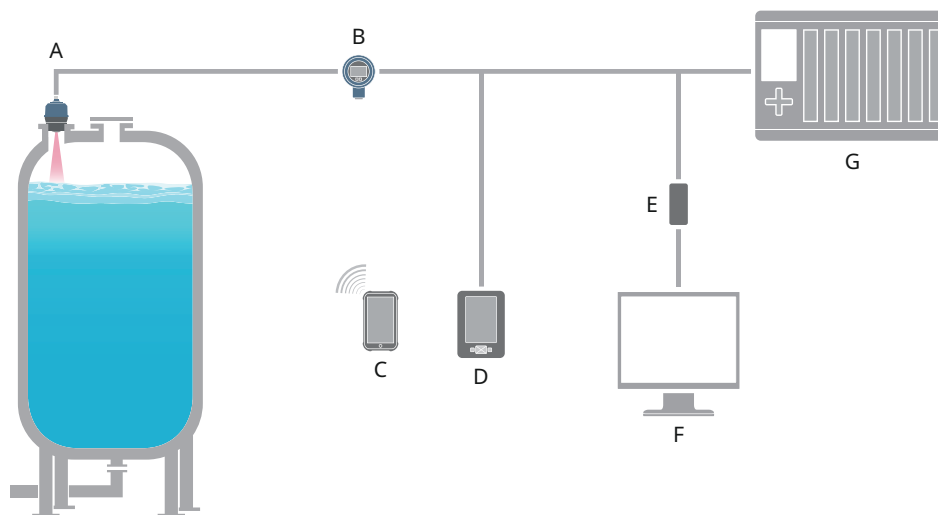

- A. Rosemount 1208C
- B. Rosemount 751 Field Signal Indicator
- C. Wireless communication using Bluetooth® technology
- D. Handheld communicator
- E. HART modem
- F. PC with AMS Device Configurator
- G. Host/DCS system

The Rosemount 1208C is compliant with NAMUR NE 107 Field Diagnostics for standardized device diagnostic information.

2.6.1 Easy integration into control systems

Connect the Rosemount 1208C to your host system or visualize and control your process data by pairing with the Rosemount 3490 Controller. The controller provides comprehensive control functionality for any of your 4-20 mA or HART compatible devices.

3 Mechanical installation

3.1 Safety messages

Instructions and procedures in this section may require special precautions to ensure the safety of the personnel performing the operations. Information that potentially raises safety issues is indicated by a warning symbol () . Refer to the following safety messages before performing an operation preceded by this symbol.

WARNING

Failure to follow safe installation and servicing guidelines could result in death or serious injury.

Ensure the transmitter is installed by qualified personnel and in accordance with applicable code of practice.

Inspection and maintenance of this equipment shall be carried out by suitably trained personnel, in accordance with the applicable standards and code of practice.

Use the equipment only as specified in this manual. Failure to do so may impair the protection provided by the equipment.

For installations in hazardous locations, the transmitter must be installed according to the Rosemount 1208C [Product Certifications](#) document.

Repair, e.g. substitution of components, etc. may jeopardize safety and is under no circumstances allowed.

WARNING

Explosions could result in death or serious injury.

To prevent ignition of flammable or combustible atmospheres, disconnect power before servicing.

Before connecting a handheld communicator in an explosive atmosphere, ensure that the instruments are installed in accordance with intrinsically safe or non-incendive field wiring practices.

WARNING

Process leaks could result in death or serious injury.

Handle the transmitter carefully.

Install and tighten process connectors before applying pressure.

Do not attempt to loosen or remove process connectors while the transmitter is in service.

3.2 Installation considerations

Before installing the device, follow recommendations for mounting position, sufficient free space, nozzle requirements, etc.


3.2.1 Mounting position

When finding an appropriate location on the tank for the device, the conditions of the tank must be carefully considered.

Consider the following guidelines when mounting the device:

- For optimal performance, the device should be installed in locations with a clear and unobstructed view of the product surface.
- The device should be mounted with as few internal structures as possible within the radar beam.
- Do not mount close to or above the inlet stream.
- Do not mount the device on a manway cover.
- Do not position the device directly over a side manway door.
- Multiple Rosemount 1208C devices can be used in the same tank without interfering with each other.

Figure 3-1: Recommended Mounting Position

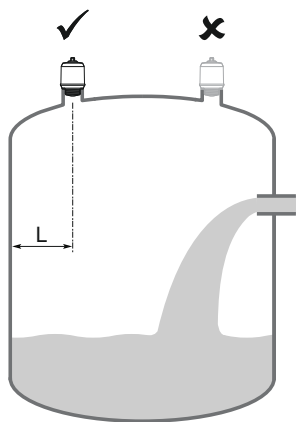

3.2.2 Free space requirements

If the device is mounted close to a wall or other tank obstruction such as heating coils and ladders, noise might appear in the measurement signal. See [Table 3-1](#) for recommended clearance.

Figure 3-2: Free Space Requirements

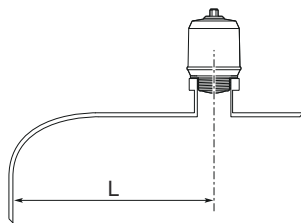



Table 3-1: Distance to Tank Wall (L)

Minimum	Recommended
8 in. (200 mm)	½ of tank radius

3.2.3 Inclination

The device should be mounted vertically to ensure a good echo from the product surface. See [Figure 3-3](#) for recommended maximum inclination.

Figure 3-3: Inclination

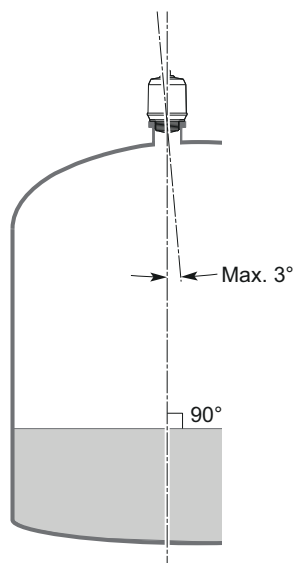


3.2.4 Non-metallic tanks

Nearby objects outside the tank may cause disturbing radar echoes. Wherever possible, the device should be positioned so that objects close to the tank are kept outside the radar beam.

3.2.5 Beam angle and beam width

The device should be mounted with as few internal structures as possible within the radar beam.

Figure 3-4: Beam Angle and Beam Width

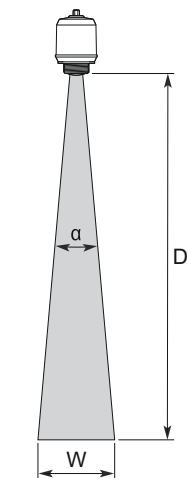

Beam angle (α)

8°

Beam width

See [Table 3-2](#) for beam width at different distances.

Table 3-2: Beam Width

Distance (D)	Beam width (W)
6.6 ft. (2 m)	0.9 ft. (0.3 m)
13.1 ft. (4 m)	1.8 ft. (0.6 m)
19.7 ft. (6 m)	2.8 ft. (0.8 m)
26.2 ft. (8 m)	3.7 ft. (1.1 m)
32.8 ft. (10 m)	4.6 ft. (1.4 m)
49.2 ft. (15 m)	6.9 ft. (2.1 m)

3.2.6 Nozzle requirements

See [Table 3-3](#) for recommended nozzle dimensions. The inside of the nozzle must be smooth (i.e. avoid bad welding, rust, or deposit).

Figure 3-5: Mounting in Nozzles

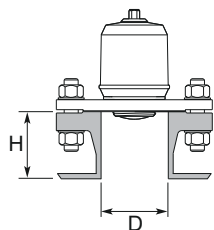


Table 3-3: Nozzle Requirements

Nozzle diameter (D)	Maximum nozzle height (H)
1.5 in. (40 mm)	5.9 in. (150 mm)
2 in. (50 mm)	7.9 in. (200 mm)
3 in. (80 mm)	11.8 in. (300 mm)
4 in. (100 mm)	15.8 in. (400 mm)
6 in. (150 mm)	23.6 in. (600 mm)


3.3 Bracket mounting

3.3.1 Mount the standard bracket


Procedure

1. Mount the bracket on the pipe/ceiling/wall.


On pipe:

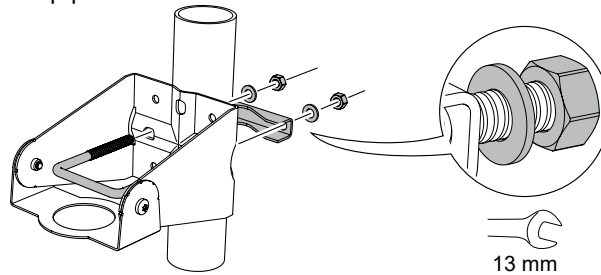


or

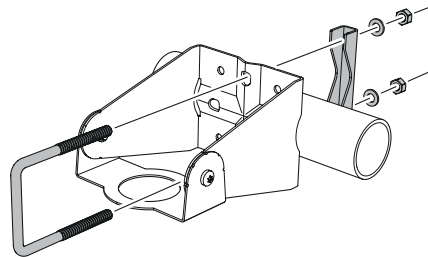

On ceiling/wall:

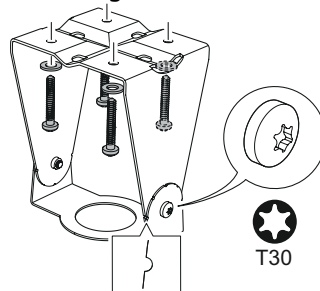


2. Ensure the adjustable holder is directed toward the ground.

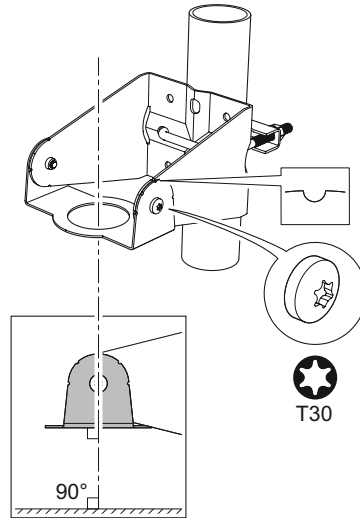

3. Install and hand tighten the transmitter.

Note

Each transmitter is shipped with a counter nut (also available as accessory).

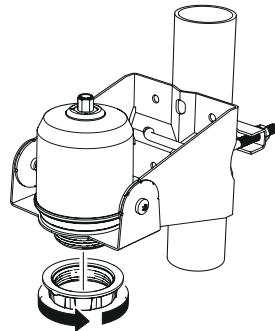

Related information


[Bracket hole pattern](#)

3.3.2 Mount the extendable bracket


Procedure

1. Mount the bracket on the pipe/wall.


On pipe:

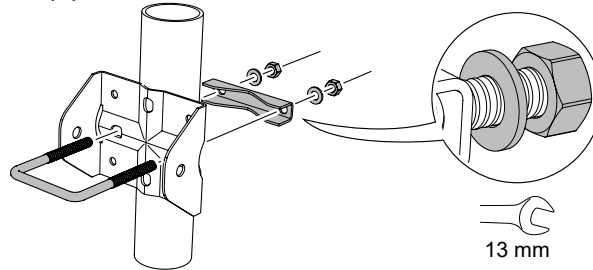


or

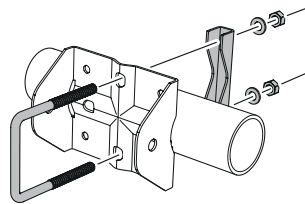

On wall:

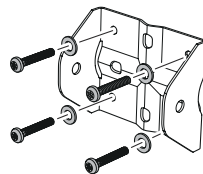


2. Mount the extendable arm.
Do not fully tighten the screws at this stage.

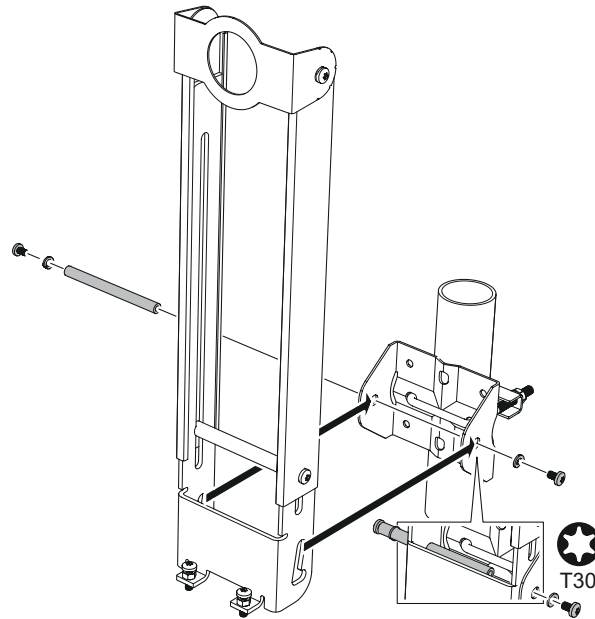


3. Install and hand tighten the transmitter

Note


Each transmitter is shipped with a counter nut (also available as accessory).

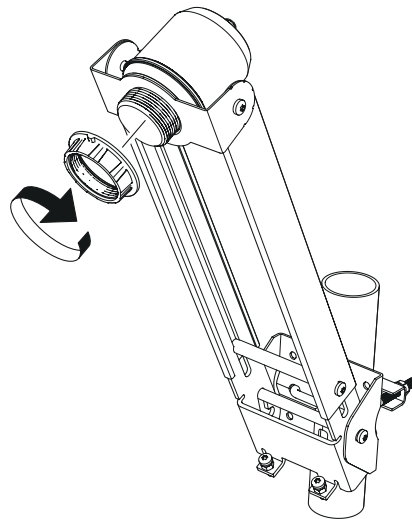


4. Connect the M12 cable.

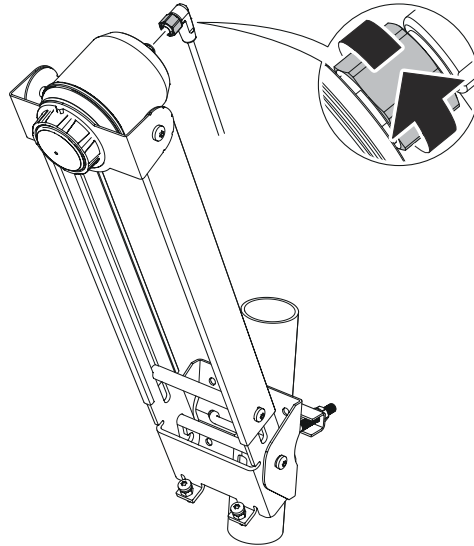


5. Ensure the adjustable holder is properly aligned.

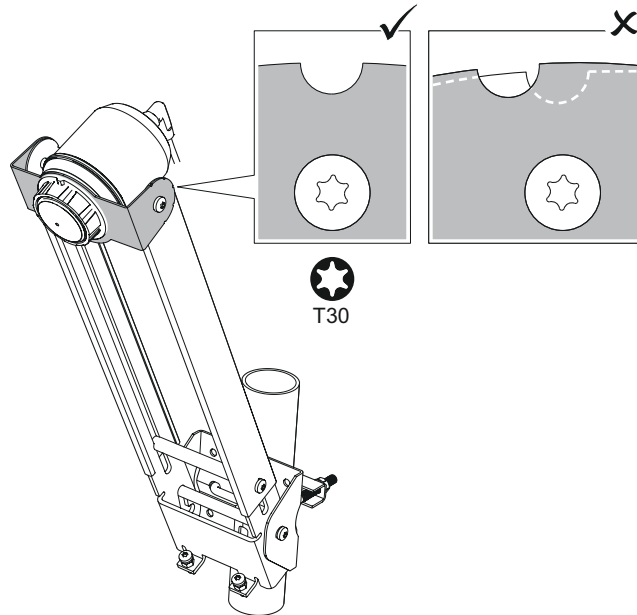


6. Fold down the arm to a horizontal position.

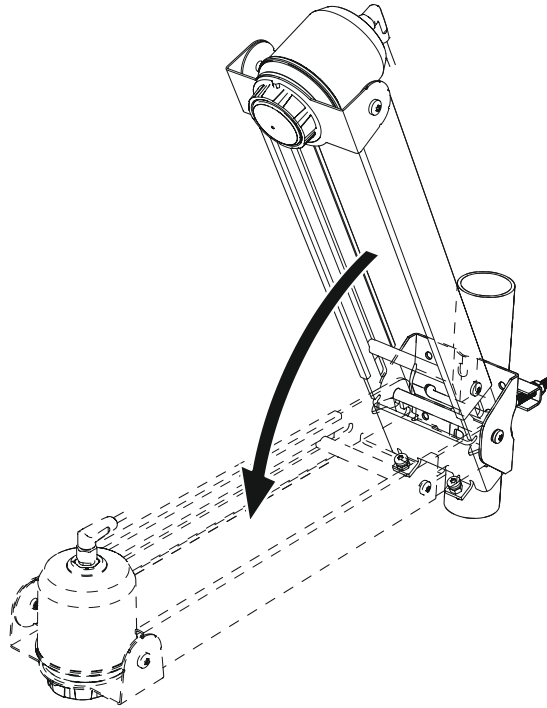


7. Adjust the length of the arm as necessary. Then tighten the two screws.

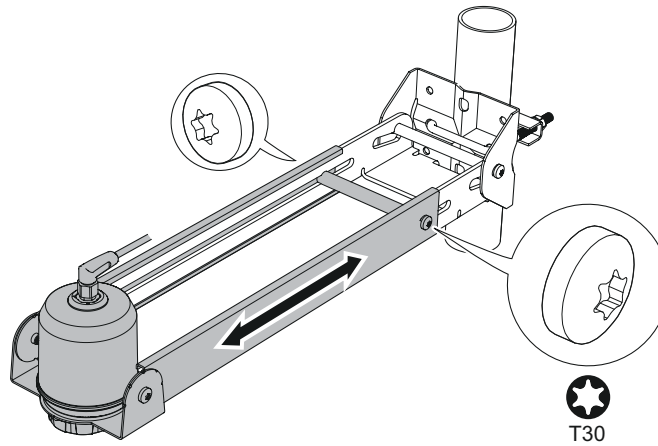


8. Check that the bracket installation is level.

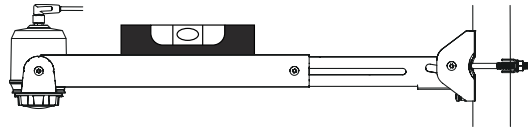

To raise or lower the arm, adjust the two level screws. Then tighten the two nuts.

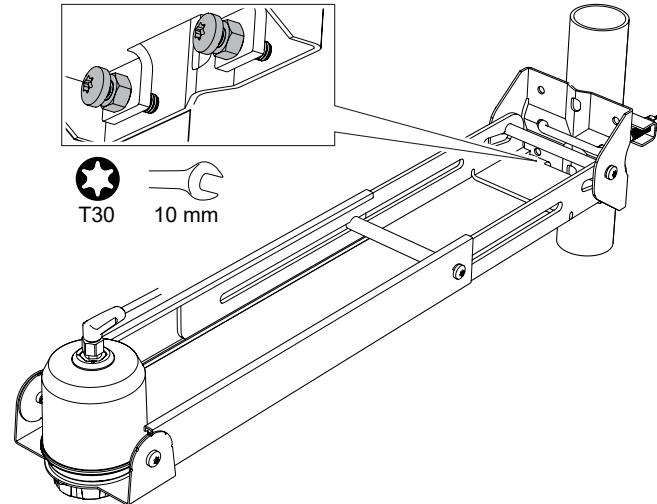

9. Tighten the two screws.

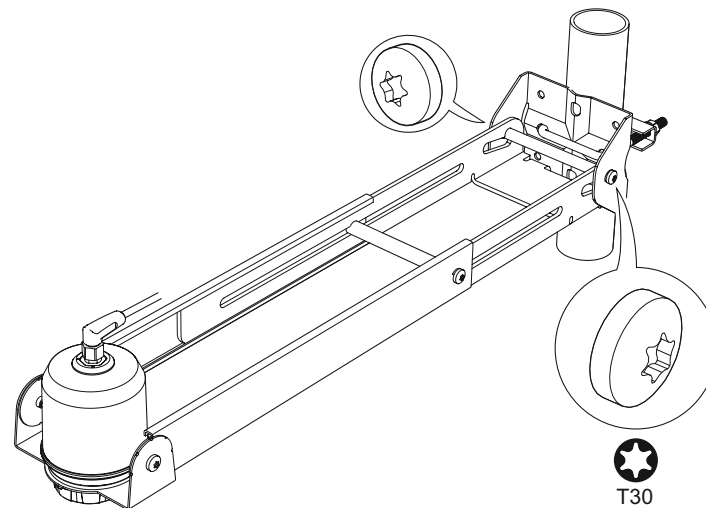

Related information


[Bracket hole pattern](#)

3.4 Installing on a tank


3.4.1 Mount the flange

Procedure


1. Place a suitable gasket on the tank flange.

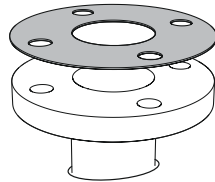

2. Place the flange over the gasket.

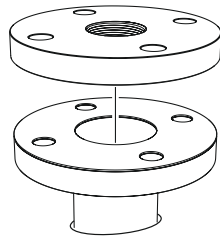


3. Tighten the bolts and nuts with sufficient torque for the flange and gasket choice.

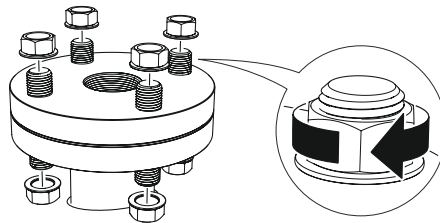

4. Apply appropriate thread sealant to the transmitter threads.

Note


Only for NPT threaded tank connection.

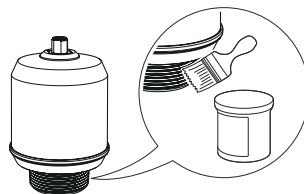

5. Install and hand tighten the transmitter.

Note


The gasket is necessary for the G threaded version only.

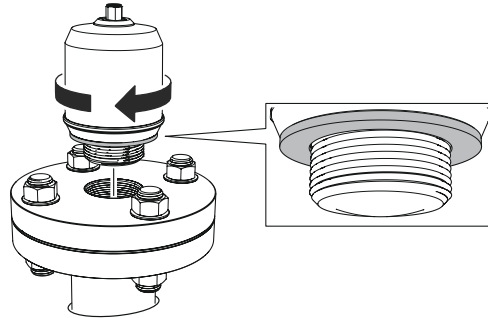


3.4.2 Mount the NPT threaded adapter

Procedure


1. Apply appropriate thread sealant to the outer threads.

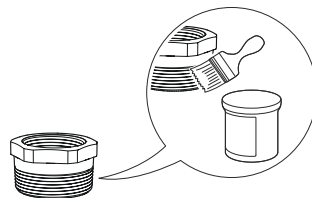


2. Mount the threaded adapter on the tank.

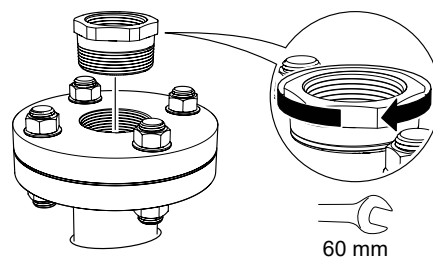

3. Apply appropriate thread sealant to the transmitter threads.

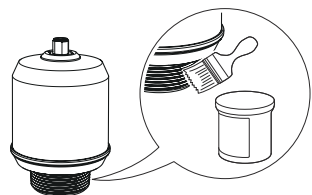

4. Install and hand tighten the transmitter.

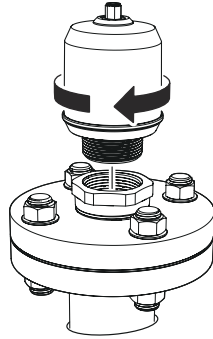

4 Electrical installation

4.1 Safety messages

Instructions and procedures in this section may require special precautions to ensure the safety of the personnel performing the operations. Information that potentially raises safety issues is indicated by a warning symbol () . Refer to the following safety messages before performing an operation preceded by this symbol.

WARNING

Failure to follow safe installation and servicing guidelines could result in death or serious injury.

Ensure the transmitter is installed by qualified personnel and in accordance with applicable code of practice.

Inspection and maintenance of this equipment shall be carried out by suitably trained personnel, in accordance with the applicable standards and code of practice.

Use the equipment only as specified in this manual. Failure to do so may impair the protection provided by the equipment.

For installations in hazardous locations, the transmitter must be installed according to the Rosemount 1208C [Product Certifications](#) document.

Repair, e.g. substitution of components, etc. may jeopardize safety and is under no circumstances allowed.

WARNING

Explosions could result in death or serious injury.

To prevent ignition of flammable or combustible atmospheres, disconnect power before servicing.

Before connecting a handheld communicator in an explosive atmosphere, ensure that the instruments are installed in accordance with intrinsically safe or non-incendive field wiring practices.

WARNING

Process leaks could result in death or serious injury.

Handle the transmitter carefully.

Install and tighten process connectors before applying pressure.

Do not attempt to loosen or remove process connectors while the transmitter is in service.

4.2 Hazardous areas

When the transmitter is installed in hazardous areas, local regulations, and specifications in applicable certificates must be observed.

Related information

[Product certifications](#)

4.3 Prepare the electrical connections

4.3.1 Connector type

M12 male (A-coded)

4.3.2 Cable selection

Use 24-18 AWG wire (0.20-0.75 mm²). Twisted pairs and shielded wiring are recommended for environments with high EMI (electromagnetic interference).

Field wiring shall be rated for 88 °C.

4.3.3 Internal power consumption

< 0.8 W in normal operation

4.3.4 Cable shield grounding

Make sure the instrument cable shield is:

- Continuously connected throughout the segment.
- Connected to a good earth ground at the power supply end.

4.3.5 Power supply


The transmitter operates on 14-35 Vdc at the transmitter terminals.

4.3.6 Load limitations

For HART® communication, a minimum loop resistance of 250 Ω is required. Maximum loop resistance (R) is determined by the voltage level of the external power supply (U_E):

$$R = 44.4 \times (U_E - 14)$$

Figure 4-1: Load Limits

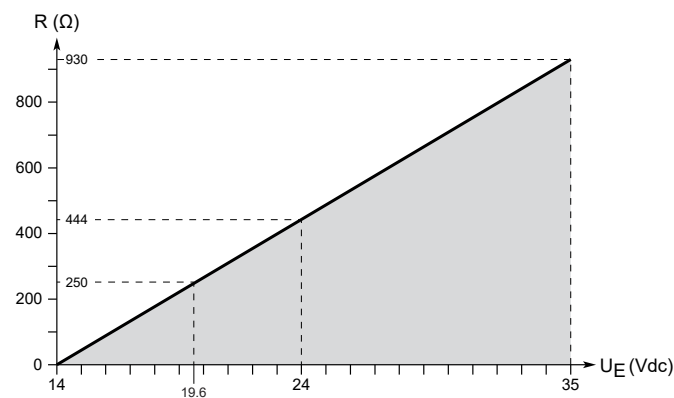

4.3.7 Wiring diagram

Figure 4-2: Connection

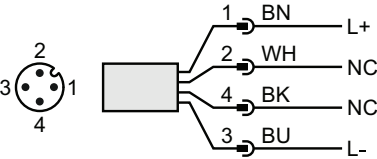


Table 4-1: Pin Assignment

Pin	Wire color ⁽¹⁾		Signal	
1	BN	Brown	L+	24 V
2	WH	White	NC	Not connected
3	BU	Blue	L-	0 V
4	BK	Black	NC	Not connected

⁽¹⁾ According to IEC 60947-5-2.

4.4 Power up transmitter

Prerequisites

⚠ WARNING

Explosion hazard


Do not connect or disconnect when energized.

Procedure


1. ⚠ Verify the power supply is disconnected.
2. Insert the M12 connector gently.

Note

Do not force the connector into place. Check that it is aligned properly.

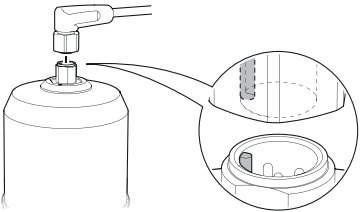


3. Once fully inserted, turn the screw ring until tight.
See the manufacturer's instruction manual for recommended torque.

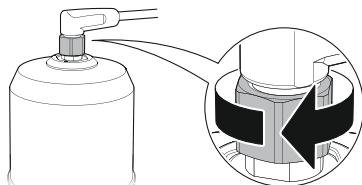


4. When installing in hazardous locations, secure the connector with a suitable safety clip that requires a tool for removal.

Note

When ordering a Rosemount 1208C with a hazardous locations cable, a safety clip is included (also available as accessory).

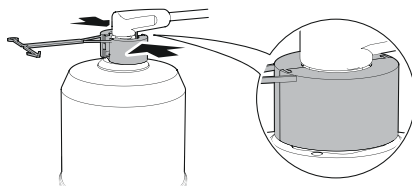

5. Fasten the safety clip to the cable.

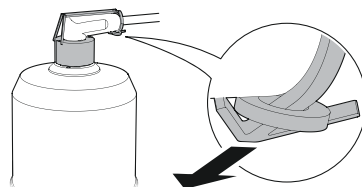

6. Connect the power supply.

Related information

[Ingress protection](#)

4.5 Optional devices

4.5.1 Rosemount 3490 Controller

Refer to the Rosemount 3490 [Reference Manual](#) for instructions on how to connect to the controller.

5 Configuration

5.1 Safety messages

Instructions and procedures in this section may require special precautions to ensure the safety of the personnel performing the operations. Information that potentially raises safety issues is indicated by a warning symbol () . Refer to the following safety messages before performing an operation preceded by this symbol.

WARNING

Failure to follow safe installation and servicing guidelines could result in death or serious injury.

Ensure the transmitter is installed by qualified personnel and in accordance with applicable code of practice.

Inspection and maintenance of this equipment shall be carried out by suitably trained personnel, in accordance with the applicable standards and code of practice.

Use the equipment only as specified in this manual. Failure to do so may impair the protection provided by the equipment.

For installations in hazardous locations, the transmitter must be installed according to the Rosemount 1208C [Product Certifications](#) document.

Repair, e.g. substitution of components, etc. may jeopardize safety and is under no circumstances allowed.

WARNING

Explosions could result in death or serious injury.

To prevent ignition of flammable or combustible atmospheres, disconnect power before servicing.

Before connecting a handheld communicator in an explosive atmosphere, ensure that the instruments are installed in accordance with intrinsically safe or non-incendive field wiring practices.

WARNING

Process leaks could result in death or serious injury.

Handle the transmitter carefully.

Install and tighten process connectors before applying pressure.

Do not attempt to loosen or remove process connectors while the transmitter is in service.

5.2 Overview

This chapter provides information about configuration and configuration tools. Appendix [Configuration parameters](#) provides extended information about the configuration parameters.

5.3 Configuration tools

- Field Device Integration (FDI) compliant systems
- Device Descriptor (DD) compliant systems
- Device Type Manager (DTM™) compliant systems
- Emerson's configuration tools with Bluetooth® wireless technology capabilities

5.4 Confirm correct device driver

Prerequisites

This only applies to the desktop version.

Procedure

1. Verify that the correct FDI/DD/DTM Package is loaded on your systems to ensure proper communication.
2. Download the latest FDI/DD/DTM Package from the **Device Driver Hub** page at Emerson.com/MySoftware.

5.5 AMS Device Configurator

5.5.1 Download AMS Device Configurator

Procedure

Download and install the mobile or desktop version.



Note

The mobile version requires Bluetooth® connection.

Related information

Emerson.com/AMSDeviceConfigurator

5.5.2 Add the FDI Package to AMS Device Configurator

Procedure

1. Start AMS Device Configurator.
2. At the top left, click the menu icon and select **Add Device Package**.



3. Browse to the downloaded FDI Package and select **Open**.
4. Select **Add**.
5. Select **Back**.



5.6 Configure transmitter using guided setup

The options available in the Guided Setup wizard include all items required for basic operation.

Procedure

1. Select **Configure** → **Guided Setup** → **Initial Setup**.
2. Select **Basic Setup** and follow the on-screen instructions.
3. Select **Verify Level** to check your level measurement.

5.7 Wireless configuration via Bluetooth® technology

5.7.1 Configure via Bluetooth® wireless technology

Prerequisites

Bluetooth connectivity is available for devices with option code BLE.

Procedure

1. Start AMS Device Configurator.
The **Communication Type** dialog opens on the desktop version.
2. If using the desktop version, select **Bluetooth** as the communication type.
This can also be changed from the **Settings** menu.
3. Click on the device you want to connect to.
4. On first connection, enter the key for this device.
5. If using the mobile version, select the menu icon at the top left to navigate the desired device menu.


Bluetooth® UID and key

You can find the UID and key on the paper tag attached to the device.

Note

Keep the paper tag in a safe place as it cannot be retrieved if lost.

Figure 5-1: Bluetooth Security Information

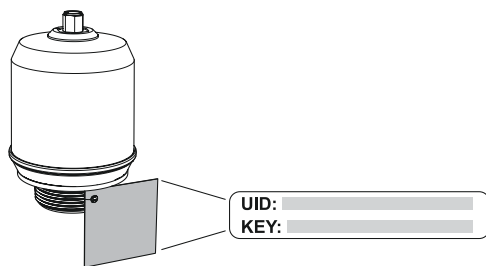

5.7.2 Turn off Bluetooth® wireless technology

The Bluetooth functionality is enabled by default. If you are not using this wireless capability, it is recommended to disable it using a standard device configuration tool.

Procedure

1. Select **Service Tools** → **Communication**.
2. In the **Bluetooth Radio** list, select **Disable**.

5.8 Multidrop communication

Multidropping transmitters refers to the connection of several transmitters to a single communications transmission line. Communication between the host and the transmitters takes place digitally with the analog output of the transmitters deactivated.

5.8.1 Establish multidrop communication

In multidrop communication, each transmitter in the loop must have a unique HART address.

Procedure

1. Select **Configure** → **Manual Setup** → **Device Setup** → **HART**.
2. Select **Change Address**, and then type the HART address you want to use.
3. Ensure the **Multidrop** check box is selected.

5.9 Write protect a transmitter

The transmitter can be write protected to prevent unauthorized changes.

Procedure


1. Select **Overview** → **Device Information** → **Alarm and Security**.
2. Under **Security**, select **Change Write Protection** and follow the on-screen instructions.

5.10 Advanced setup

5.10.1 Change the sweep mode

Contact your local Emerson representative for further instructions. You need to provide the manufacturing date and serial number.

Figure 5-2: Main Label

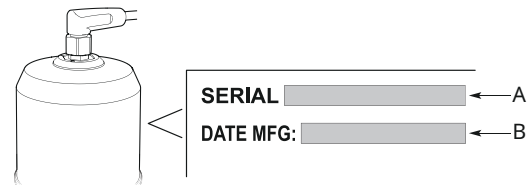

- A. Serial number
- B. Manufacturing date

Related information

[Sweep mode](#)

6 Operation and maintenance

6.1 Safety messages

Instructions and procedures in this section may require special precautions to ensure the safety of the personnel performing the operations. Information that potentially raises safety issues is indicated by a warning symbol () . Refer to the following safety messages before performing an operation preceded by this symbol.

WARNING

Failure to follow safe installation and servicing guidelines could result in death or serious injury.

Ensure the transmitter is installed by qualified personnel and in accordance with applicable code of practice.

Inspection and maintenance of this equipment shall be carried out by suitably trained personnel, in accordance with the applicable standards and code of practice.

Use the equipment only as specified in this manual. Failure to do so may impair the protection provided by the equipment.

For installations in hazardous locations, the transmitter must be installed according to the Rosemount 1208C [Product Certifications](#) document.

Repair, e.g. substitution of components, etc. may jeopardize safety and is under no circumstances allowed.

WARNING

Explosions could result in death or serious injury.

To prevent ignition of flammable or combustible atmospheres, disconnect power before servicing.

Before connecting a handheld communicator in an explosive atmosphere, ensure that the instruments are installed in accordance with intrinsically safe or non-incendive field wiring practices.

WARNING

Process leaks could result in death or serious injury.

Handle the transmitter carefully.

Install and tighten process connectors before applying pressure.


Do not attempt to loosen or remove process connectors while the transmitter is in service.

6.2 View measurement data

Procedure

1. Select **Overview**.

Figure 6-1: Overview Screen in AMS Device Configurator

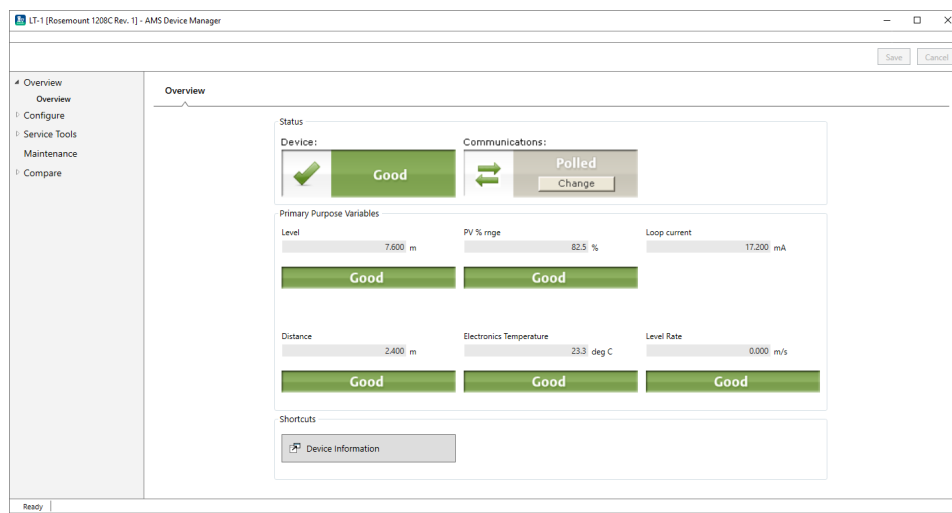

2. Optional: Select **Service Tools** → **Variables**.

6.2.1 Interpret measurement status

A “Good” or “Bad” status next to a value is an indication of the reliability or integrity of the data being received, not an indication of whether or not the value is within the configured upper or lower ranges. A value that triggers an alert, such as a high or low temperature indication, will change the overall status of the device, but the measurement might still be indicated as “Good” if the reliability of the data is good.

6.3 Check device status

The device reports diagnostic alerts when there is a device malfunction.

Procedure

1. Go to the **Overview** screen to view the overall device status.
2. If status is anything other than Good, select the button in the device status image to open a window with active alerts.
Active alerts can also be obtained via **Service Tools** → **Alerts**.

Related information

[Diagnostic messages per NAMUR NE 107](#)

6.3.1 Device status images

Table 6-1: Device Status Images in DD

Device status image	Category	Description	Action
Device: 	Good	No active alert.	N/A
Device: 	Failure	At least one Failure alert is active.	Click the Troubleshoot button to open a window with active alerts together with recommended actions.
Device: 	Function Check	At least one Function Check alert is active (and no Failure alerts).	Click the Investigate button to open a window with active alerts together with recommended actions.
Device: 	Out of Specification	At least one Out of Specification alert is active (and no Failure or Function Check alerts).	
Device: 	Maintenance Required	At least one Maintenance Required alert is active (and no Failure, Function Check, or Out of Specification alerts).	

7 Service and troubleshooting

7.1 Safety messages

Instructions and procedures in this section may require special precautions to ensure the safety of the personnel performing the operations. Information that potentially raises safety issues is indicated by a warning symbol () . Refer to the following safety messages before performing an operation preceded by this symbol.

WARNING

Failure to follow safe installation and servicing guidelines could result in death or serious injury.

Ensure the transmitter is installed by qualified personnel and in accordance with applicable code of practice.

Inspection and maintenance of this equipment shall be carried out by suitably trained personnel, in accordance with the applicable standards and code of practice.

Use the equipment only as specified in this manual. Failure to do so may impair the protection provided by the equipment.

For installations in hazardous locations, the transmitter must be installed according to the Rosemount 1208C [Product Certifications](#) document.

Repair, e.g. substitution of components, etc. may jeopardize safety and is under no circumstances allowed.

WARNING

Explosions could result in death or serious injury.

To prevent ignition of flammable or combustible atmospheres, disconnect power before servicing.

Before connecting a handheld communicator in an explosive atmosphere, ensure that the instruments are installed in accordance with intrinsically safe or non-incendive field wiring practices.

WARNING

Process leaks could result in death or serious injury.

Handle the transmitter carefully.

Install and tighten process connectors before applying pressure.

Do not attempt to loosen or remove process connectors while the transmitter is in service.

7.2 Diagnostic messages per NAMUR NE 107

7.2.1 Electronics failure, transmitter

Category Failure

Cause

An electronics error has occurred.

The device measurement reading is invalid.

Recommended actions

1. Restart the device.
2. If the condition persists, replace the device.

Related information

[Restart the device](#)

7.2.2 Electronics failure, sensor module

Category Failure

Cause

An electronics error has occurred.

The device measurement reading is invalid.

Recommended actions

1. Restart the device.
2. If the condition persists, replace the device.

Related information

[Restart the device](#)

7.2.3 Device memory failure

Category Failure

Cause

A device memory error has occurred.

The device measurement reading is invalid.

Recommended actions

1. Restore default settings, restart device, and reconfigure the device.
2. If the condition persists, replace the device.

Related information

[Restore to default settings](#)

[Restart the device](#)

[Configure transmitter using guided setup](#)

7.2.4 Radar signal failure

Category Failure

Cause

The received radar signal is invalid resulting in an invalid device measurement reading.

Recommended actions

1. Clean the antenna.
2. If the condition persists, replace the device.

7.2.5 Startup failure

Category Failure

Cause

Device repeatedly failed to start up with user configuration settings.

The device measurement reading is invalid.

Recommended actions

1. Check supply voltage is within range and restart device.
2. Restore default settings, restart device, and reconfigure the device.
3. If the condition persists, replace the device.

Related information

[Power supply](#)

[Restore to default settings](#)

[Restart the device](#)

[Configure transmitter using guided setup](#)

7.2.6 Software error

Category Failure

Cause

The software in the device encountered a problem and stopped running which may cause an invalid measurement reading.

In some cases, problems may be caused by temporary environmental conditions (e.g. electromagnetic interferences) and not observed again.

Recommended actions

1. Restart the device.
2. Restore default settings and reconfigure the device.
3. If the condition persists, replace the device.

Related information

[Restart the device](#)

[Restore to default settings](#)

[Configure transmitter using guided setup](#)

7.2.7 Level measurement lost

Category Failure

Cause

No valid level reading. Reasons may be multiple:

- No valid surface echo peak in the measuring range.
- Incorrect device configuration.

Recommended actions

1. Analyze the Echo Peaks for reason and check device configuration, especially thresholds.
2. Check device physical installation (for instance antenna contamination).
3. Consider increasing Measurement Recovery Time parameter for intermittent conditions.
4. Restart the device.
5. Restore default settings and reconfigure the device.
6. If the condition persists, replace the device.

Related information

[Analyze the echo peaks](#)

[General threshold](#)

[Measurement recovery time](#)

[Restart the device](#)

[Restore to default settings](#)

[Configure transmitter using guided setup](#)

7.2.8 Configuration error

Category Failure

Cause

The device has detected a configuration error. Reasons may be multiple.

Recommended actions

1. Click the **Details** button for more information.
2. Correct the parameter causing the error.

Volume configuration error

Cause

The volume cannot be calculated correctly with the current configuration.

Recommended actions

1. Check that the value pairs in the volume strapping table are entered in increasing order.
2. Check that the number of strapping points to use is correct.
3. If condition persists, restore default settings and reconfigure device.

Related information

[Strapping table](#)

[Restore to default settings](#)

[Configure transmitter using guided setup](#)

Volume flow configuration error

Cause

The Volume Flow cannot be calculated correctly with the current configuration.

Recommended actions

1. Check that the value pairs in the volume flow linearization table are entered in increasing order.
2. Check that the number of table points to use is correct.
3. If condition persists, restore default settings and reconfigure device.

Related information

[Volume flow table](#)

[Restore to default settings](#)

[Configure transmitter using guided setup](#)

Geometry configuration error

Cause

The configured tank geometry results in a too large level measuring range for this device.

Recommended actions

1. Check tank geometry configuration and reduce Reference Height.
2. If condition persists, restore default settings and reconfigure the device.

Related information

[Reference height](#)

[Restore to default settings](#)

[Configure transmitter using guided setup](#)

Primary variable configuration error

Cause

The Primary Variable selection is not supported.

Recommended actions

Change Primary Variable to variable supported by device.

Related information

[Primary variable](#)

Measurement correction configuration error

Cause

The factory measurement correction data is invalid.

Recommended actions

1. Restore default settings and reconfigure the device.
2. If the condition persists, replace the device.

Related information

[Restore to default settings](#)

[Configure transmitter using guided setup](#)

Threshold configuration error

Cause

The surface threshold configuration is incorrect.

Recommended actions in DD

1. In the threshold table, check that distance-threshold values are entered in increasing order.
2. Check that the number of threshold points to use is correct.
3. If condition persists, restore default settings and reconfigure the device.

Related information

[General threshold](#)

[Restore to default settings](#)

[Configure transmitter using guided setup](#)

Factory approval error

Cause

- The Sensor Module factory approval is missing.
- The Transmitter factory approval is missing.

Note

This error may also be set as a result of the startup failure. If both errors are present, then see the startup failure message.

Recommended actions

1. Restart the device.
2. Restore default settings and reconfigure device.
3. If the condition persists, replace the device.

Related information

[Restart the device](#)

[Restore to default settings](#)

[Configure transmitter using guided setup](#)

Factory calibration error

Cause

The factory calibration in the device is missing.

Note

This error may also be set as a result of the startup failure. If both errors are present, then see the startup failure message.

Recommended actions

Replace the device.

Analog out span configuration error

Cause

The span for the configured analog out range is too small.

Recommended actions

Increase analog out span by adjusting Upper or Lower Range Value.

Related information

[Upper/lower range value](#)

Analog out calibration error

Cause

Analog output calibration failed.

Recommended actions

1. Try calibrating the analog output again.
2. If the condition persists, replace the device.

Related information

[Calibrate analog out](#)

Engineering unit configuration error

Cause

One of the configured engineering units is not supported by the device.

Recommended actions

1. Check unit configuration.
2. If condition persists, restore default settings and reconfigure device.

Related information

[Units](#)

[Restore to default settings](#)

[Configure transmitter using guided setup](#)

7.2.9

Simulation/test active

Category Function Check

Cause

The device is in simulation or test mode and is not reporting actual information.

Recommended actions

1. If this behavior is not desired, stop simulation or test mode.
2. If the condition persists, restart the device.

Related information

[Use the simulation mode](#)

[Restart the device](#)

7.2.10 Electronics temperature out of limits

Category Out of Specification

Cause

The temperature of the electronics board has exceeded the transmitter's operating range.

Recommended actions

1. Verify ambient temperature is within the operating range.
2. Remote mount the transmitter away from the process and environmental conditions.

Related information

[Ambient temperature](#)

7.2.11 Supply voltage low

Category Maintenance Required

Cause

The supply voltage is low and may affect device operation.

Recommended actions

Check supply voltage is within range.

Related information

[Power supply](#)

7.2.12 Linearized variable out of range

Category Maintenance Required

Cause

The level measurement is outside the configured range for volume or volume flow, or both.

Accuracy of volume/volume flow measurement may be degraded.

Recommended actions

1. If volume strapping table is used, make sure level values within operating range are included.
2. If volume flow linearization table is used, make sure input variable values within operating range are included.

Related information

[Strapping table](#)

[Volume flow table](#)

7.2.13 Bluetooth® alert

Category Maintenance Required

Cause

A Bluetooth communication error has been detected.

The field device will continue to function independent of this Bluetooth communication alert.

Recommended actions

1. Click the **Details** button for more information.
2. Follow the instructions to correct the Bluetooth communication error.

Bluetooth® functionality limited

Cause

Device is unable to send device data over Bluetooth communication due to an internal error.

The field device will continue to function independent of this Bluetooth communication alert.

Recommended actions

1. Restart the device.
2. If the condition persists, replace the device.

Related information

[Restart the device](#)

Bluetooth® electronics error

Cause

Device internal diagnostics detected a Bluetooth electronics error.

This error will likely result in reduced or no Bluetooth communication capability; the field device will continue to function independent of this Bluetooth communication alert.

Recommended actions

1. Restart the device.
2. If the condition persists, replace the device.

Related information

[Restart the device](#)

Bluetooth® firmware out of date

Cause

This incompatibility will result in no Bluetooth communications; the field device will continue to function independent of this Bluetooth communication alert.

Recommended actions

Update the Bluetooth firmware.


7.3 Troubleshooting guides

If there is a malfunction despite the absence of alerts, follow the procedures described in the appropriate troubleshooting guide. Under each of the symptoms, specific suggestions for solving problems are offered.

7.3.1 Troubleshooting incorrect level readings

Reported level is too high or low

Figure 7-1: Symptom

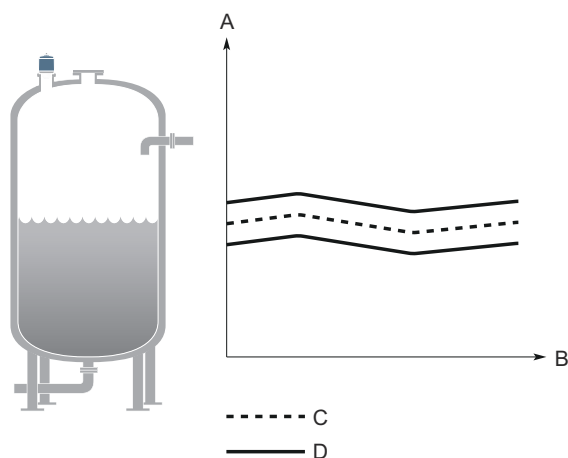

- A. Level
- B. Time
- C. Actual level
- D. Reported level

Possible cause

Incorrect tank geometry configuration.

Recommended actions

- Verify the tank geometry parameters are configured correctly (especially the Reference Height).
- Analyze the Echo Peaks and check General Threshold.
- Restore default settings and reconfigure the device.

Related information

[Reference height](#)


[Analyze the echo peaks](#)

[Adjust the general threshold](#)

[Restore to default settings](#)

Level is stuck in measuring range

Figure 7-2: Symptom

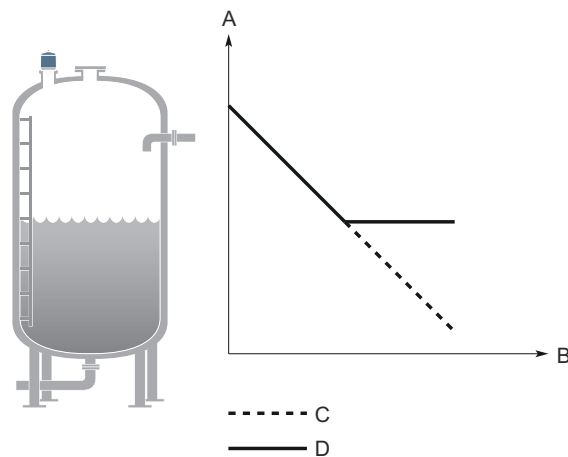

- A. Level
 - B. Time
 - C. Actual level
 - D. Reported level
-

Possible cause

Disturbing object in the tank.

Recommended actions

- Analyze the Echo Peaks and check General Threshold.
- Remove the disturbing object.
- Put an inclined metal plate on top of the disturbing object.
- Move the device to another position.

Related information


[Analyze the echo peaks](#)

[Adjust the general threshold](#)

[Mounting position](#)

Level is stuck in full tank

Figure 7-3: Symptom

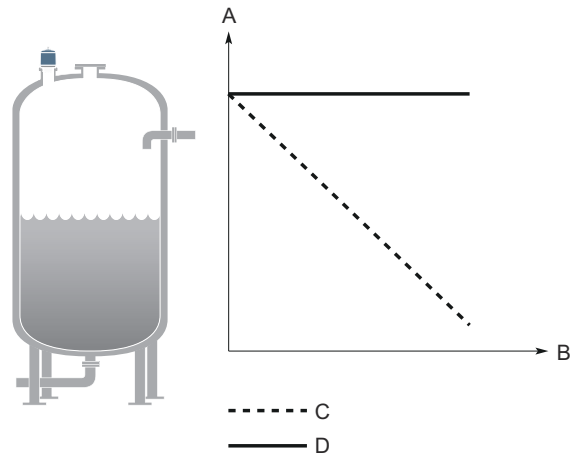

- A. Level
- B. Time
- C. Actual level
- D. Reported level

Possible cause

Disturbing object near the antenna.

Recommended actions

- Analyze the Echo Peaks and check General Threshold.
- Increase the Upper Null Zone.
- Remove the disturbing object.
- Move the device to another position.

Possible cause

Product build-up on the antenna.

Recommended actions

- Clean the antenna.

Related information


[Analyze the echo peaks](#)
[Adjust the general threshold](#)
[Change the upper null zone](#)
[Mounting position](#)

Level value drops when close to antenna

Symptom

Level value drops to a lower value when product surface is close to antenna.

Figure 7-4: Symptom

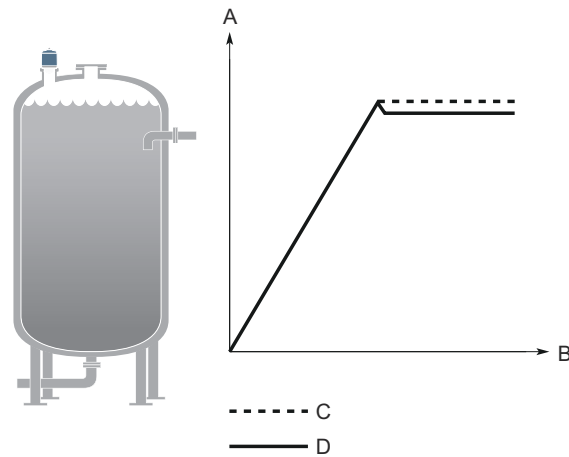

- A. Level
- B. Time
- C. Actual level
- D. Reported level

Possible cause

Product surface is within the Upper Null Zone and a disturbance echo is interpreted as the product surface.

Recommended actions


- Check the setting of the Upper Null Zone.

Related information

[Change the upper null zone](#)

Measured level fluctuates

Figure 7-5: Symptom

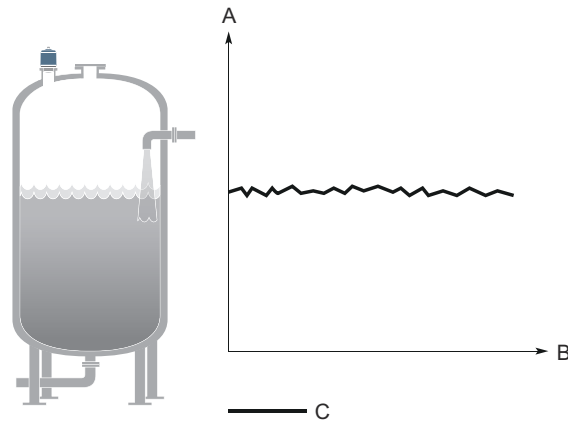

- A. Level
- B. Time
- C. Reported level

Possible cause

Excessive foaming or turbulence.

Recommended actions


- Under turbulent conditions with low level rates, consider increasing the Damping value.

Related information

[Damping value](#)

Measured level is occasionally unstable

Figure 7-6: Symptom

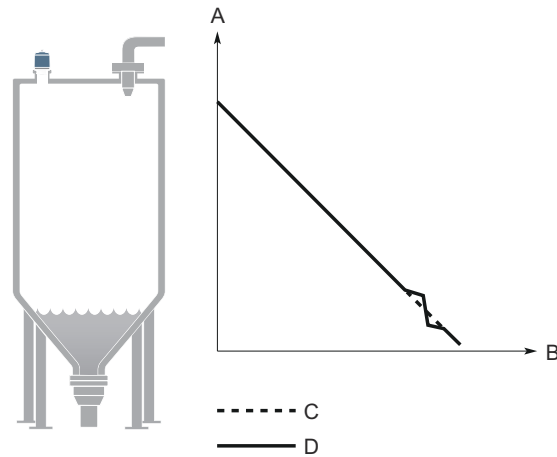

- A. Level
- B. Time
- C. Actual level
- D. Reported level

Possible cause

The product surface is close to a suppressed false echo.

Recommended actions

- If possible, remove the disturbing object.

Related information


[Analyze the echo peaks](#)

Lagging of measured level

Symptom

Measured level lags during rapid level changes.

Figure 7-7: Symptom

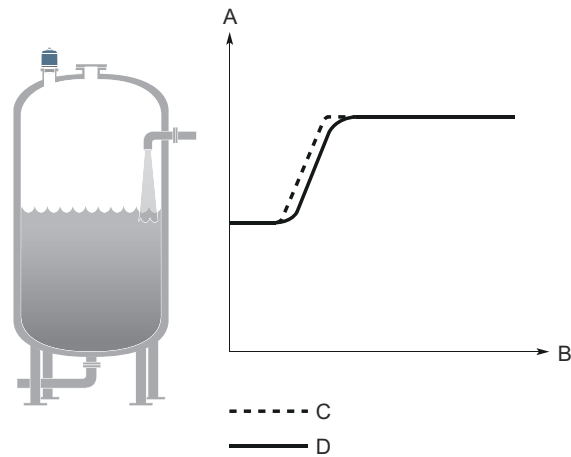

- A. Level
- B. Time
- C. Actual level
- D. Reported level

Possible cause

Damping value is set too high.

Recommended actions

- If there is a problem with lag during rapid level changes, consider decreasing the Damping value.

Related information


[Damping value](#)

Incorrect level at 100% (20 mA)

Symptom

Measured level is correct at 0% (4 mA) but incorrect at 100% (20 mA).

Figure 7-8: Symptom

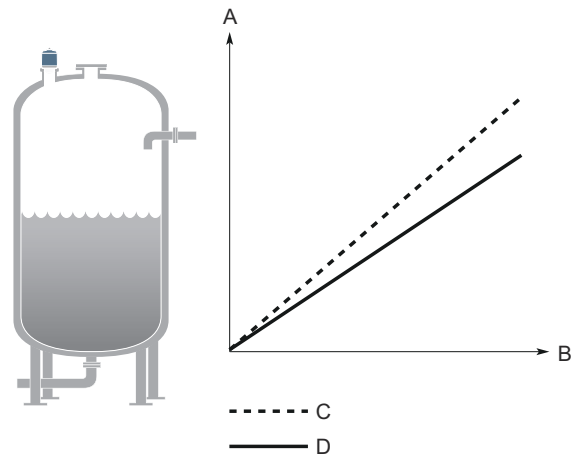

Possible cause

Upper Range Value is not set correctly.

Recommended actions

- Check that the Upper Range Value matches the 100% (20 mA) level in the tank.

Related information


[Upper/lower range value](#)

Incorrect level when product surface is above 50%

Symptom

The reported level is incorrect when the product surface is above the 50% level.

Figure 7-9: Symptom

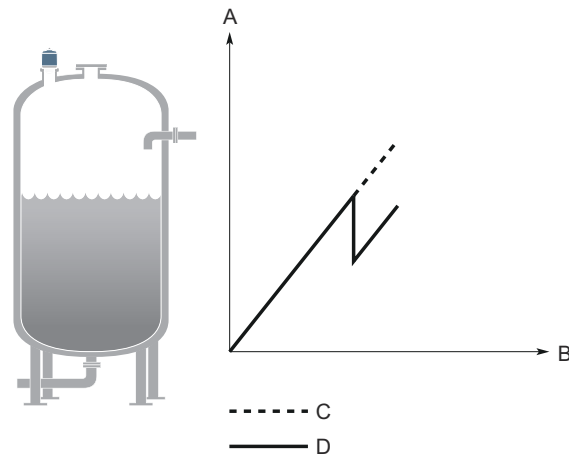

- A. Level
- B. Time
- C. Actual level
- D. Reported level

Possible cause

A strong double bounce echo is interpreted as the product surface.

Recommended actions

- Move the device to another position.

Related information


[Mounting position](#)

Dropping of level close to tank bottom

Symptom

Measured value drops to zero level in the tank bottom region.

Figure 7-10: Symptom

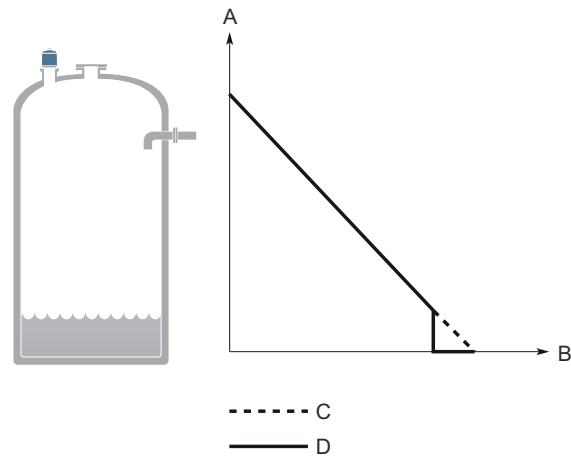

- A. Level
- B. Time
- C. Actual level
- D. Reported level

Possible cause

Device has locked on a strong tank bottom echo.

Recommended actions

- Verify the Reference Height is configured correctly.

Related information


[Reference height](#)

Level measurement lost in a manway cover installation

Symptom

The device reports "Level measurement lost" when opening/closing the manway cover.

Figure 7-11: Symptom

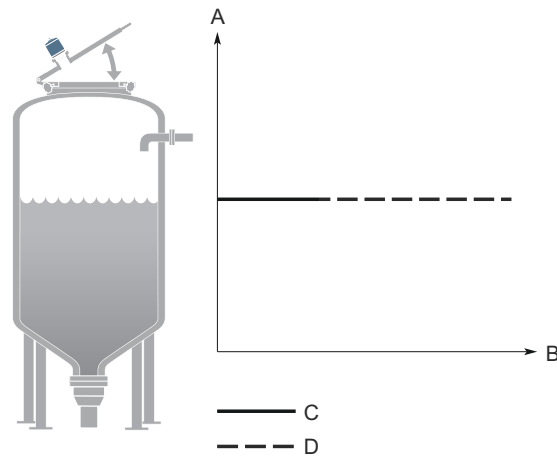

- A. Level
- B. Time
- C. Actual level
- D. Level measurement lost

Possible cause

If mounted on a manway cover, the device may lock on a disturbance echo and report this as surface level when the cover is opened. After closing the cover, the echo is lost and the device reports "Level measurement lost".

Recommended actions

- Before opening the manway cover, disconnect power to the device.
- After closing, restart the device.
- Move the device to another position.

Related information

[Restart the device](#)


[Mounting position](#)

Level measurement is lost in an empty tank

Symptom

The device reports "Level measurement lost" in an empty tank after closing the side manway door.

Figure 7-12: Symptom

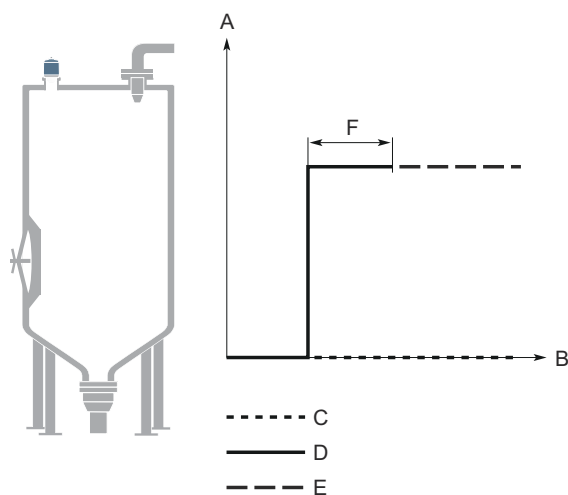

- A. Level
- B. Time
- C. Actual level
- D. Reported level
- E. Level measurement lost
- F. Manway door open

Possible cause

When the manway door is opened inward, it generates a disturbance echo which is interpreted as the product surface echo. After closing the door, the echo is lost and the device reports "Level measurement lost". The message is cleared when start filling the tank.

Recommended actions

- Before opening the manway door, disconnect power to the device.
- After closing, restart the device.
- Move the device to another position.

Related information

[Restart the device](#)


[Mounting position](#)

Alarm mode close to tank bottom

Symptom

When the product surface is near the sloped tank bottom, the device enters alarm mode.

Figure 7-13: Symptom

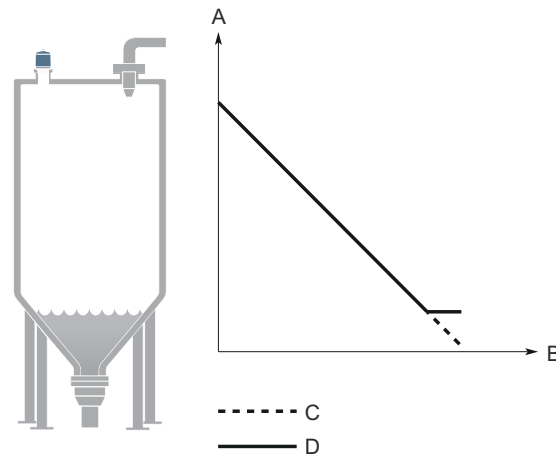

- A. Level
- B. Time
- C. Actual level
- D. Reported level

Possible cause

Reduction of projected surface area close to sloping tank bottom.

Recommended actions

- Verify the tank geometry parameters are configured correctly (especially the Reference Height and Bottom Offset).

Related information

[Reference height](#)

[Bottom offset](#)

7.3.2 Troubleshooting the 4-20 mA/HART output

Device milliamp reading is zero

Recommended actions

1. Verify power is applied to signal terminals.
2. Verify power supply voltage is adequate at signal terminals.

Related information

[Power supply](#)

Device milliamp reading is too low or high

Recommended actions

1. Verify level.
2. Check the settings of the 4-20 mA range values.
3. Verify output is not in alarm condition.
4. Check that power wires are connected to the correct signal terminals.
5. Perform Calibrate Analog Out.

Related information

[Upper/lower range value](#)

[Alarm mode](#)

[Calibrate analog out](#)

Milliamp reading is erratic

Recommended actions

1. Verify power supply voltage is adequate at signal terminals.
2. Check for external electrical interference.
3. Under turbulent conditions with low level rates, consider increasing the Damping value.

Related information

[Power supply](#)

[Damping value](#)

Device will not respond to changes in level

Recommended actions

- Verify level is between the 4 and 20 mA set points.
- Verify output is not in alarm condition.
- Verify device is not in loop test or simulation mode.

Related information

[Upper/lower range value](#)

[Alarm mode](#)

[Check device status](#)

There is no HART communication (lost device communication)

Recommended actions

1. Verify power supply voltage is adequate at signal terminals.
2. Check load resistance (250 ohms minimum).
3. Check if device is at an alternate HART address.
4. Check current analog output value to verify that device hardware works.

Related information

[Power supply](#)

[HART/polling address](#)

7.4 Managing disturbance echoes


There are two general methods for managing disturbance echoes:

- Set general threshold to filter out weak disturbance echoes and noise.
- Increase the Upper Null Zone to block out disturbance echoes at the top of the tank.

7.4.1 General threshold

The general threshold is used to filter out noise and disturbing echoes from the product surface echo. The transmitter uses certain criteria to decide which type of echo peak that is detected. Only echoes above the general threshold might be considered the product surface.

Figure 7-14: Threshold Principle

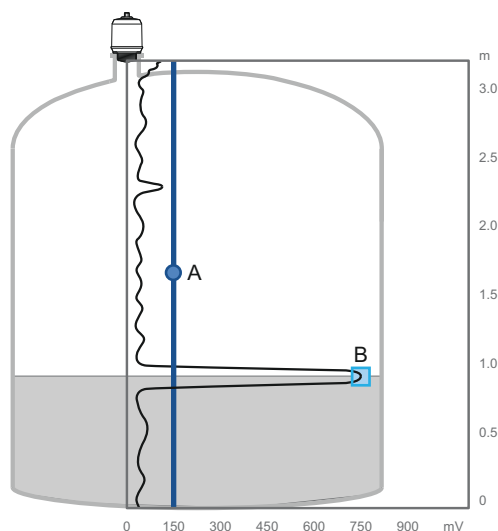

- A. General threshold
B. Product surface echo

Adjust the general threshold

If necessary, the general threshold value can be increased if a disturbance echo is interpreted as the product surface. Alternatively, a lower threshold may be required to handle weak surface echoes (e.g. due to excessive foaming or turbulence).

Prerequisites

The general threshold is set at factory for optimum performance and should not normally need an adjustment.

Before changing the factory default value, study the position and amplitude of the different echo peaks.

Procedure

1. Select **Service Tools** → **Echo Tuning** → **Thresholds**.
2. Select **Set General Threshold** and follow the on-screen instructions.
Alternatively, the threshold can be split into up to 10 segments.

Related information

[Analyze the echo peaks](#)

7.4.2 Change the upper null zone

The Upper Null Zone defines a zone close to the transmitter where echoes are ignored. This zone can be extended to block out disturbing echoes at the top of the tank.

Prerequisites

Note

Make sure the Upper Range Value (100%/20 mA) value is below the Upper Null Zone. Measurements are not performed within the Upper Null Zone.

Procedure

1. Identify desired Upper Null Zone by analyzing the echo peaks.
 - a) Select **Service Tools** → **Echo Tuning** → **Echo Peaks**.
 - b) View the echo peaks to find out if there are disturbing echoes close to tank top.
2. Set the desired Upper Null Zone value.
 - a) Select **Configure** → **Manual Setup** → **Level Setup** → **Advanced**.
 - b) Enter the desired Upper Null Zone value.

Related information

[Analyze the echo peaks](#)

[Upper null zone](#)

7.5 Service and troubleshooting tools

7.5.1 Analyze the echo peaks

Measurement problems can be understood by studying the position and amplitude of the different peaks.

Procedure

Select **Service Tools** → **Echo Tuning** → **Echo Peaks**.

Echo peaks

See [Table 7-1](#) for a list of possible echo peaks.

Table 7-1: Echo Peak Types

Type	Description
Surface	Echo tracked as the current surface echo
Unknown	Echo identified as unknown (can be a surface candidate)
Irrelevant	Echoes that are identified but suppressed by the device
Tank bottom echo	Echo considered as an echo from the tank bottom

7.5.2 Perform an analog loop test

During a loop test, the transmitter outputs a fixed value (4 mA, 20 mA, or user-selected value).

The loop test command verifies the output of the transmitter, the integrity of the loop, and the operations of any recorders or similar devices installed in the loop. A loop test can also be used to determine the need for an analog output calibration.

Procedure

1. Select **Service Tools** → **Simulate**.
2. Under **Analog Out**, select **Loop test**, and then follow the on-screen instructions.
3. Measure the loop current.

Postrequisites

Select **End** or **Cancel** to exit loop test.

Related information

[Calibrate analog out](#)
[Simulation/test active](#)

7.5.3 Calibrate analog out

Use this function to calibrate the analog output by comparing the actual output current with the nominal 4 mA and 20 mA currents. Calibration is done at factory and the analog output does not normally need to be recalibrated.

Procedure

1. Select **Service Tools** → **Maintenance** → **Routine Maintenance**.
2. Select **D/A trim** and follow the on-screen instructions.

7.5.4 Restart the device

To restart the device electronics:

Procedure

1. Select **Service Tools** → **Maintenance** → **Reset/Restore**.
2. Select **Restart Device** and follow the on-screen instructions.

7.5.5 Restore to default settings

This function restores the transmitter to default settings (user configuration is overwritten).

Procedure

1. Select **Service Tools** → **Maintenance** → **Reset/Restore**.
2. Select **Restore Default Settings** and follow the on-screen instructions.

7.5.6 Reset Bluetooth® security

Procedure

1. Select **Configure** → **Manual Setup** → **Device Setup** → **Security**.
2. Under **Bluetooth**, select **Reset Bluetooth Security** and follow the on-screen instructions.
3. To confirm the reset, reconnect the device to the mobile app using the default key.

7.5.7 Use the simulation mode

This function can be used to simulate measurements.

Procedure

1. Select **Service Tools** → **Simulate**.
2. Under **Simulate Measurement Values**, select **Simulate Level** and follow the on-screen instructions.

Related information

[Simulation/test active](#)

7.6 Service support

To expedite the return process, refer to [Emerson.com](https://www.emerson.com) and contact the nearest Emerson representative.

⚠ CAUTION

Individuals who handle products exposed to a hazardous substance can avoid injury if they are informed of and understand the hazard. Returned products must include a copy of the required Safety Data Sheet (SDS) for each substance.

Emerson representatives will explain the additional information and procedures necessary to return goods exposed to hazardous substances.

A Specifications and reference data

A.1 Performance specifications

A.1.1 General

Reference conditions

- Measurement target: Stationary metal plate, no disturbing objects
- Temperature: 59 to 77 °F (15 to 25 °C)
- Ambient pressure: 14 to 15 psi (960 to 1060 mbar)
- Relative humidity: 25-75%
- Damping: Default value, 2 s
- Frequency range: 77 to 81 GHz⁽¹⁾

Instrument accuracy (under reference conditions)

±0.08 in. (±2 mm)⁽²⁾

Repeatability

±0.04 in. (±1 mm)

Ambient temperature effect

±0.04 in. (±1 mm)/10 K

Sensor update rate

1 update per second

Maximum level rate

200 mm/s

A.1.2 Measuring range

Maximum measuring range

49 ft. (15 m)⁽³⁾

⁽¹⁾ Radar performance may be affected if it is configured for certain local radio spectrum regulations.


⁽²⁾ Refers to inaccuracy according to IEC 60770-1 when excluding installation dependent offset. See the IEC 60770-1 standard for a definition of radar specific performance parameters and if applicable corresponding test procedures.

⁽³⁾ The measuring range is limited to 33 ft. (10 m) for oil-based media (dielectric constant < 10). Also note that a combination of adverse process conditions, such as heavy turbulence, foam, and condensation, together with products with poor reflection may affect the measuring range.

Accuracy over measuring range

Figure A-1 illustrates the accuracy over measuring range at reference conditions.

Figure A-1: Accuracy Over Measuring Range

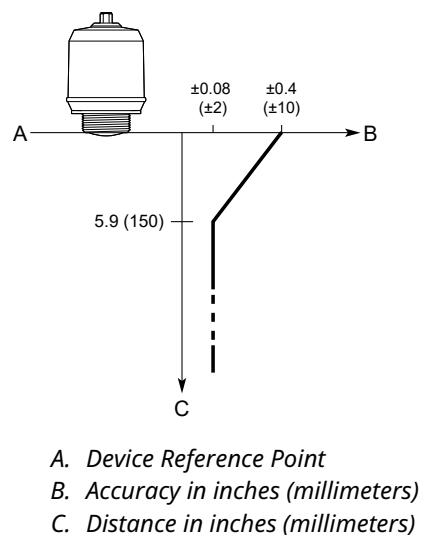

A.1.3

Environment

Vibration resistance

2 g at 10-1000 Hz according to IEC 61298-3, level "field with general application"

Electromagnetic compatibility (EMC)

- EMC Directive (2014/30/EU): EN 61326-1
- NAMUR recommendations NE21

Pressure Equipment Directive (PED)

Complies with 2014/68/EU article 4.3

Built-in lightning protection

EN 61326, IEC 61000-4-5, level 1kV

Radio approvals

- Radio Equipment Directive (2014/53/EU):
 - ETSI EN 302 372
 - ETSI EN 302 729
 - EN 62479
- Part 15 of the FCC Rules
- Industry Canada RSS 211
- Other country approvals

Related information

[Product certifications](#)

A.2 Functional specifications

A.2.1 General

Field of application

Continuous measurement of level and open channel flow.

Solids level measurement

The Rosemount 1208C is capable of measuring in many solids applications, including limestone and fly ash tanks.

Note

Sensitivity and performance in solids applications may vary on the reflectivity properties of the media. These properties include dielectric constant, consistency, humidity, grain size, and angle of repose.

Minimum dielectric constant

2

Measurement principle

Frequency Modulated Continuous Wave (FMCW)

Frequency range

77 to 81 GHz (76 to 77 GHz in applicable countries)

Note

Operating the device without selecting the relevant radio spectrum may constitute a violation of the regulations of the radio approvals of the respective country.

Maximum output power

3 dBm (2 mW)

Internal power consumption

< 0.8 W in normal operation

Humidity

0 - 100% relative humidity, non-condensing

Turn-on time

< 60 s⁽⁴⁾

⁽⁴⁾ Time from when power is applied to the transmitter until performance is within specifications.

A.2.2 4-20 mA HART®

Output

Two-wire, 4-20 mA. Digital process variable is superimposed on 4-20 mA signal, and available to any host that conforms to the HART® protocol. The digital HART signal can be used in multidrop mode.

HART universal revision

7

Analog signal on alarm

The transmitter automatically and continuously performs self-diagnostic routines. If a failure or a measurement error is detected, the analog signal will be driven offscale to alert the user. High or low failure mode is user-configurable.

Table A-1: Signal on Alarm

Standard	High	Low
Rosemount standard	≥ 21.75 mA	≤ 3.75 mA
NAMUR NE43	≥ 21.5 mA	≤ 3.6 mA

Analog saturation levels

The transmitter will continue to set a current that corresponds to the measurement until reaching the associated saturation limit (and then freeze).

Table A-2: Saturation Levels

Standard	High	Low
Rosemount standard	20.8 mA	3.9 mA
NAMUR NE43	20.5 mA	3.8 mA

A.2.3 Bluetooth® connectivity

Typical range

At least 50 ft. (15 m) line of sight.

Maximum communication range will vary depending on orientation, obstacles (person, metal, wall, etc.) or electromagnetic environment.

A.2.4 Configuration

Damping

User selectable (default is 2 s, minimum is 0 s)

Output units

- Level and distance: ft., in., m, cm, mm
- Level rate: ft/s, in./min, in./s, m/h, m/s
- Volume: ft³, in.³, yd³, US gal, imperial gal, barrel (bbl), m³, l
- Volume flow: US gal/h, m³/h
- Temperature: °F, °C
- Signal strength: mV

Output variables

Variable	4-20 mA	Digital output
Level	✓	✓
Distance (ullage)	✓	✓
Volume	✓	✓
Volume flow	✓	✓
Electronics temperature	N/A	✓
Level rate	N/A	✓
Signal strength	N/A	✓

Volume flow calculations

- Linearization table
- Parshall flume
- Khafagi-Venturi flume

A.2.5 Process pressure

-15 to 43.5 psig (-1 to 3 bar)

Note

The PE100 flanges must be used only in non-pressurized applications.

A.2.6 Temperature limits

Process temperature

-40 to 176 °F (-40 to 80 °C)

Ambient temperature

-40 to 176 °F (-40 to 80 °C)

Storage temperature

-40 to 194 °F (-40 to 90 °C)

A.3 Physical specifications

A.3.1 Material selection

Emerson provides a variety of Rosemount products with various product options and configurations, including materials of construction that can be expected to perform well in a wide range of applications.

The product information presented is intended as a guide for the purchaser to make an appropriate selection for the application. It is the purchaser's sole responsibility to make a careful analysis of all process parameters (such as all chemical components, temperature, pressure, flow rate, abrasives, contaminants, etc.), when specifying product, materials, options, and components for the particular application. Emerson is not in a position to evaluate or guarantee the compatibility of the process fluid or other process parameters with the product, options, configuration, or materials of construction selected.

A.3.2 Housing and enclosure

Process connection

NPT 1½-in. or ISO 228/1-G1½-in. thread with a choice of different brackets, adapters, and flanges

Materials

- Transmitter housing: Polyvinylidene fluoride (PVDF)
- M12 housing: Stainless steel
- M12 contact body: Polyamide (PA)

Transmitter weight

0.8 lb (0.35 kg)

Ingress protection

Enclosures meet NEMA® Type 4X/6P, IP66, and IP68 (33 ft. [10 m] for 1000 hours⁽⁵⁾) when properly installed.

Impact protection

IK07 (4 J impact test)

A.3.3 Mounting bracket

Materials

- Bracket: Stainless steel 316L
- Nut: PVDF

(5) Verified with selection of cables from Weidmuller; for other cable selections IP68 conditions may vary.

A.3.4 Flanges

Materials

- Polyethylene PE100
- Stainless steel 316/316L
- Stainless steel 1.4404

A.3.5 Threaded adapters

Materials

Stainless steel 316/316L/1.4404

A.3.6 Material exposed to tank atmosphere

- Antenna and housing: PVDF
- Gasket: EPDM or FKM GLT
- Flange: PE100, 316/316L, or 1.4404
- Threaded adapter: 316/316L/1.4404


A.4 Dimensional drawings

Related information

[Type 1 Drawing](#)

A.4.1 Transmitter

Figure A-2: Rosemount 1208C

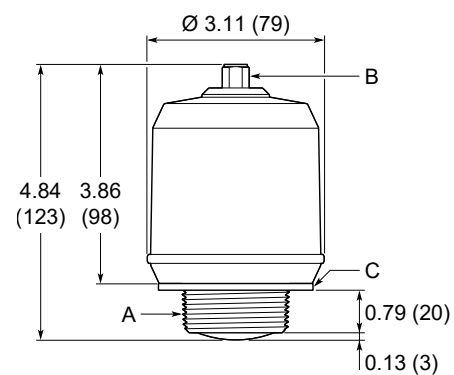


- A. NPT 1½-in. or ISO 228/1-G1½-in. thread
B. M12 male connector (A-coded)
C. Gasket for G threaded version

Dimensions are in inches (millimeters).

A.4.2 Threaded adapter


Figure A-3: 2-in. NPT Threaded Adapter

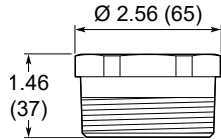

Dimensions are in inches (millimeters).

A.4.3 Mounting brackets


Figure A-4: Standard Version

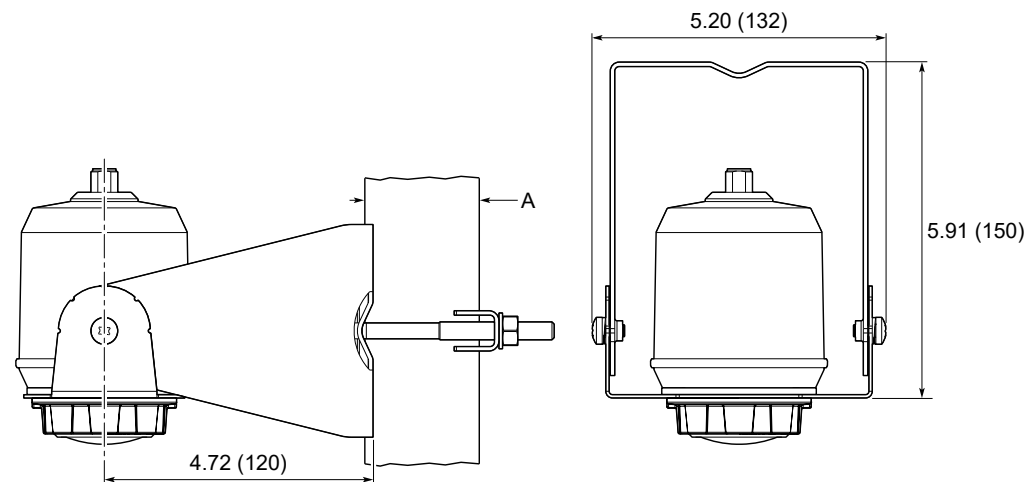

A. For 1- to 2-in. nominal pipe sizes; 2-in. pipe is the recommended size

Dimensions are in inches (millimeters).

Figure A-5: Extendable Version

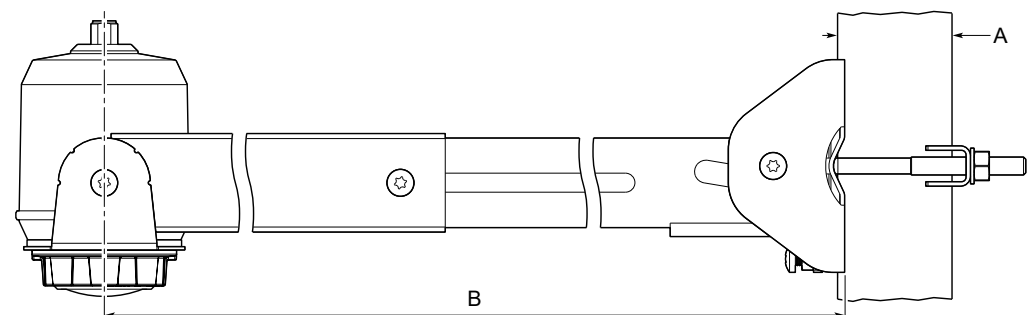


A. For 1- to 2-in. nominal pipe sizes; 2-in. pipe is the recommended size

B. Adjustable length: 17.5 to 28.9 in. (445 to 735 mm)

Bracket hole pattern

Figure A-6: Hole Pattern for Wall Mounting

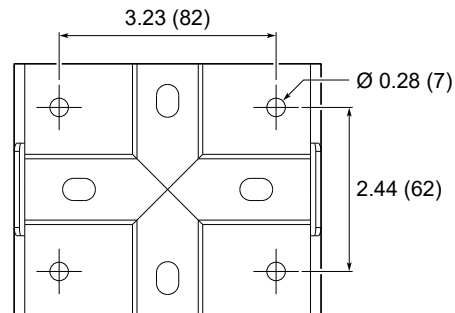

Dimensions are in inches (millimeters).

B Configuration parameters

B.1 Menu tree

Figure B-1: DD Menu Tree

Overview	Status	
	Primary Purpose Variables	
	Device Information	Identification
		Revisions
Configure		Alarm and Security
	Guided Setup	Basic Setup
		Verify Level
	Manual Setup > Device Setup	HART
		Units
		Analog Output
		Security
		Device Information
	Manual Setup > Level Setup	Geometry
		Volume Flow
		Volume
		Advanced
Service Tools	Alerts	
	Variables	Mapped Variables
		All Variables
	Maintenance	Routine Maintenance
		Reset/Restore
	Echo Tuning	Thresholds
		Echo Peaks
	Simulate	Simulate Measurement Values
		Analog Out > Loop test

B.2 Device setup

B.2.1 HART protocol

HART/polling address

The address range is 0 to 63. The transmitter operates in either standard mode with a 4–20 mA output signal or in multidrop. When the transmitter is in multi-drop mode, the current output is fixed to 4 mA.

Variable mapping

Up to four device variables can be assigned for the HART protocol. The transmitter outputs a 4-20 mA signal proportional to the primary variable. Additional variables are available through the HART digital signal.

Related information

[Output variables](#)

Damping value

This parameter defines how fast the transmitter reacts to a change of the level value (step response). The default value is 2 seconds.

A high value makes the level reading steady, while a low value allows the transmitter to respond to rapid level changes (but the presented level value may be less steady).

B.2.2

Units

The units for length, volume flow, volume, temperature, and level rates are selectable. All configuration parameters and device variables will be expressed in these units.

Related information

[Output units](#)

B.2.3

Analog output

The output source (primary variable), range values, and alarm mode are specified for the analog output.

Primary variable

Select the desired device variable to use for the analog output.


Upper/lower range value

Enter the range values that correspond to the analog output values 4 and 20 mA. The transmitter will drive the output to saturation mode if a measured value goes outside the 4-20 mA range values.

Note

The 20 mA point should be set below the reduced accuracy zone at the top of the tank.

Figure B-2: Example of Range Value Settings

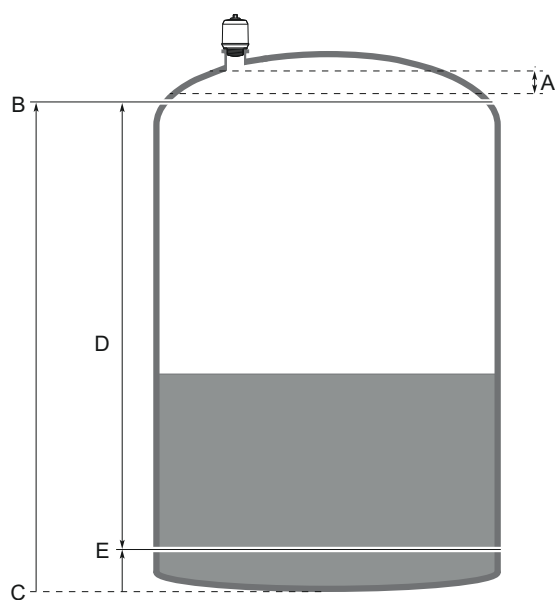

- A. Reduced accuracy zone
- B. 100% (20 mA)
- C. Zero Level
- D. Level measurement range 0-100%
- E. 0% (4 mA)

Related information

[Accuracy over measuring range](#)

Alarm mode

The transmitter automatically and continuously performs self-diagnostic routines. If a failure or a measurement error is detected, the transmitter drives the output to selected alarm limit (high or low).

High/low alarm value

The high/low alarm current for the analog output when the device enters the alarm mode.

Related information

[Analog signal on alarm](#)

High/low saturation value

The device will continue to set a current that corresponds with the measurement until reaching the upper/lower limit (and then freeze).

Related information

[Analog saturation levels](#)

B.2.4 Security

Write protection

The transmitter can be write protected to prevent unauthorized changes.

B.2.5 Bluetooth®

Bluetooth radio ID

The unique identifier for this device's Bluetooth radio.

Number of Bluetooth security resets

A counter of the number of times a Bluetooth security reset has been performed on this device.

B.2.6 Device information

Tag

Identifier of up to 8 characters for the device used by host system. The tag is typically a reference number, location, or duty description.

Long tag

Identifier of up to 32 characters for the device used by host system. It is recommended to enter both a short and a long tag (they may be the same).

Date

The date field can be used for any purpose, for example to save the date of the last configuration change.

Descriptor

The 16-character descriptor field can be used for any purpose.

Message

The 32-character message field can be used for any purpose, such as providing details of the last configuration change.


B.3 Level setup

B.3.1 Geometry

Reference height

Distance between the Device Reference Point and Zero Level.

Figure B-3: Reference Height

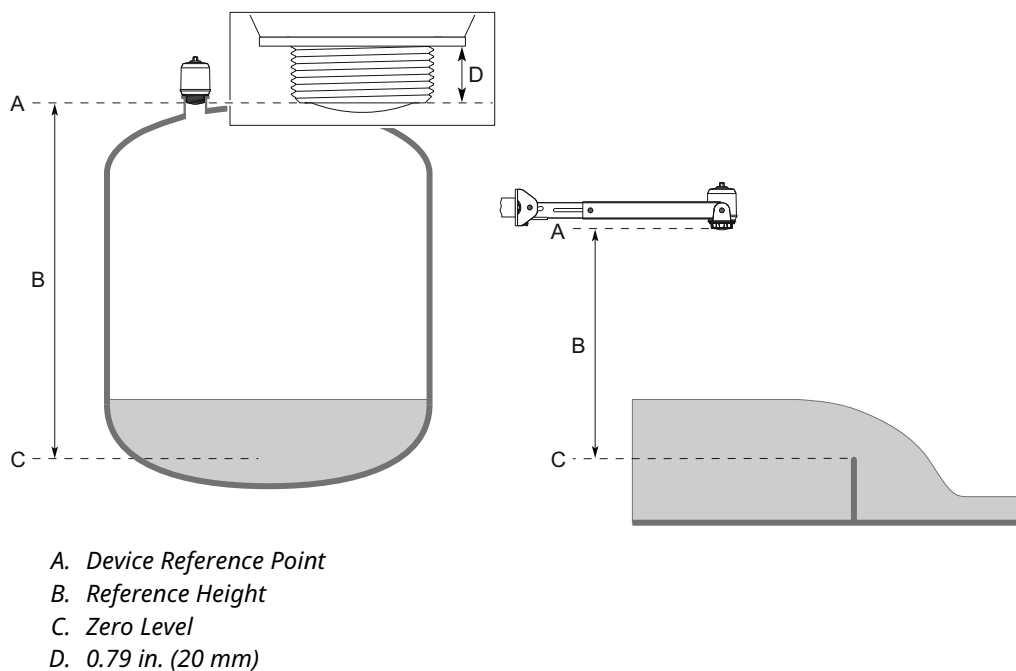


Ensure the Reference Height is set as accurate as possible. The transmitter measures the distance to the product surface and subtracts this value from the Reference Height to determine the level.

Bottom offset

The Bottom Offset is defined as the distance between Zero Level and the tank bottom. The default value is zero.

If the Zero Level is not located at the tank bottom, then enter a Bottom Offset. It is needed for the transmitter to know the position of the tank bottom.

Figure B-4: Bottom Offset

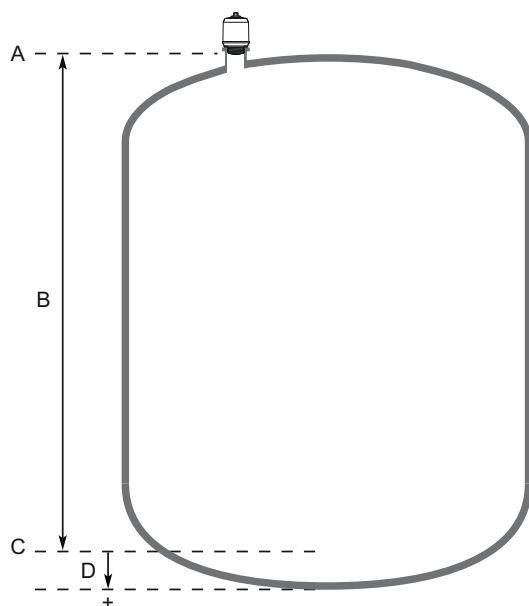

- A. Device Reference Point
- B. Reference Height
- C. Zero Level
- D. Bottom Offset

Show negative level as zero

When this setting is selected and the product surface is at or below Zero Level, the level measurement output will be zero.

B.3.2

Volume flow

Volume flow calculation method

Select the preferred volume flow calculation method. There are three options to choose from:

- Linearization table
- Parshall flume
- Khafagi-Venturi flume

Volume flow table

The volume flow table is used to convert the measured level into a volume flow rate. Up to 30 level-volume flow pairs can be entered. The level points must be entered in increasing order.

Volume flow formula

Parshall Flume

The volume flow is calculated from the formula:

$$Q = K \times H^n$$

Table B-1: Parshall Flume Parameters

Parameter	Description
Q	Calculated volume flow in m ³ /h
H	Measured level in m
Constant K	Flume specific factor K
Exponent n	Flume specific factor n
Maximum level value	Flume maximum Level (weir height)

Khafagi-Venturi Flume

The volume flow is calculated from the formula:

$$Q = K \times H^{1.5}$$

Table B-2: Khafagi-Venturi Flume Parameters

Parameter	Description
Q	Calculated volume flow in m ³ /h
H	Measured level in m
Constant K	Flume specific factor K
Maximum level value	Flume maximum Level (weir height)

B.3.3 Volume

Volume calculation method

The volume measurement can be calculated from a strapping table.

Strapping table


Strapping table requires entering level-volume pairs in a table (maximum 30 points). Use most of the strapping points in regions where the tank shape is non-linear. Starting at the bottom of the tank, for each new point, enter the total volume up to the specified level value.

B.3.4 Advanced

Calibration offset

Difference between surface distance measured by transmitter and the same distance measured by, for example, hand-dipping with a measurement tape. A positive Calibration Offset value will increase the presented level value.

Figure B-5: Calibration Offset

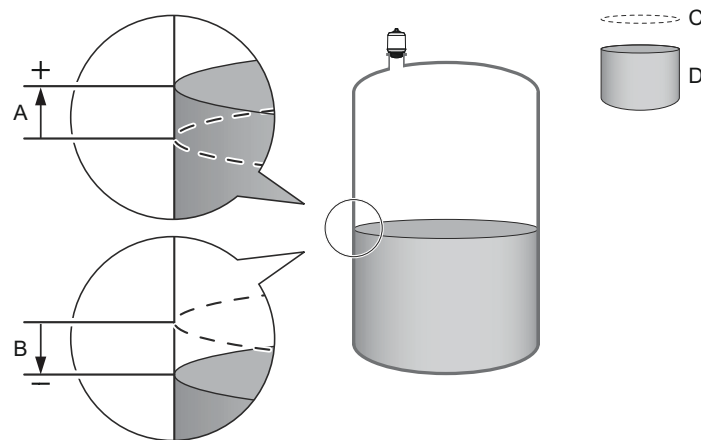

- A. Positive Calibration Offset value
- B. Negative Calibration Offset value
- C. Reported level
- D. Actual level


Upper null zone

The Upper Null Zone defines how close to the device's reference point a level value is accepted. You can extend this value to block out disturbing echoes close to the antenna, for example from the tank nozzle.

Note

Make sure the 20 mA value is below the Upper Null Zone. Measurements are not performed within the Upper Null Zone (UNZ).

Figure B-6: Upper Null Zone

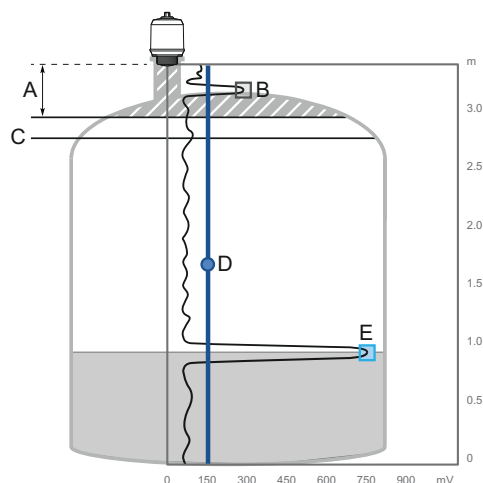

- A. Upper Null Zone
- B. Disturbance echo
- C. 100% (20 mA)
- D. General threshold
- E. Product surface echo

Related information

[Change the upper null zone](#)

Measurement recovery time

The Measurement Recovery Time (Echo Timeout) parameter controls the maximum time from when measurement is lost (e.g. due to process conditions such as foam or turbulence) until it is annunciated. If measurement is recovered within the time specified by this parameter, then it will not be annunciated.

Sweep mode

The device has two sweep modes:

- Mode 1 (77-81 GHz)
- Mode 2 (76-77 GHz)

Sweep mode impacts metrological properties. Use mode 2 only if required by local radio spectrum regulations in your country. The default setting is mode 1.

Related information

[Change the sweep mode](#)

For more information: [Emerson.com/global](https://emerson.com/global)

©2024 Emerson. All rights reserved.

Emerson Terms and Conditions of Sale are available upon request. The Emerson logo is a trademark and service mark of Emerson Electric Co. Rosemount is a mark of one of the Emerson family of companies. All other marks are the property of their respective owners.

The "Bluetooth" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Emerson is under license.

ROSEMOUNT™

