

Waterproof Thermometer

Model 39240

Operation:

- ON/OFF: Press to turn power on or off
C/F: Press to select the temperature units
MODE: Press once to hold the display
Press a second time to display the stored maximum reading. "MAX" will appear in the display.
Press a third time to display the stored minimum reading. "MIN" will appear in the display.
Press a fourth time to return to normal operation.
With "MAX" or "MIN" in the display, press and hold the MODE key until "- - -" appears. The memory selected is cleared. Press MODE again to return to normal operation.

Reset:

Battery Replacement

1. Use a flat blade screwdriver or a coin to open the rear battery compartment
2. Replace the button battery and replace the cover.



You, as the end user, are legally bound (**Battery ordinance**) to return all used batteries; **disposal in the household garbage is prohibited!** You can hand over your used batteries at the collection points in your community or wherever batteries are sold!

Disposal: Follow the valid legal stipulations in respect of the disposal of the device at the end of its lifecycle


Specifications

Range	-40 to 200°C / -40 to 140°F
Resolution	0.1°
Accuracy	±1°C / ± 2°F
Stem	70mm / 2.75" stainless steel
Battery	LR44 button (or equivalent)
Weight	29g / 0.7oz
Dimensions	150x20x18mm / 5.9x0.8x0.7"
Dimensions	Display: 4.3x3.9x0.8"

Copyright © 2009 Extech Instruments Corporation (www.extech.com)

All rights reserved including the right of reproduction in whole or in part in any form.

39240 V2.0 2/09

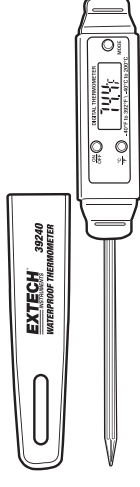

Termómetro Hidrófugo

Modelo 39240


Operación:

- ON/OFF: Presione para encender o apagar
°C/F: Presione para seleccionar las unidades de temperatura
MODE: Presione una vez para retener la pantalla
Presione una segunda vez para mostrar la lectura máxima guardada. "MAX" aparecerá en la pantalla.
Presione una tercera vez para mostrar la lectura mínima guardada. En la pantalla aparecerá "MIN".
Presione una vez más para regresar a operación normal.
Con "MAX" o "MIN" en pantalla, presione y sostenga la tecla MODE hasta ver "- - -". Ha borrado la memoria seleccionada. Oprima de nuevo la tecla MODE para regresar a operación normal.

Restaurar:

Batería Reemplazo

1. Use un destornillador plano o moneda para abrir la tapa posterior del compartimento de la batería
2. Reemplace la batería tipo botón y reinstale la tapa.



Usted, como usuario final, está legalmente obligado (**Reglamento de baterías**) a regresar todas las baterías y acumuladores usados; ¡el desecho en el desperdicio o basura de la casa está prohibido! Usted puede entregar sus baterías en los centros de recolección de su comunidad o donde sea que se venden las baterías.

Desecho: Cumpla las estipulaciones legales vigentes respecto al desecho del dispositivo al final de su vida útil

Especificaciones

Escala	-40 a 200°C / -40 a 140°F
Resolución	0.1°
Precisión	±1°C / ± 2°F
Vástago	70mm / 2.75" acero inoxidable
Batería	botón LR44 (o equivalente)
Peso	29g / 0.7 oz.
Dimensiones	150 x 20 x 18mm / 5.9 x 0.8 x 0.7"
Dimensiones	Pantalla: 4.3 x 3.9 x 0.8"

Copyright © 2009 Extech Instruments Corporation (www.extech.com)

Reservados todos los derechos, incluyendo el derecho de reproducción total o parcial en cualquier medio.

39240 V2.0 2/09