



SP-400 PTSA & Conductivity Meter

Quick-Start Guide




Combined Calibration:


You will need Pyxis Lab®
Combined Calibration Solution
(1000 μ S Conductivity,
100ppb PTSA).



Rinse (3x) and Insert
Combined Cal Solution.
Press 'Calib' and 'OK'

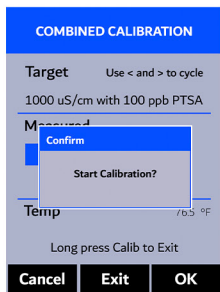

Press the 'Right Arrow'
Button to select
'C-Cal'

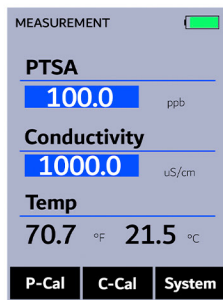

Your unit is now
calibrated for PTSA &
Conductivity.



Package Includes



• USB Bluetooth Converter



• Four AA Batteries



Shop Calibration Standards



Necessary for SP-400

- Combined Calibration Solution (1000 μ S, 100ppb)
- Conductivity Solution (1000 μ S)
- Preferred PTSA Concentration Solution (30ppb, 50ppb, 100ppb, 200ppb, 300ppb)

Download the User Manual

