


Fluorescein Calibration


For this procedure, you'll need Pyxis Lab® 50, 250, & 500 ppb Fluorescein Cal Solutions. To start select 'Calib' on Measurement Menu, and then Select 'Fluorescein'.




Rinse (3x) and Insert DI Water, then select 'Zero'

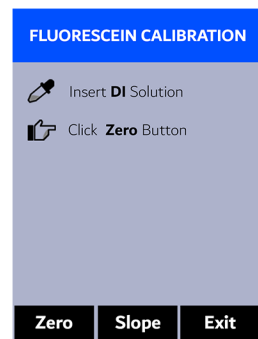


Rinse (3x) and Insert, 250 ppb Solution, then select 'Slope'

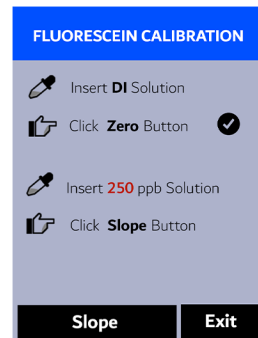

Rinse (3x) and Insert 50 ppb Solution, then select 'Slope'

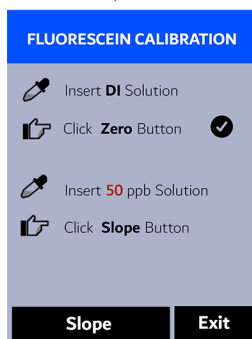

Rinse (3x) and Insert, 500 ppb Solution, then select 'Slope' & 'Exit'

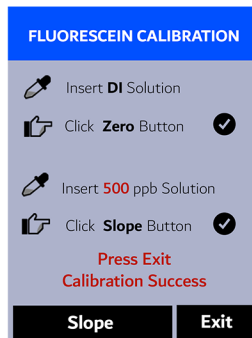

Support


Scan the QR Code to Learn How to
Replace & Pair the Wireless pH/ORP Module



Scan the QR Code to Learn How to
Conduct a Cleanliness Check & Clean Properly



Need Tech Support?
Scan the QR Code to Request Tech Support

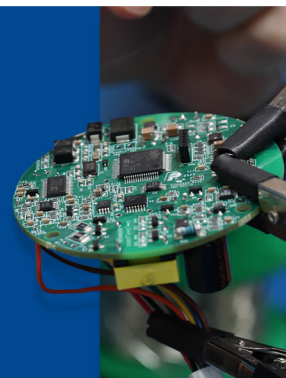

Pyxis®

SP-710B Handheld Multimeter

Quick-Start Guide



MAINTAIN 2ml of Storage Solution in pH/ORP Cell when not in use to keep electrodes hydrated.

www.pyxis-lab.com
+1 (866) 203 - 8397
1729 Majestic Dr. (Suite 05)
Lafayette, CO 80026 USA

Scan QR Code for
User Manual




pH Calibration


Power on the pH/ORP Sensor by opening the lid. A blinking light will indicate the sensor is on.




Select pH Calibration

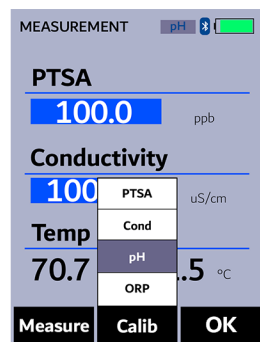


Rinse (3x) and Insert pH7 buffer, wait for lock icon then select 'pH7'

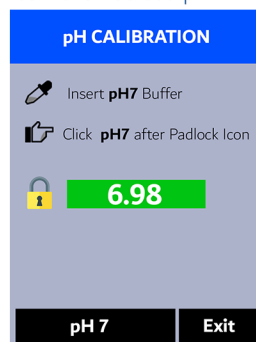

Rinse (3x) and Insert pH4 buffer, wait for lock icon then select 'Calib'

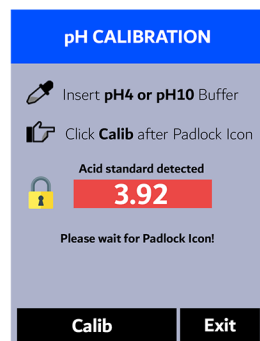

Rinse (3x) and Insert pH10 buffer, wait for lock icon then select 'Calib'

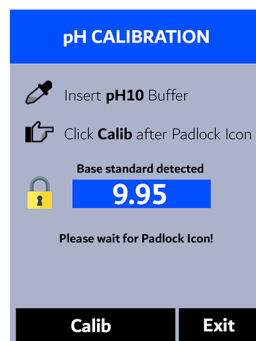


Combined Calibration


For this procedure you will need Pyxis Lab® Combined Calibration Solution (1000µS Conductivity, 100ppb PTSA).




Select 'Cond' Calibration

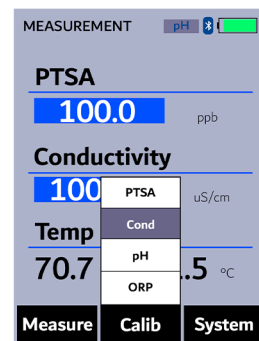

Rinse (3x) and Insert Combined Cal Solution. Press 'Calib' and 'OK'

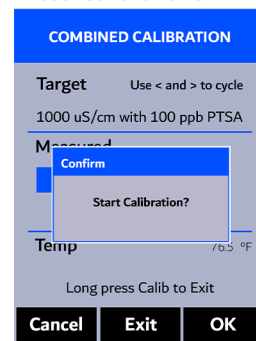

Your unit is now calibrated for PTSA & Conductivity.

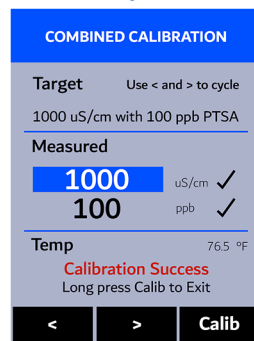

Necessary Solutions



Pyxis Lab®
pH Calibration Combo Pack
pH 4.0, 7.0, and 10.0 Calibration Solutions

Pyxis Lab®
ORP Calibration Standard
+ 200 mV Solution



Pyxis Lab®
Combined Calibration Standard
100 ppb PTSA and 1000 µS Conductivity

Pyxis Lab®
Fluorescein Calibration Standards
10 ppb, 50 ppb, 250 ppb, & 500 ppb Cal Solutions



Scan QR Code to
Shop for Cal & Cleaning Solutions

