



Everest XL Detect / XL Detect +TM VideoProbe[®]

Operating Manual



Table of Contents

About this Manual	5
Standard Package	5
Optional Accessories	5
Optional Software	5
Indicators, and Connectors	6
Controls	8
Symbols and Terms	10
General Warnings	10
General Cautions	11
Battery Warnings	12
Symboles et termes employés	13
Avertissements généraux	13
Mentions générales « Attention »	14
System Removal	16
System Power On	17
System Power Off	18
System Storage	18
Mounting Accessories	19
Battery	20
Battery Charge Level	21
Charging Battery	21
Keyboard Support	22
Saving Images and Video	23
Optical Tips	24
Tip Tool Proper Use (4.0 mm only)	25
GO TO Menu	26
Live Main Menu	32
Light Output	32
Image Control	34
Image Brightness	35
Zoom Level	36
Long Exposure	37
Split Screen	38
LSingle View	39
Inverse +	40
Invert	41
Annotation	42
Input Method Editors	45
Preset	46
Hide Annotation	47
Eject Hardware	49
Setup	50
Battery Icon	53

Table of Contents

Date / Time	54
Logo.....	55
Text Color	56
Temp Icon	57
White Balance	58
Video Record Setup	59
Save Location	60
MPEG Quality.....	61
Still Image Setup >	64
JPEG Quality.....	66
Audio Playback Setup	67
Playback Volume	68
Steering	69
Tip Map	70
Language Setup	71
System Tools	72
System Info.....	73
Power Management	74
File Manager	75
Capturing Images and Video	76
Articulation Home	77
Freeze Frame	78
Freeze Frame Menu	79
Still Image Capture and Playback	81
Video Recording and Playback	81
Recalling a File	82
Recalled Image Menu.....	83
Video Playback Menu.....	84
Copying Files/Folders.....	85
Deleting Files/Folders.....	86
Creating a Folder.....	87
Renaming Files/Folder	88
Inspecting and Cleaning the System	89
Cleaning Optical Tips.....	89
Service.....	90
Product Specifications:.....	91
A. Optical Tip Table.....	96
B. Chemical Compatibility.....	97
C. Warranty	98
D. Environmental Compliance	99
E. Agency Certifications.....	100
F. Creating a Personalized Logo File.....	102
H.Restoring Factory Defaults	104

1 - Introduction

This instruction handbook is for use by the owner of the Remote Visual Inspection equipment and their personnel. Waygate Technologies remains the owner of the copyright on this instruction handbook. No part of this work covered by the copyrights herein may be translated, reproduced, stored in information retrieval systems, or transmitted, in any form or by any means graphic, electronic, or mechanical, including photocopying, recording, taping, or otherwise without the prior written permission of the publishers. Individual reproductions are allowed for business purposes only with the prior written consent of Waygate Technologies.

Should you have any questions concerning clarification of problems in connection with application, use, operation, specification of your Remote Visual Inspection equipment, please contact the following:

Technical Support Contact Information

Global Phone: 1-866-243-2638

Email: RemoteService@BakerHughes.com

NOTE: Contact information is subject to change. Please visit the Waygate Technologies website for the latest contact information.

NOTE: The terms XL Detect and XL Detect+, within this document, are used interchangeably and with the intent that both are applicable unless otherwise specified.

This equipment is manufactured under one or more of the following US patents:

• 4,980,769	• 6,468,201	• 6,590,470	• 6,959,432
• 7,170,677	• 7,262,797	• 7,564,626	

1 - Introduction

About this Manual

This manual and the related equipment is intended for visual inspection technicians with a basic understanding of inspection principles and practices, and who are familiar with basic computer operations, but who may not have experience with a video borescope system.

The manual contains complete setup, operating, and maintenance instructions for the video borescope system. The manual also provides a product overview, step-by-step procedures, and reference information.

To ensure operator safety, please read and understand this manual prior to using the system.

For additional assistance, go to www.waygate-tech.com for a complete listing of contact information.

Standard Package

XL Detect
2-hour Li-Ion Battery
Storage Case
AC Adapter/Battery Charger

Documentation Thumbdrive
Quickstart Card
Inspection Manager

Optional Accessories

Spare 4 hour battery
VGA Video Cable
Insertion Tube Gripper
Insertion Tube Rigidizer
12V DC Power Adaptor
Mini-Magic Clamp Kit
Magic Arm Kit
Handset Mounting Hook
Optical Tip Storage Case

Headset
Belt Clip
Keyboard
Optical Tips
Handset Holder
Soft Case
Neck Strap
Sun Visor

Optional Software


Menu Directed Inspection (MDI)

1 - Introduction

Indicators, and Connectors

- 1 LCD Screen
- 2 USB2 Port
- 3 Integrated 2.5 mm Headset/Microphone Jack
- 4 Controls
- 5 2-hour Lithium Ion Battery
- 6 Battery Charge Indicator
- 7 AC Adaptor Input
- 8 USB Bay


1 - Introduction

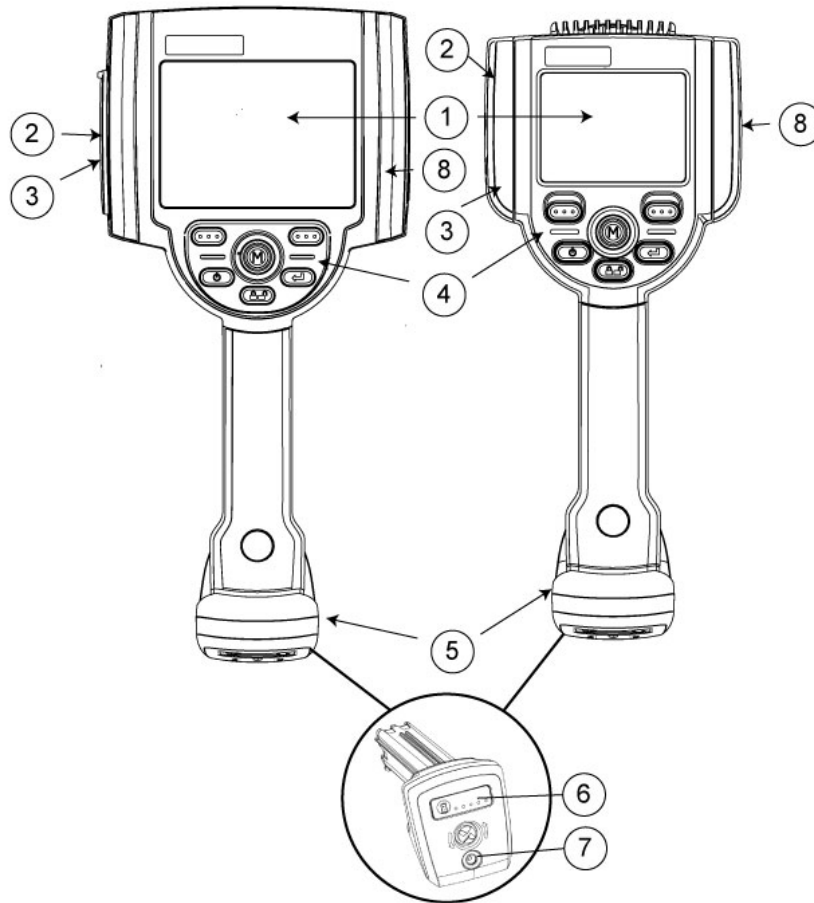

1 - Introduction

Controls

The following buttons control basic and advanced operation of the XL Detect+ VideoProbe.

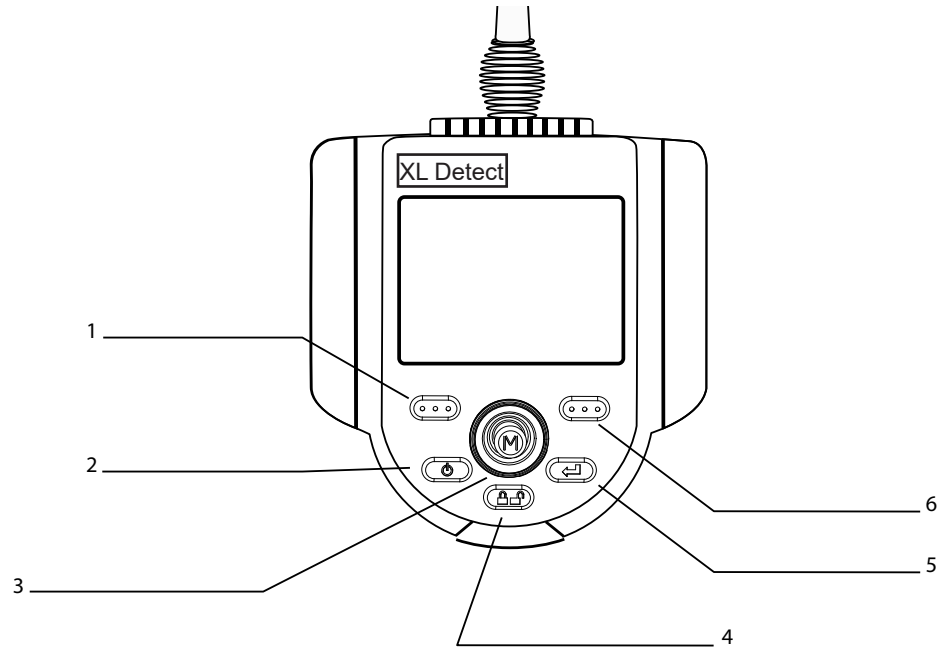

1 - Introduction

1 Left Soft Key

Activates screen command listed on system LCD. This key will most frequently return the user BACK one screen.

2 Power/Exit

Turns system power on/off. Also used to exit menus, return to live/frozen video and disable image control features.

3 Joystick

Controls articulation. Press to activate the Live Main Menu, Recalled Image Menu, and Freeze Frame Menu. Push the joystick left/right/up/down to navigate menus and sub-menus.

4 Steering Control

Press and release to keep bending neck locked in place after the joystick is released. A  lock will appear on the LCD when enabled. Press and release again to unlock the steering control. The  lock will disappear from LCD when disabled. Also, press and hold to engage HOME function to straighten bending neck. A blinking  Home icon will appear on the LCD when enabled. This icon will disappear when finished.

5 Freeze/Enter

Freezes the image on-screen. Also acts as enter key for selecting options.

6 Right Soft Key

Activates screen command listed on system LCD. This key will most frequently serve to SELECT active menu choices. This key will also provide an alternative method to access the LIVE MAIN MENU. Press and hold the  right soft key labeled GOTO for ~ 3 seconds.

2 - Safety Information

Note: Before using or servicing the system, read and understand the following safety information.

Symbols and Terms

The following symbols appear *on the product*:



See accompanying documentation.

General Warnings

The following warning statements apply to use of the system in general. Warning statements that apply specifically to particular procedures appear in the corresponding sections of the manual.



Do not allow the conductive insertion tube, system or its working tools to come in direct contact with any voltage or current source. Prevent all contact with live electrical conductors or terminals. Damage to the equipment and/or electrical shock to the operator may result.



Do not use this system in explosive environments



USE PROPERLY. Using any piece of this equipment in a manner not specified by the manufacturer may impair the product's ability to protect the user from harm.

2 - Safety Information



General Cautions

The following caution statements apply to use of the XL Detect device in general. Caution statements that apply specifically to particular procedures appear in the corresponding sections of the manual.

HANDLE PROBE CAREFULLY. Keep the insertion tube away from sharp objects that might penetrate its outer sheath. Keep the whole insertion tube as straight as possible during operation; loops or bends anywhere in the tube decrease its ability to steer the probe tip. Avoid bending the insertion tube sharply.

Note: Always use the Home button to straighten the bending neck before withdrawing insertion tube from inspection area or putting probe away. Never pull, twist, or straighten the bending neck by hand; internal damage may result. At the first sign of damage, return the probe for repair.

Certain substances may damage the probe. For a list of substances that are safe for the probe, see “Chemical Compatibility” in the Appendix.

2 - Safety Information

Battery Warnings

Only use the battery (XLGOABATTA or XLGOABATTB) and power supply (XLGOACHGR or XLGOAAUTOC) specified for use with the XL Detect+ system.

Before use, thoroughly review the instructions in this manual for the battery and battery charger to fully understand the information contained in them, and observe the instructions during use.



WARNING

- Do not place the battery in fire or exceed the battery operating temperature.
- Do not pierce the battery with nails, strike the battery with a hammer, step on the battery, or otherwise subject it to strong impacts or shocks.
- Do not expose the battery to water or salt water, or allow the battery to get wet.
- Do not disassemble or modify the battery.



Battery Communication Error: If the XL Detect+ shows this error message on the display, please contact your nearest customer support center.

Using the battery outside its recommended operating range will result in degradation of the performance and service life. When storing the battery, be sure to remove it from the base unit.

Recommended temperature range for Li-ion battery operation.

Discharge (when using the instrument): : -20° C to 46° C

Recharging : 0° C to 40° C

Storage : -25° C to +60° C

2 - Safety Information

Remarque : avant l'utilisation ou l'entretien du système, vous devez lire et comprendre les informations de sécurité qui suivent.

Symboles et termes employés

Les symboles suivants sont apposés **sur le produit** :



Voir la documentation jointe.

Avertissements généraux

Les avertissements suivants s'appliquent à l'utilisation du système en général. Les avertissements qui s'appliquent spécifiquement à des procédures particulières sont indiqués dans les sections correspondantes de ce manuel.



Le système XL Detect+ et les outils de travail qui l'accompagnent ne doivent jamais entrer en contact direct avec une source de tension ou de courant. Évitez tout contact avec des conducteurs ou des bornes électriques sous tension. L'équipement risquerait d'être endommagé, ou l'opérateur de subir un choc électrique.



N'utilisez pas ce système dans un environnement à risque d'explosion.



UTILISER CORRECTEMENT. Si un élément de cet équipement est utilisé d'une manière non indiquée par le fabricant, l'utilisateur peut ne plus être protégé des risques de blessure.

2 - Safety Information



Mentions générales « Attention »

Les mentions « Attention » qui suivent s'appliquent à l'utilisation de l'appareil XL Detect+ en général. Les mentions « Attention » qui s'appliquent spécifiquement à des procédures particulières sont indiquées dans les sections correspondantes du manuel.

MANIPULER LA SONDE AVEC PRÉCAUTION. Maintenez la gaine de la sonde à l'écart d'objets pointus ou tranchants qui risqueraient de traverser son fourreau. Maintenez toute la gaine aussi droite que possible pendant l'utilisation : en cas de boucle ou de courbure, il est plus difficile de piloter le bout de la sonde. Évitez de trop courber la gaine.

Remarque : utilisez toujours le bouton de rangement pour redresser le béquillage avant de rétracter la gaine de la zone d'inspection ou de ranger la sonde. Ne manipulez jamais le béquillage à la main pour le tirer, le courber ou le redresser : vous risqueriez de l'endommager à l'intérieur. Envoyez la sonde en réparation au premier signe d'endommagement.

Certaines substances risquent d'endommager la sonde. Pour consulter la liste des substances sans danger pour la sonde, voir Compatibilité Chimique en annexe.

Avertissements liés à la batterie

Utilisez uniquement la batterie (XLGOABATTA or XLGOABATTB) et l'alimentation (XLGOACHGR or XLGOAAUTOC) spécifiées pour être utilisées avec le système XL Detect+.

Avant utilisation, lisez attentivement les instructions contenues dans ce manuel relatives à la batterie et au chargeur de batterie pour bien les comprendre, et respectez ces instructions pendant l'utilisation de l'appareil.



AVERTISSEMENT

- Ne jetez pas la batterie au feu et ne dépassez pas sa température de fonctionnement.
- Ne percez pas la batterie avec des clous, ne la frappez pas avec un marteau, ne marchez pas dessus et ne la soumettez pas à des

2 - Safety Information

- impacts ou des chocs violents.
- N'exposez pas la batterie à l'eau douce ou salée, et évitez de la mouiller.
- Ne désassemblez pas la batterie et ne la modifiez pas.

 Erreur de communication de la batterie. Veuillez contacter le Service clientèle au numéro +1 866 243 2638.

L'utilisation de la batterie en dehors de la plage de fonctionnement recommandée entraînerait une dégradation de ses performances et de sa longévité. Lorsque vous stockez la batterie, veillez à la retirer de sa base.


Plage de température recommandée pour le fonctionnement de la batterie Lithium-Ion.

Décharge (à l'utilisation de l'appareil) : -20°C à +46°C Recharge , 0°C à +40°C Stockage, -25°C à +60°C

3 - Getting Started

System Removal


Gently remove the insertion tube from the internal storage reel and lift the handset from the storage case.

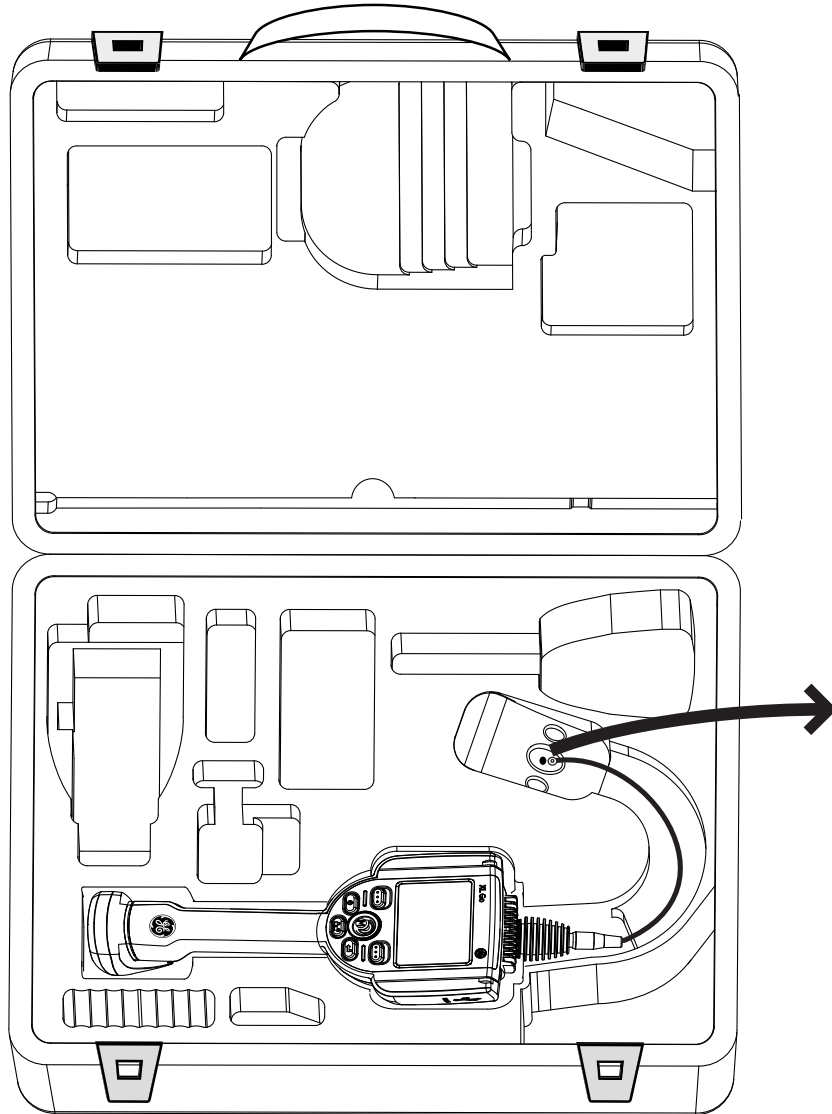

3 - Getting Started

System Power On

Press and hold the  Power/Exit key until unit turns on. The buttons and Liquid Crystal Display (LCD) will light and begin the power-up sequence. After approximately 30 seconds, select the desired language. The system screen will display live video and screen prompts. The system is now ready for use.

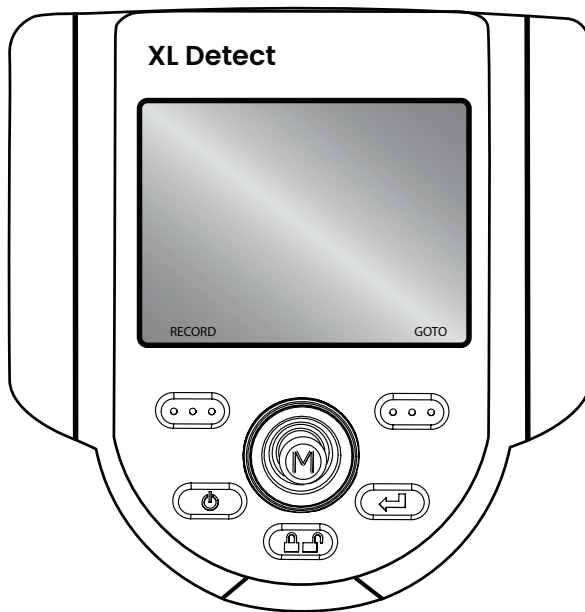

Note: All batteries are shipped with a partial charge. Batteries should be fully charged prior to use.


3 - Getting Started

System Power Off

Press and hold the  Power/Exit key until the “SYSTEM SHUTTING DOWN” message appears. Key illumination and LED probe lights will go out when system is completely powered down.

System Storage


Place the tip of the insertion tube into the orange funnel and gently feed into storage reel. Place the XL Detect+ handset into the designated foam cutout. LCD screen should face up.

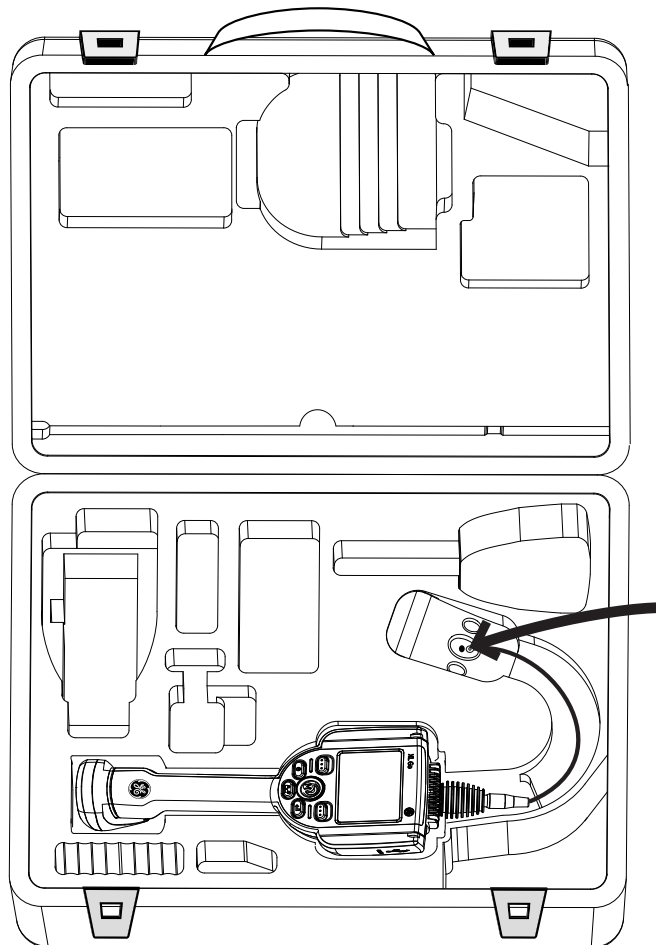


3 - Getting Started

Mounting Accessories

Assemble the optional mounting accessories by screwing together the mini magic clamp, swivel ball, and handset holder.

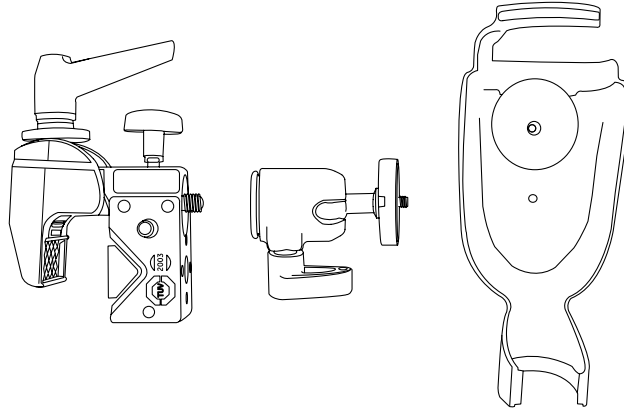

Secure the XL Detect+ mini magic clamp and place the XL Detect+ system in the handset holder.

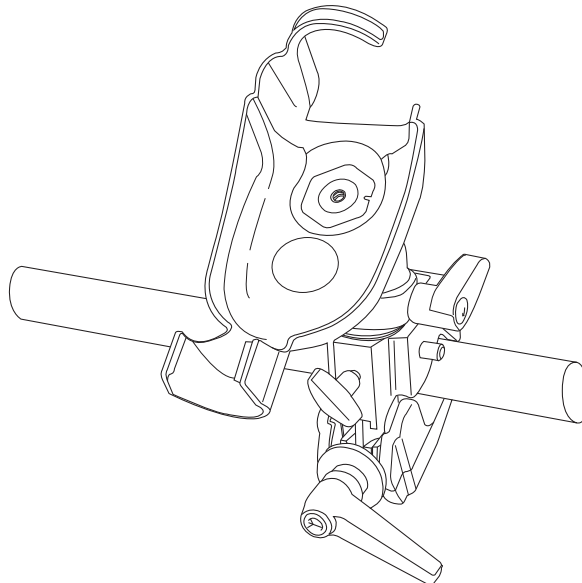

3 - Getting Started

Battery

Installing Battery

Insert the battery into the handset. The battery is installed properly when the latching mechanism is engaged.

Note: Do not force the battery into the handset, as damage may occur. The battery is keyed and may only be installed in the proper orientation.


Removing Battery

For batteries with the removal tab, using your hand, turn the tab counterclockwise to release the battery.

Note: Do not use a tool to remove the battery.

For batteries with the locking screw, using a standard screwdriver or coin, turn the locking screw counterclockwise and release the battery.


Note: Do not remove battery while system is operating.

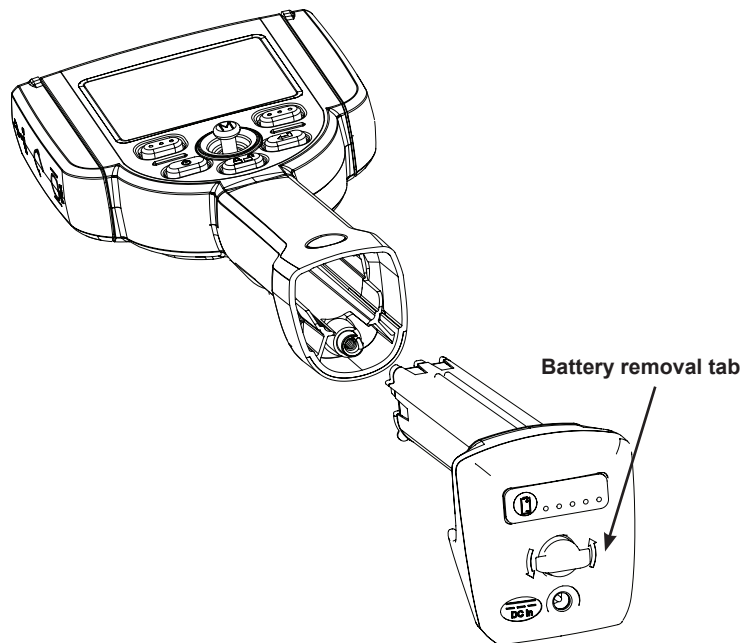

3 - Getting Started

Battery Charge Level

Check the battery charge by pressing the battery symbol on the front of the battery. Each light represents approximately 20% of the battery charge capacity.

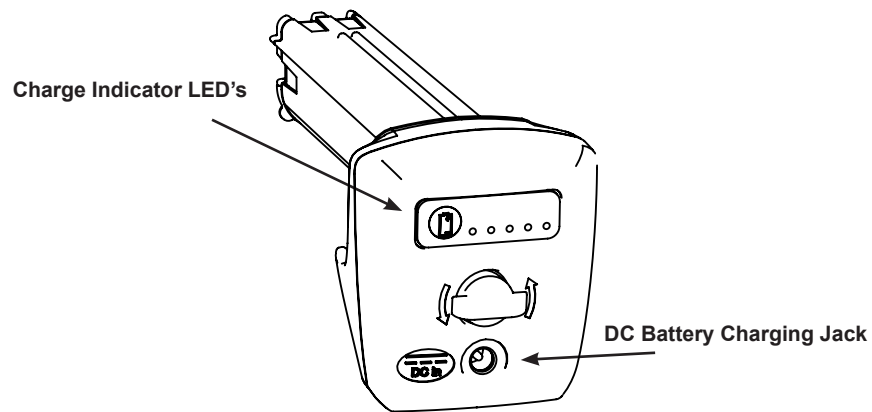

Charging Battery

Plug the included AC to DC power adaptor into a suitable AC power source and connect the DC output of the battery charger into the XL Detect+ battery. The LED battery lights will illuminate according to the amount of charge attained. The system may operate while charging.

The battery may also be charged while disconnected from the system.

Note: When the battery is fully charged, the LED battery lights will turn off.

Note: Battery run time approximately equals battery charge time; therefore, a four hour battery will take approximately four hours to charge.

3 - Getting Started

Keyboard Support

To use an external, USB keyboard, plug the approved device into one of the two USB ports.

For a list of approved keyboards, contact your sales representative or customer support.

The function keys on the keyboard act as the keys on the XL Detect+:

F1: Menu Function on Joystick

F2: Left Soft Key 

F3: Power/Exit Key 

F4: Steer & Stay Key 

F5: Enter Key 

F6: Right Soft Key 

Note: Keyboards only support the top level functions and will not support the press and hold functions such as video recording.

3 - Getting Started

Saving Images and Video

Still Images

To capture a still image, compose the picture and press and release  Freeze/Enter. Press the  right soft key with SAVE on the LCD above to save to the default location.

Alternately, from live video, press and hold  Freeze/Enter to quick-save.

Video

To record live video, press and hold the  left soft key labeled RECORD on the LCD above. A red record symbol will appear in the upper right hand corner. When the video is stopped, it will automatically save to the default location.


3 - Getting Started

Optical Tips

Optical tips are attached to the camera head using a double thread. This prevents unintended departures of optical tips from the probe. Each optical tip provides a unique depth of field (DOF), field of view (FOV) and direction of view (DOV). A complete list of available tips is provided in the Appendix.

Optical Tip Removal

1. Grasp the head of the probe with one hand and gently loosen the tip counterclockwise with the other hand. The tip has cleared the first set of threads when it spins freely.
2. Gently pull the tip away from the probe and continue loosening counterclockwise until the tip is free from the second set of threads.

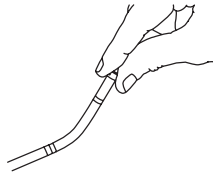

Optical Tip Installation

1. Ensure the optical tip is clean. Clean if necessary (See Cleaning Optical Tips).
2. Grasp the head of the probe with one hand and gently turn the tip clockwise with the other hand. The tip has cleared the first set of threads when it spins freely and then seats with gentle force applied.
3. Gently push the tip onto the probe and continue turning clockwise on the second set of threads until the tip is attached finger tight. Do not over tighten. Pull gently on the tip to ensure proper attachment to the probe.

NOTE: Never use tools or excessive force to install or remove an optical tip.

3 - Getting Started

Tip Tool Proper Use (4.0 mm only)

Removing Tips

1. Apply empty tip tool to probe head.
2. Apply pressure while turning in the counter-clockwise position.
3. When tip tool spins freely, gently pull up while twisting in the counter-clockwise position to release the second set of threads.
4. Remove tip tool and tip will be within.

Applying Tips

1. Apply tip tool containing appropriate tip to probe head.
2. Apply pressure while turning in the clockwise position.
3. When tip tool spins freely, gently push down while twisting in the clockwise position to engage the second set of threads.
4. Pull gently on tip tool to ensure proper attachment.
5. Remove tip tool and tip will be attached to probe head.

NOTE: Never use excessive force to install or remove an optical tip.


4 - Common Tasks

GO TO Menu

Many common operating tasks are available in the GOTO menu. This menu is available by pressing the  right soft key labeled GOTO during live video mode. To exit any menu, press  Power/Exit.

GO TO > File Manager

To enter the file manager, navigate to FILE MANAGER with the joystick and select with the  right soft key labeled SELECT.

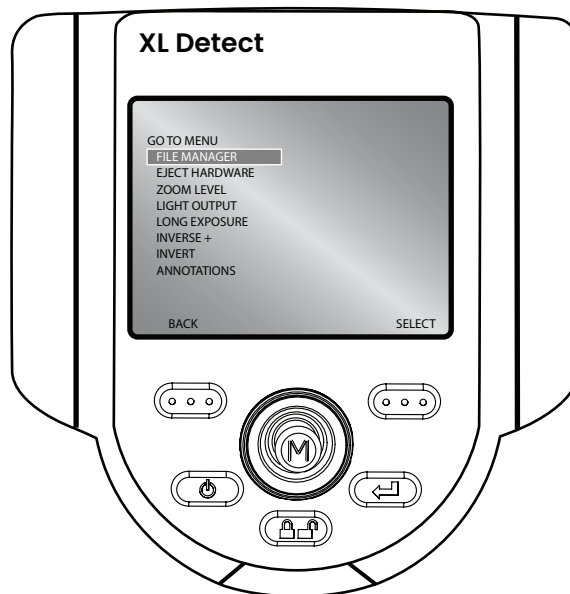


4 - Common Tasks

GO TO > Eject Drive

To eject USB thumb drives before removal, use the joystick to navigate to the right of EJECT HARDWARE and select the appropriate drive using the right soft key labeled SELECT.


Note: Always use EJECT HARDWARE before removing a USB thumb drive to prevent loss of data.

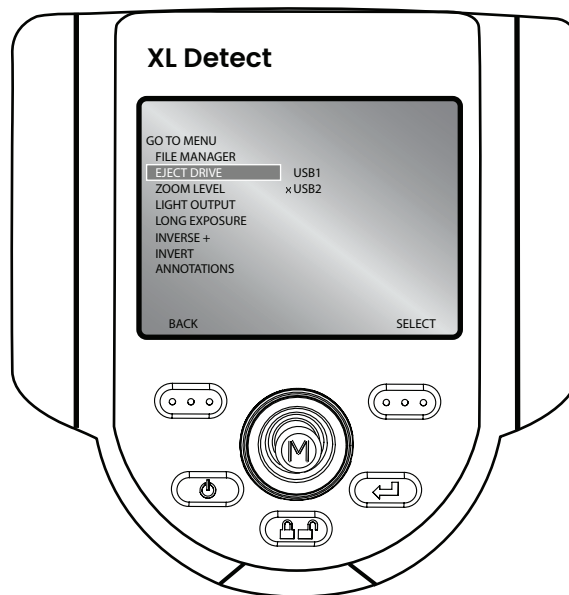

4 - Common Tasks

GO TO > Zoom Level


An image can be zoomed from 1 (normal view) to 5 (5 times zoomed). Navigate to the right of ZOOM LEVEL and use the joystick to adjust the zoom level. Zoom can be turned off in live video mode by pressing  Power/Exit.

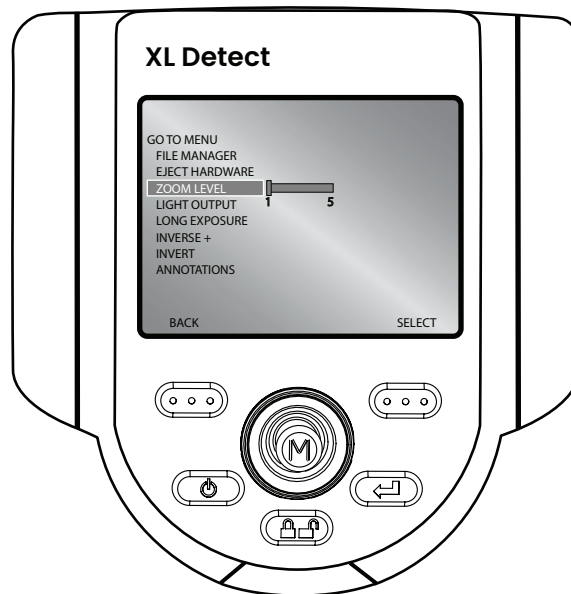

4 - Common Tasks

GO TO > Light Output

To turn the camera light source On or Off, navigate to the right of LIGHT OUTPUT and select ON or OFF.

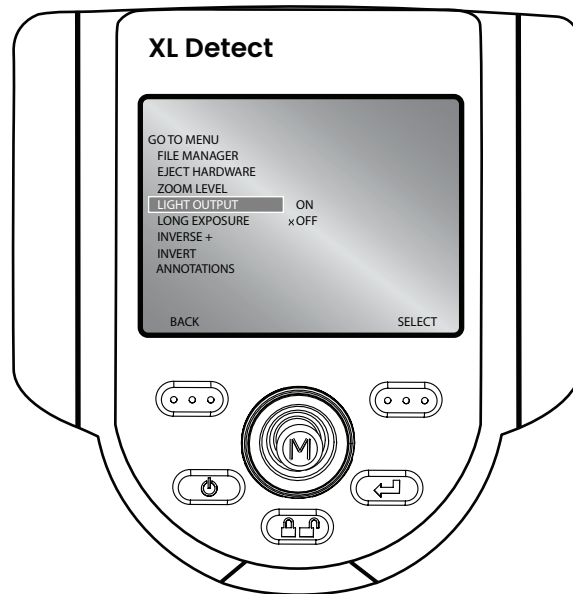

Note: Pressing the  Freeze Frame key is a convenient way to temporarily turn off the light output and is ideal for changing optical tips and conserving battery charge.


4 - Common Tasks

GO TO > Long Exposure

The XL Detect+ system can brighten the image by varying the exposure time. Keep the probe tip as still as possible when capturing an image with long exposure to minimize the risk of blurring.

Select LONG EXPOSURE to choose manual exposure, automatic long exposure, or to turn long exposure off. Long Exposure may be turned off in live video mode by pressing the  Power/Exit key.

After selecting Long Exposure, the following options will be available:

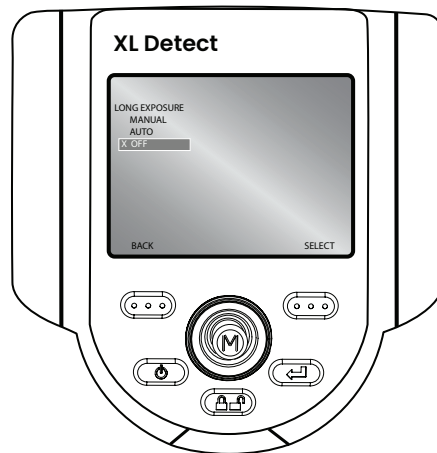

GO TO > Inverse +


Inverse + reverses the brightness similar to a photographic negative. It enhances the image contrast, making subtle details more visible. Inverse + may be turned off in live video mode by pressing the  Power/Exit key.

To activate or deactivate, navigate to INVERSE + and choose ON or OFF.

4 - Common Tasks

GO TO > Invert

The invert function flips an image horizontally. To activate or deactivate, navigate to INVERT and choose ON or OFF. Invert may be turned off in live video mode by pressing the  Power/Exit key.

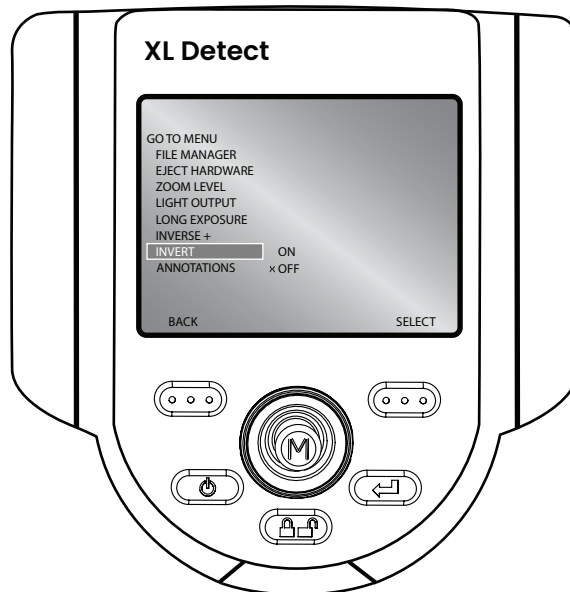

Note: Invert is typically used while a side view tip is installed in order to compensate for the inversion caused by this tip.

4 - Common Tasks


Live Main Menu

To activate the LIVE MAIN MENU, press and release the joystick. To exit any menu, press  Power/Exit.

An alternative method to access the LIVE MAIN MENU is a press and hold of the  right soft key labeled GOTO for ~3 seconds.

Live Main Menu > Light Output

To turn the LED optical light on/off, use the joystick to choose LIGHT OUTPUT and select ON or OFF.

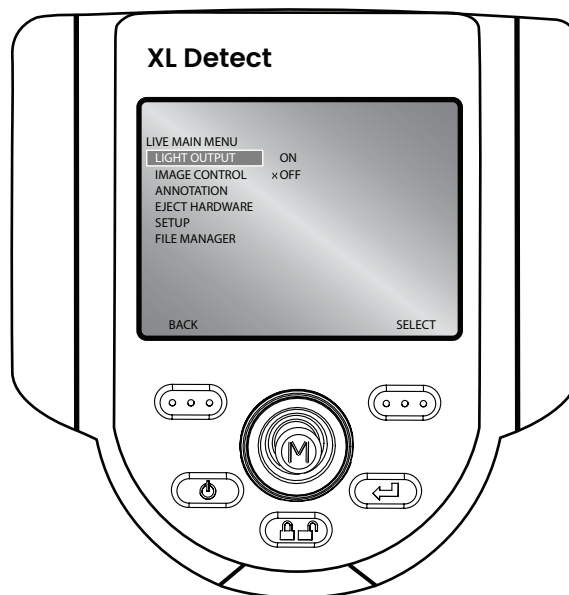


Note: Pressing the  Freeze Frame key is a convenient way to temporarily turn off the light output and is ideal for changing optical tips and conserving battery charge.

4 - Common Tasks

GO TO > Annotations


When Annotations have already been added to the image, user can quickly remove them by choosing ANNOTATIONS > DELETE ALL.

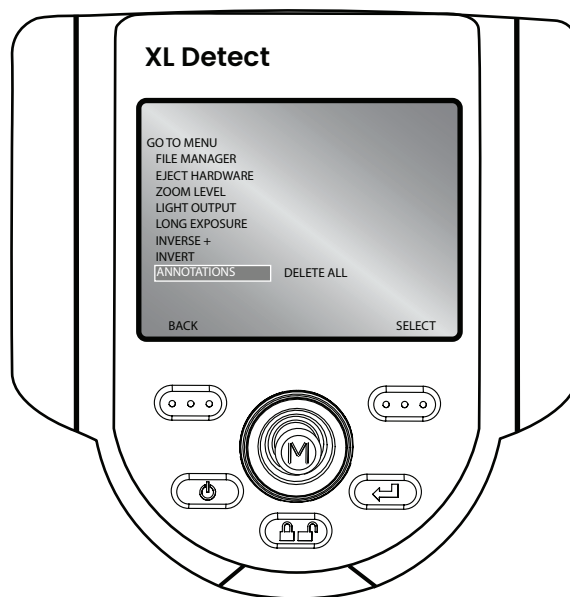

4 - Common Tasks

Live Main Menu > Image Control

From the LIVE MAIN MENU, select IMAGE CONTROL. The changes made to the Image Controls take effect immediately.

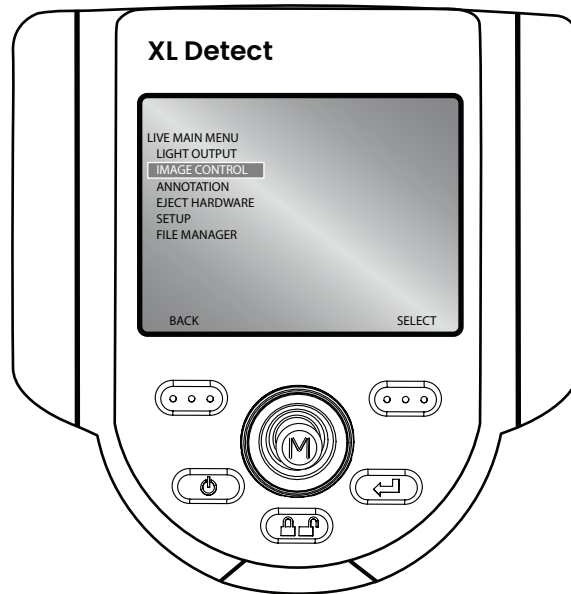

The following options are then available:


- Image Brightness
- Zoom Level
- Long Exposure
- Split Screen
- Single View
- Inverse +
- Invert

Note: By pressing the  power/exit key twice, any image control features will be turned off and returned to factory default settings.

4 - Common Tasks

Live Main Menu > Image Control > Image Brightness


Navigate to IMAGE BRIGHTNESS from the IMAGE CONTROL Menu and use the joystick to adjust the image brightness.

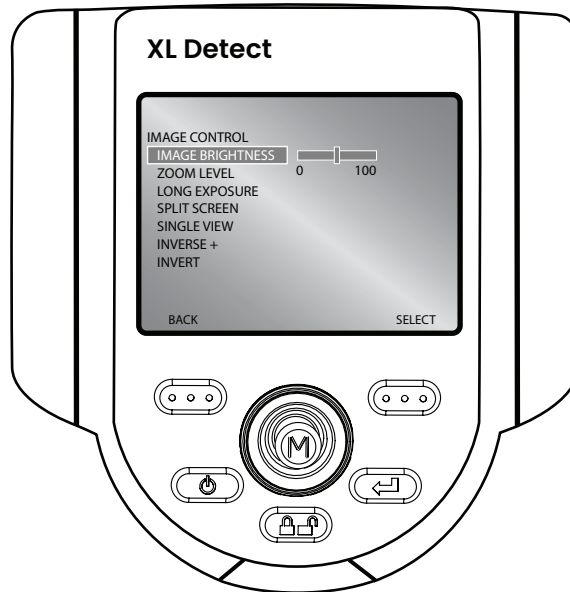

4 - Common Tasks

Live Main Menu > Image Control > Zoom Level

Navigate to ZOOM LEVEL from the IMAGE CONTROL Menu and use the joystick to adjust the zoom level. Digital zoom levels from 1x to 5x may be selected.

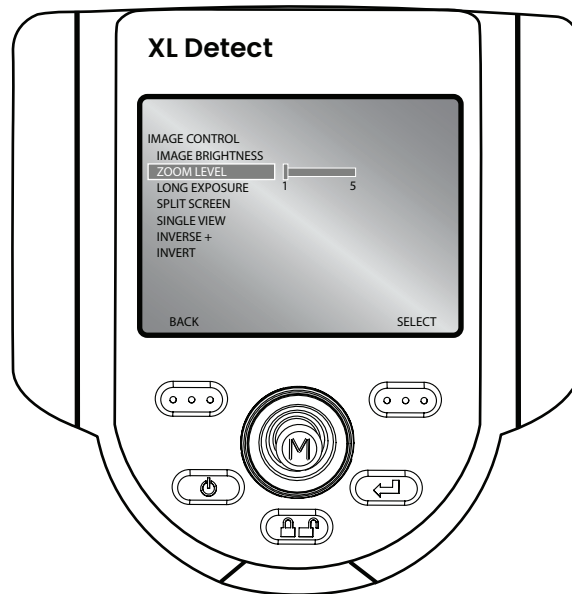


4 - Common Tasks


Live Main Menu > Image Control > Long Exposure

The XL Detect+ system can brighten the image by varying the exposure time. Keep the probe tip as still as possible when capturing an image with long exposure to minimize the risk of blurring.

Select LONG EXPOSURE to choose manual exposure, automatic long exposure, or to turn long exposure off. Long Exposure may be turned off in live video mode by pressing the  Power/Exit key.

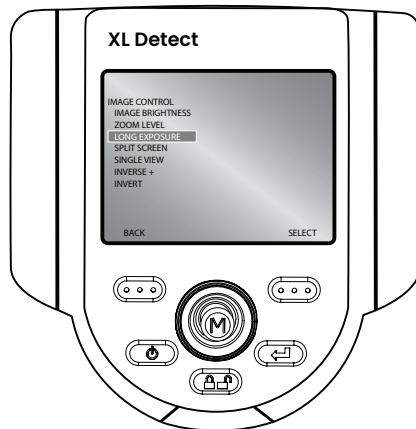


After selecting LONG EXPOSURE, the following options will be available:

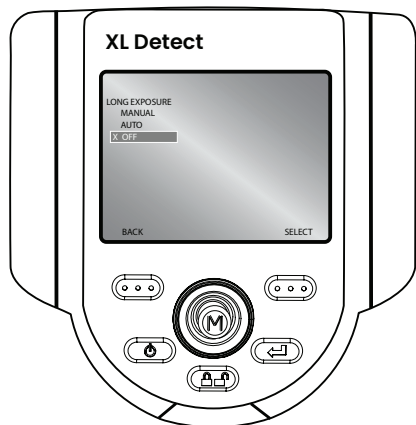

4 - Common Tasks

Live Main Menu > Image Control > Split Screen


From a live, frozen, or recalled image, press the joystick to access the LIVE MAIN MENU, FREEZE FRAME MENU or RECALLED IMAGE MENU. Navigate to SPLIT SCREEN and press the  right soft key to select. Choose the area of screen to view by moving the joystick left or right and using the  right soft key to select. The left image is frozen and the right image is live.

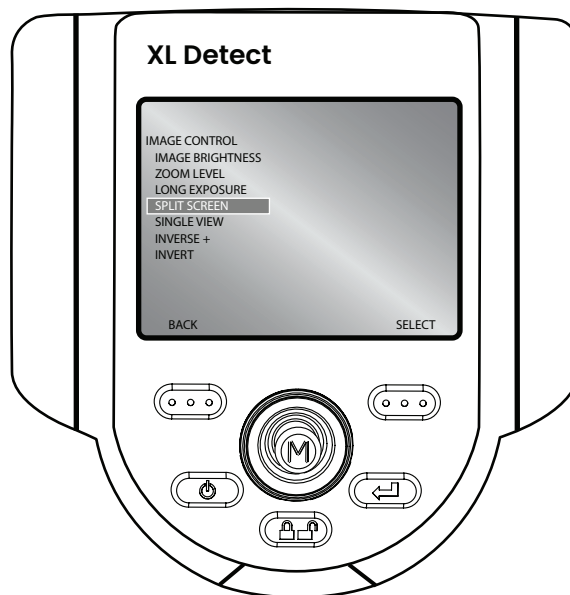

4 - Common Tasks

Live Main Menu > Image Control > Single View

Navigate to SINGLE VIEW from the IMAGE CONTROL MENU and select ON or OFF. Pressing the  Power/Exit key from live video will disable Single View.

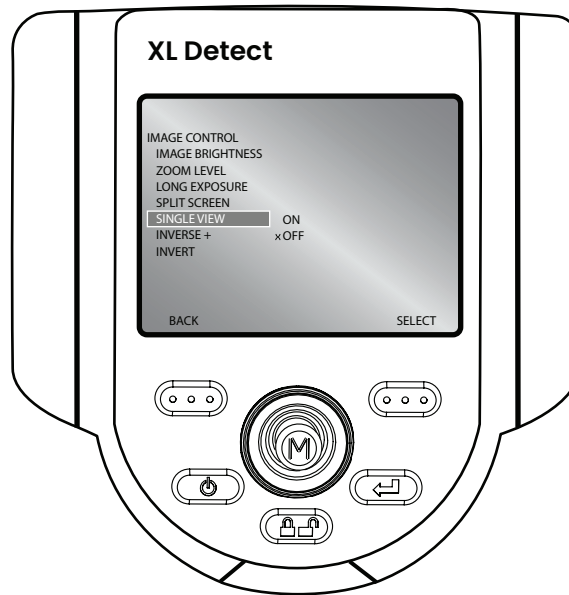


4 - Common Tasks

Live Main Menu > Image Control > Inverse +

Inverse + reverses the brightness like a photographic negative. It enhances the image contrast, making subtle details more visible.


To alter the contrast of an image, select INVERSE + from the IMAGE CONTROL MENU and select ON or OFF.

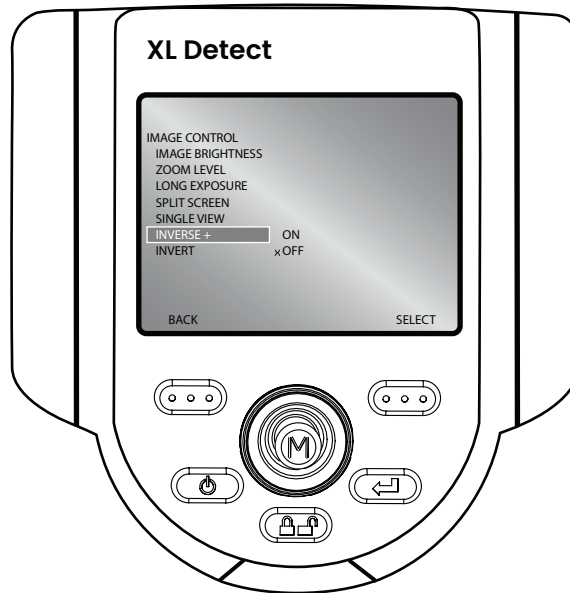

4 - Common Tasks

Live Main Menu > Image Control > Invert

The invert function flips an image horizontally. To activate or deactivate Invert, navigate to INVERT from the IMAGE CONTROL MENU and select ON or OFF.

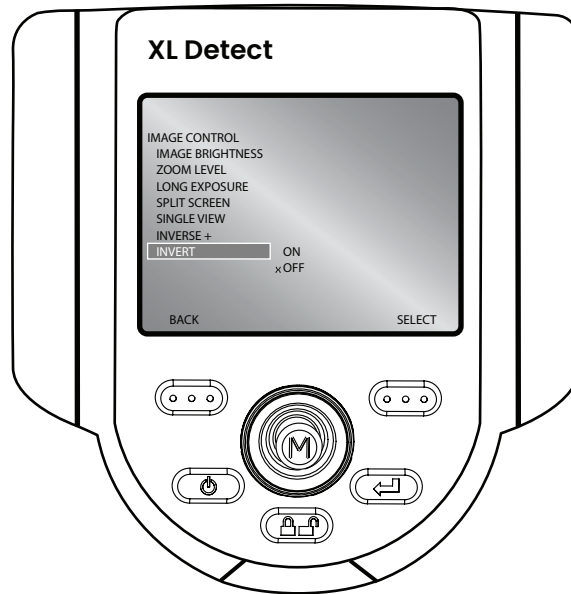


Note: This feature is most useful when using Sideview Optical Tips.

4 - Common Tasks

Live Main Menu > Annotation

Annotating an XL Detect+ image means adding text or arrows to describe or point out areas of interest: cracks, defects, etc. Annotation may be used on live, frozen, and recalled images.

To alter the annotation settings, press the joystick to activate the LIVE MAIN MENU and select ANNOTATION.

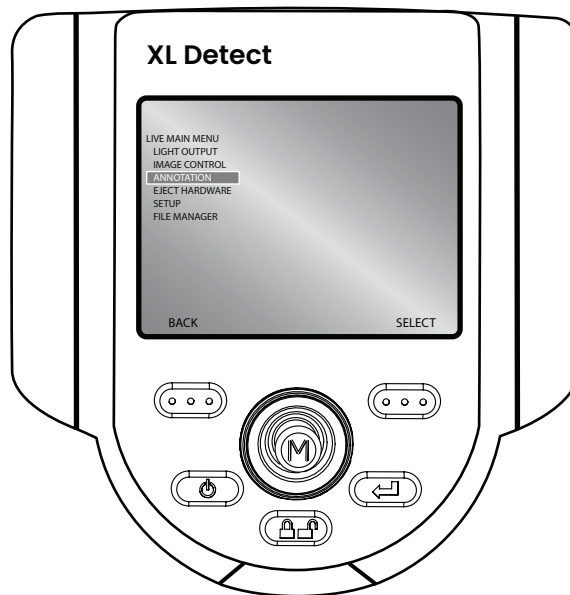



Note: There is a maximum of 3 lines of text/arrows per annotation.

Note: See the Freeze Frame Menu to enable Audio Annotation

4 - Common Tasks

Live Main Menu > Annotation > Text

To add, edit, or clear text on a specific image, select TEXT from the ANNOTATION menu.

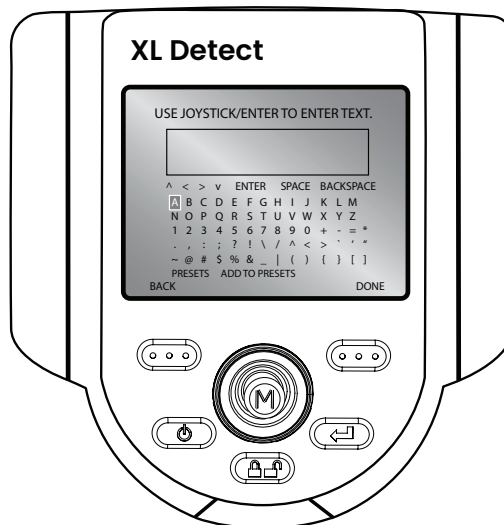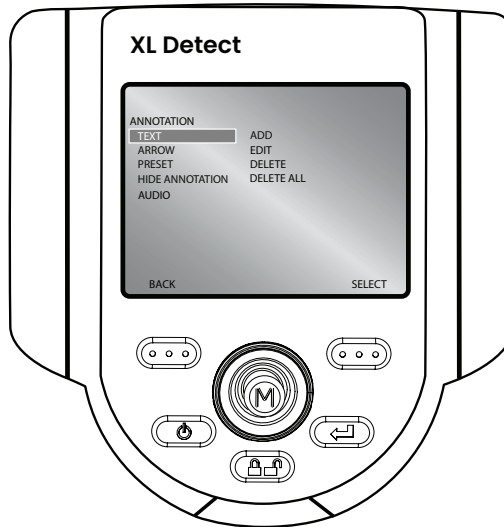


Note: Maximum number of text annotation characters is 50.

4 - Common Tasks

Live Main Menu > Annotation > Arrow

To add, edit or clear arrow on a specific image, select ARROW from the ANNOTATION menu.

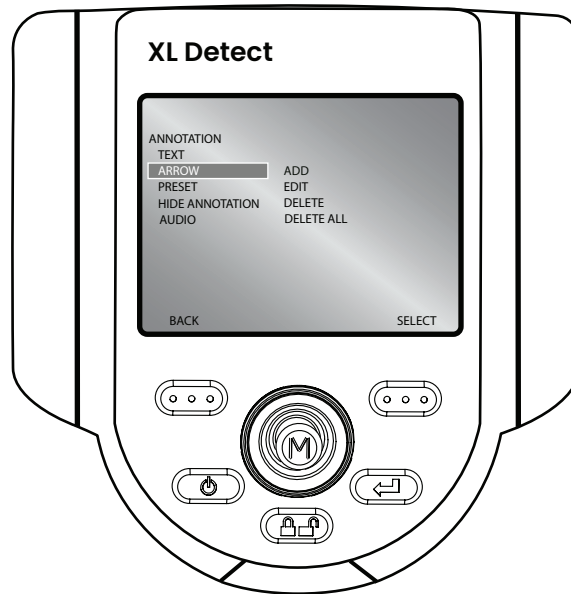

Note: Maximum number of arrow annotations is 25.

4 - Common Tasks

Live Main Menu > Annotation

Input Method Editors

The XL Detect+ supports text entry with advanced input methods for Simplified Chinese (Pinyin) and Japanese (Hiragana to Katakana/Kanji). To utilize these input methods the user must have an external keyboard connected to the VideoProbe. These input methods default as active when either Chinese or Japanese are selected as the system language. To return to an on-screen keyboard that does not utilize an input method, toggle the button that reads "Input Method -/O"

Chinese

The XL Detect+ supports the Pinyin text entry method. For each word or phrase that you wish to enter, please perform the following:

1. Using the external keyboard, type the Pinyin representation of the character to be entered.
2. Use the numbers on the external keyboard to select the desired character from the candidate list.
3. Press the enter key to confirm the selection.

Japanese

The XL Detect+ supports a text entry method that converts Hiragana to Katakana and Kanji characters. For each word or phrase you wish to enter, please perform the following:

1. Using the external keyboard, enter the Hiragana that make up the word being entered.
2. When all of the Hiragana that make up the word is entered, press the space bar on the external keyboard to get a candidate list of characters.
3. Use the numbers on the keyboard to select the desired word.
4. Press the enter key to confirm selection.


Note: If the desired word is not shown in the candidate list, press Page Up / Page Down on the keyboard to cycle through more options.

Note: A maximum of 6 Hiragana may be entered for each word or phrase for Japanese text entry.

4 - Common Tasks

Live Main Menu > Annotation > Preset

To create, recall or delete a preset annotation that will display throughout an inspection, choose PRESET from the ANNOTATION menu. To load or export a file containing presets, choose PRESET from the ANNOTATION menu.

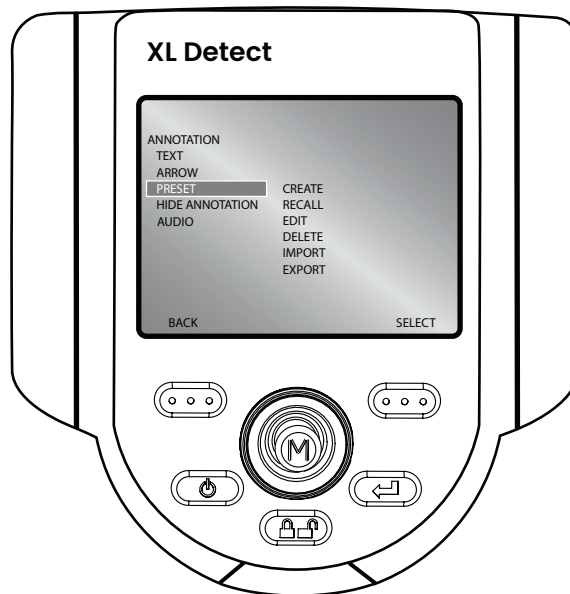


Note:

- Maximum number of preset annotations is 100
- Preset files must be line-delimited .txt files
- The maximum preset length is calculated by character width (approximately 28 characters).

4 - Common Tasks

Live Main Menu > Annotation > Hide Annotation

To hide or unhide an annotation, select HIDE ANNOTATION from the ANNOTATION menu followed by ON or OFF.

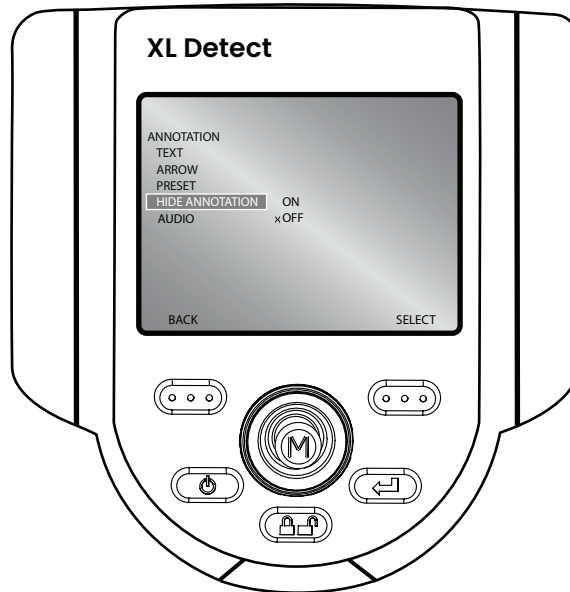


4 - Common Tasks

Live Main Menu > Annotation > Loading a Preset

To load a file containing multiple presets onto the XL Detect+, a file may be created on a PC. This file must conform to the following:

- Line-delimited (each preset must be on a separate line)
- File Type - .txt
- Encoding - UTF8
- Recommended Program - Microsoft™ Notepad

At the time of saving the document, select .txt as the file type and UTF-8 as the encoding. See example below.

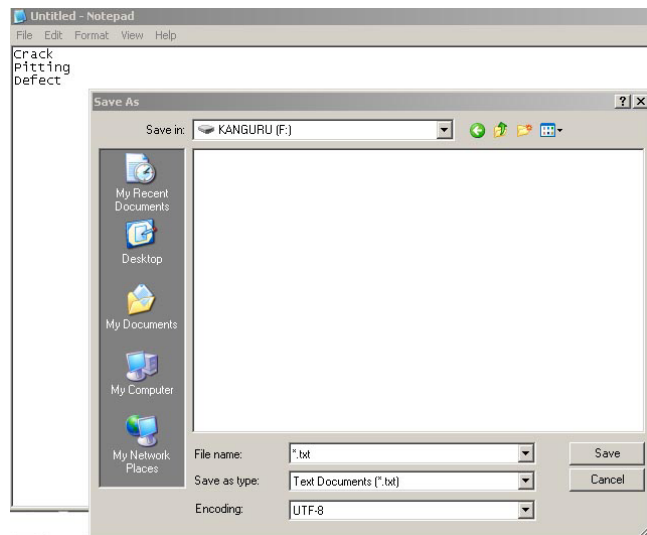


Loading the File

1. Save the Preset.txt file onto external media(CF Card, USB ThumbDrive, etc).
2. Insert the external media into XL Detect+.
3. Access the LIVE MAIN MENU by pressing joystick.
4. Select ANNOTATION.
5. Select PRESET > LOAD.
6. Locate the file that you have created.

4 - Common Tasks

Live Main Menu > Eject Hardware

To eject USB thumb drives before removal, use the joystick to navigate to the right of EJECT HARDWARE and select the appropriate drive using the right soft key labeled SELECT.

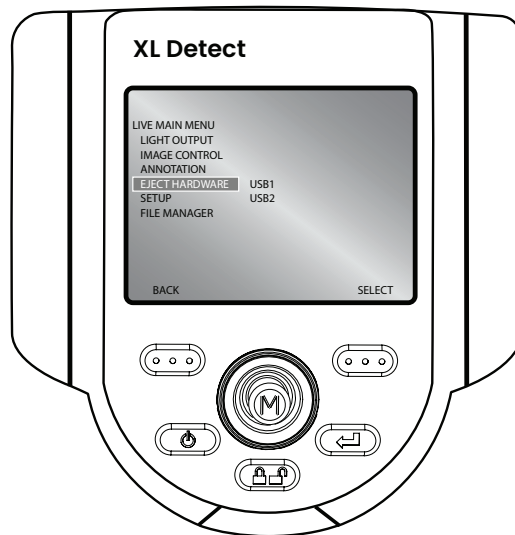


Note: Always use EJECT HARDWARE before removing a USB thumbdrive to prevent loss of data.

4 - Common Tasks

Live Main Menu > Setup

To change default settings, select SETUP. For more information see SYSTEM SETUP Section in the Operation Chapter.

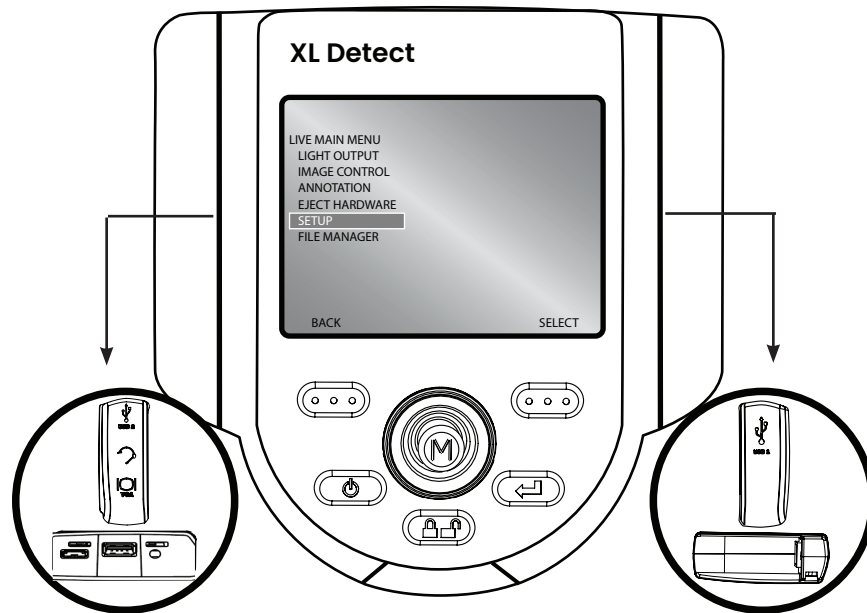

4 - Common Tasks


5 - Operation

Live Main Menu > Setup

The System Setup Menu accesses the default settings. To exit any menu, press  Power/Exit.

Live Main Menu > Setup > Screen/Display Setup


To alter the display setup, press the joystick to activate the LIVE MAIN MENU. Select SETUP followed by SCREEN/DISPLAY.

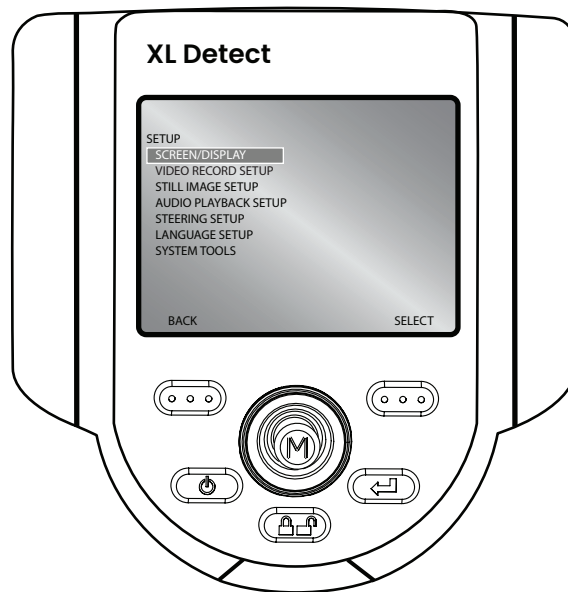

5 - Operation

Live Main Menu > Setup > Screen/Display > Battery Icon


To enable and disable the battery icon, select BATTERY ICON followed by ON or OFF.

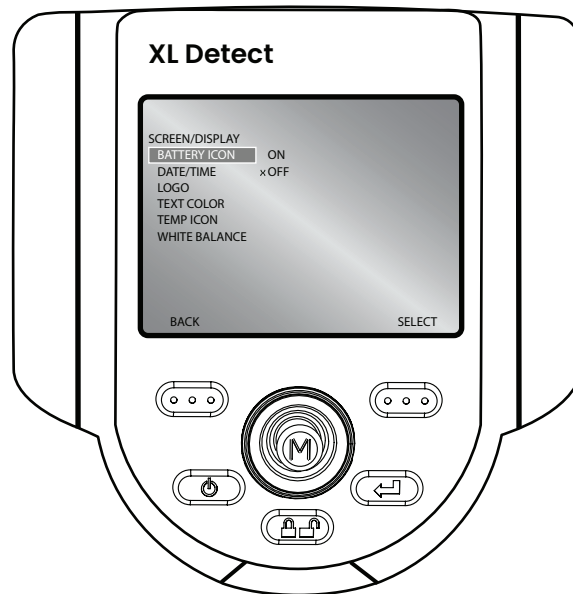


5 - Operation

Live Main Menu > Setup > Screen/Display > Date / Time

To enable or disable the date/time stamp, as well as set the date and time, select DATE/TIME from the SCREEN/DISPLAY menu.

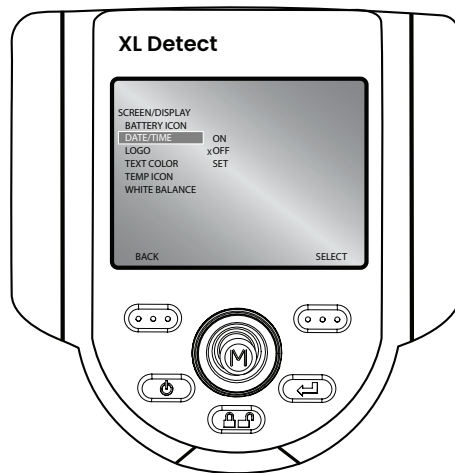


To change date format between MM/DD/YYYY and DD/MM/YYYY, select the Month, Day, Year format and move the joystick up or down to select preferred format. Select OK when finished.

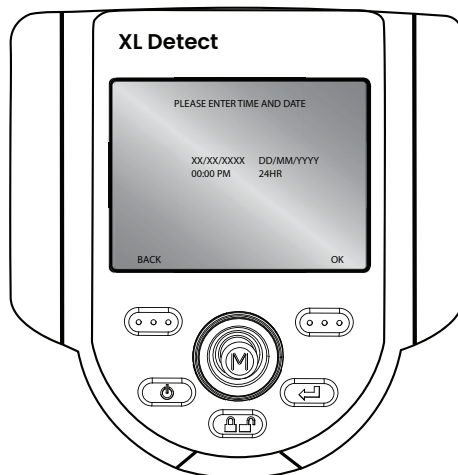

5 - Operation

Live Main Menu > Setup > Screen/Display > Logo

A logo may be added to the screen. The file name “logo.jpg” must be used. To load a logo, or to turn a logo on or off, select LOGO from the SCREEN/DISPLAY menu and select the desired option.

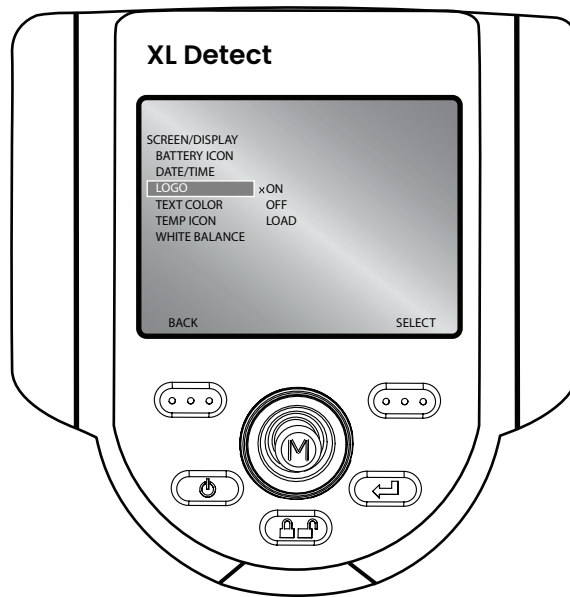


Note: See Appendix G for details on creating a logo file.

5 - Operation

Live Main Menu > Setup > Screen/Display > Text Color


The most legible text color will vary with the coloring and brightness of the image. To change the color of the text displayed over images, select TEXT COLOR followed by GREEN, BLACK, or WHITE.

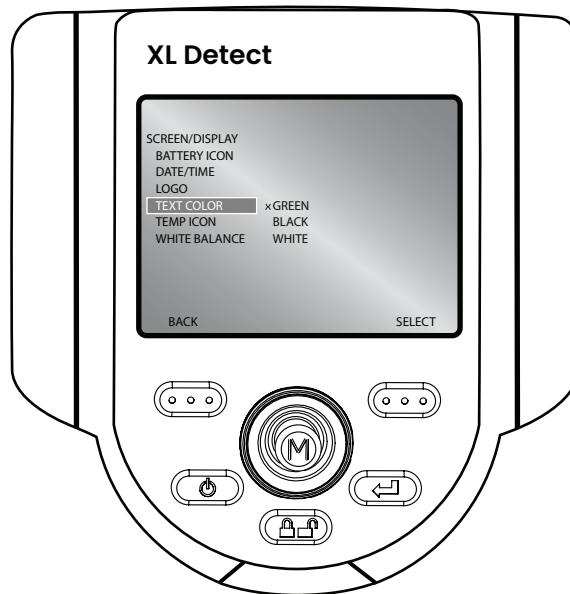

5 - Operation

Live Main Menu > Setup > Screen/Display > Temp Icon

To enable or disable the temperature icon, select TEMP ICON from the SCREEN/DISPLAY menu.

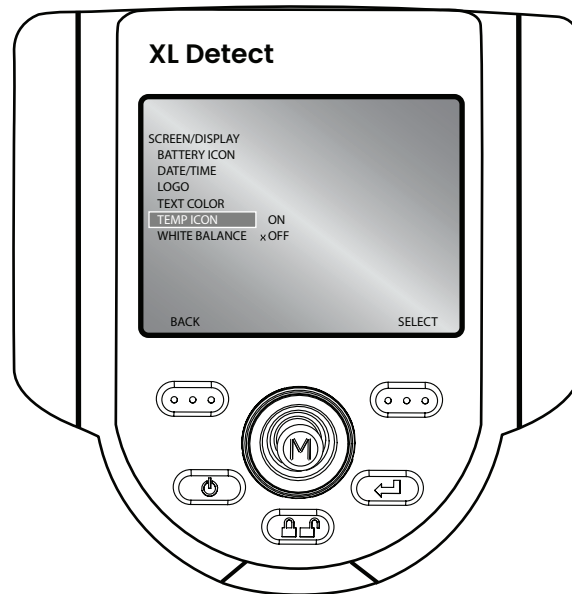


5 - Operation

Live Main Menu > Setup > Screen/Display > White Balance

White balance corrects color so white appears white despite any slight hues that may be present under varying lighting and ambient conditions.


To execute white balance, select WHITE BALANCE from the SCREEN/DISPLAY menu. Options are to set a custom white balance or use the default settings.

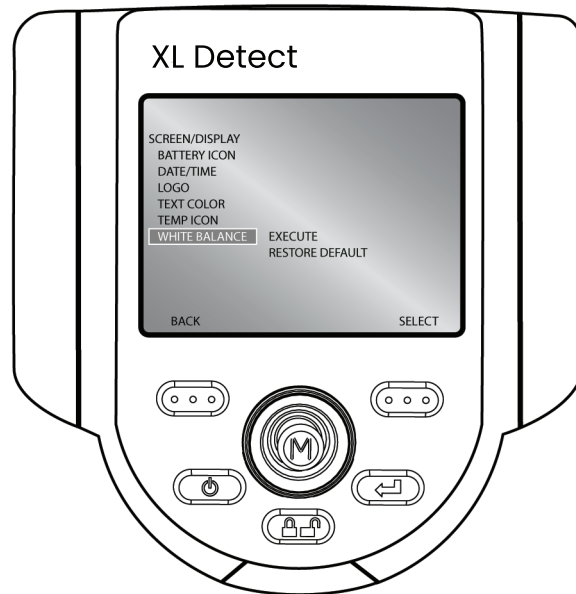

5 - Operation

Live Main Menu > Setup > Video Record Setup


To change video record defaults, press the joystick to activate the LIVE MAIN MENU. Select SETUP followed by VIDEO RECORD SETUP.

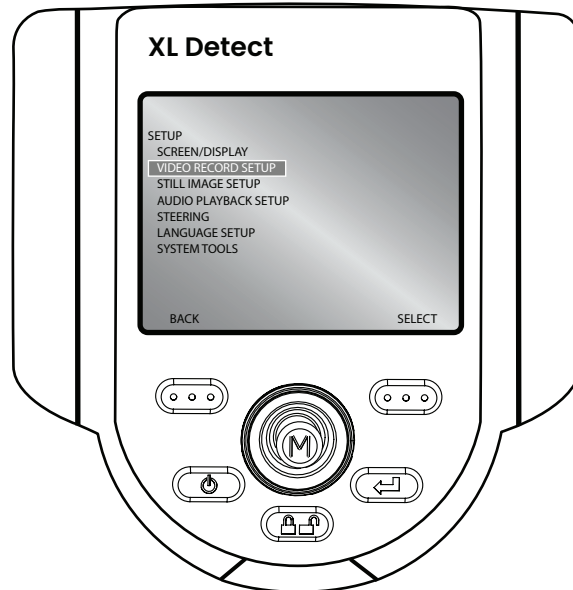

5 - Operation

Live Main Menu > Setup > Video Record Setup > Save Location


Select SAVE LOCATION from the VIDEO RECORD SETUP menu and navigate to the desired location.

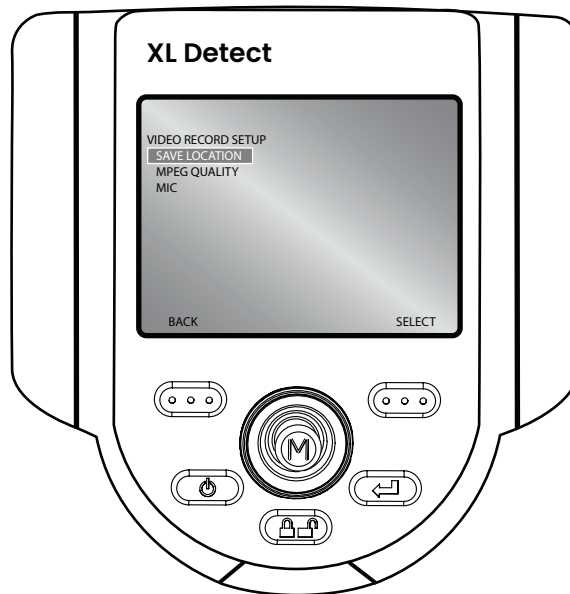

5 - Operation

Live Main Menu > Setup > Video Record Setup > MPEG Quality

To set the video quality, select MPEG QUALITY from the VIDEO RECORD SETUP menu followed by LOW or HIGH.

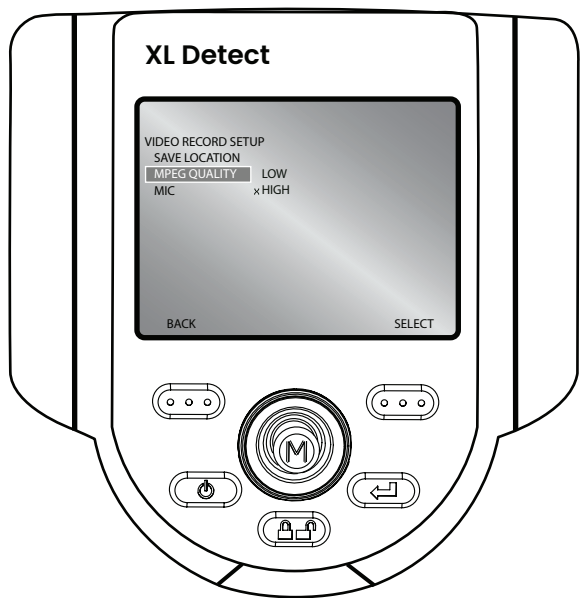


MPEG Quality	Recording Rate	16GB thumb drive ~minutes of video
MPEG-4 High	30MB/min	~266 minutes
MPEG-4 Low	15MB/min	~532 minutes

5 - Operation

Live Main Menu > Setup > Video Record Setup > MIC

To turn an external mic on or off, select MIC from the VIDEO RECORD SETUP menu followed by ON, MUTE, or DISABLED.


Note: The XL Detect+ does not have a built in mic.

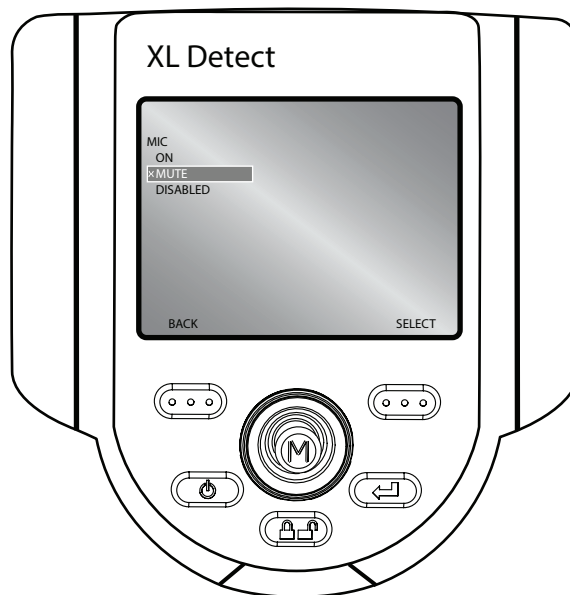

5 - Operation

Live Main Menu > Setup > Still Image Setup


To change still image defaults, press the joystick to activate the LIVE MAIN MENU. Select SETUP followed by STILL IMAGE SETUP.

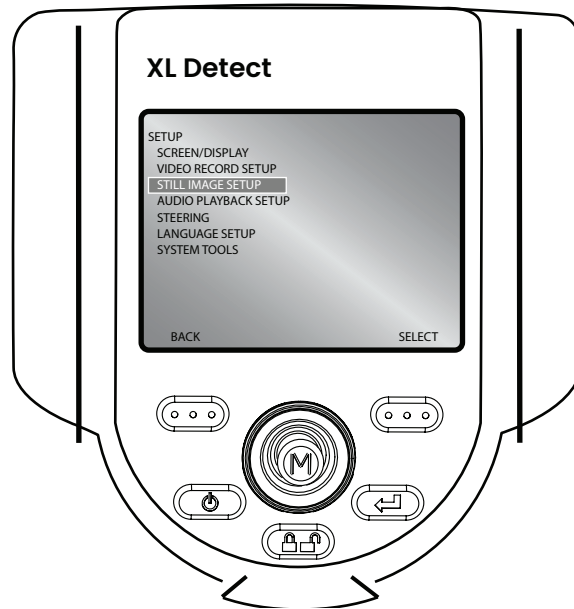

5 - Operation

Live Main Menu > Setup > Still Image Setup > Save Location


Select SAVE LOCATION from the STILL IMAGE SETUP menu and use the joystick to navigate to the desired location.

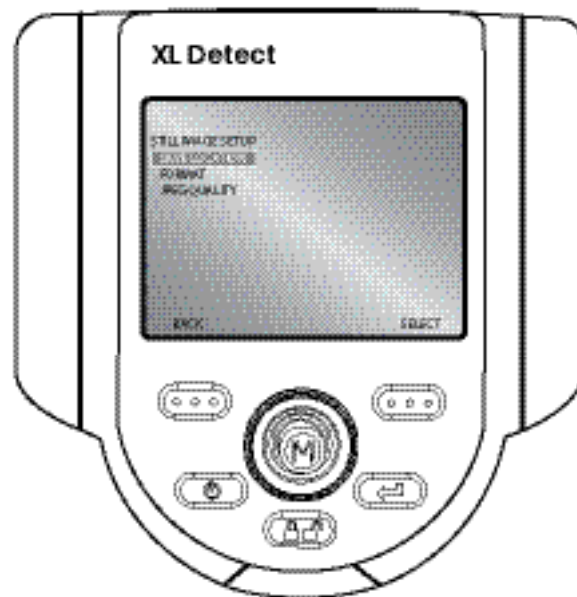

5 - Operation

Live Main Menu > Setup > Still Image Setup > Format

To choose the image format [Bitmap (BMP) or JPEG (JPG)], navigate to the right of FORMAT and select BMP or JPG.

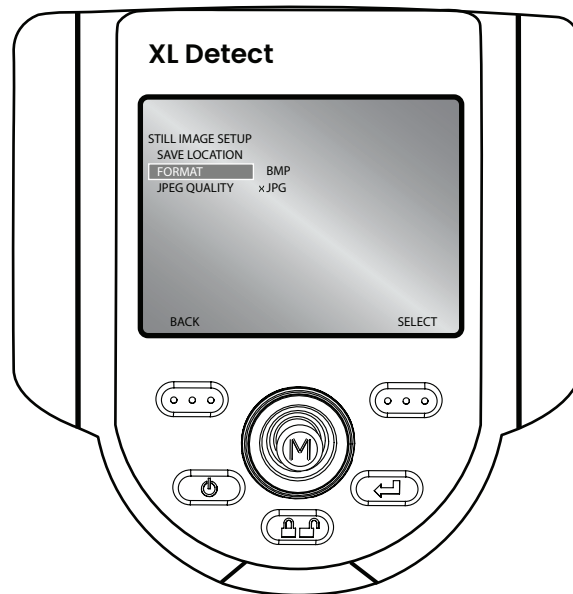


Bitmap images are the highest quality images that can be saved; however, they are also the largest files size.

5 - Operation

Live Main Menu > Setup > Still Image Setup > JPEG Quality

To choose JPEG quality, the user must first select JPEG image format. Once selected, navigate to the right of JPEG QUALITY and select LOW or HIGH.

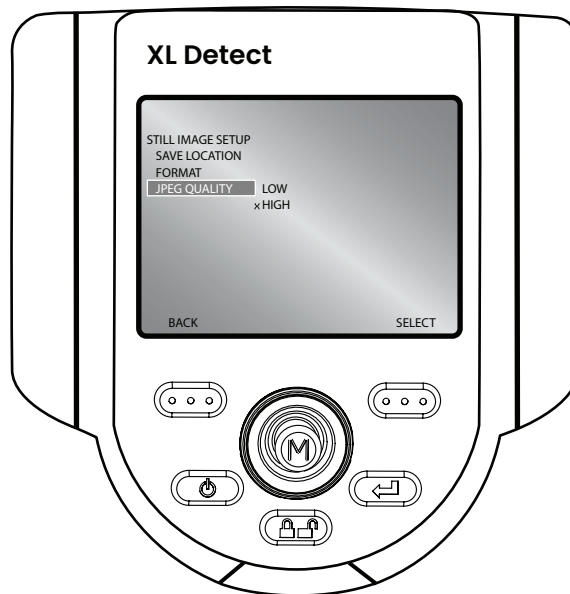


JPEG images are a compressed file format. They create smaller file sizes than bitmap images.

5 - Operation

Live Main Menu > Setup > Audio Playback Setup

To change audio defaults, press the joystick to activate the LIVE MAIN MENU. Select Setup followed by AUDIO PLAYBACK SETUP.

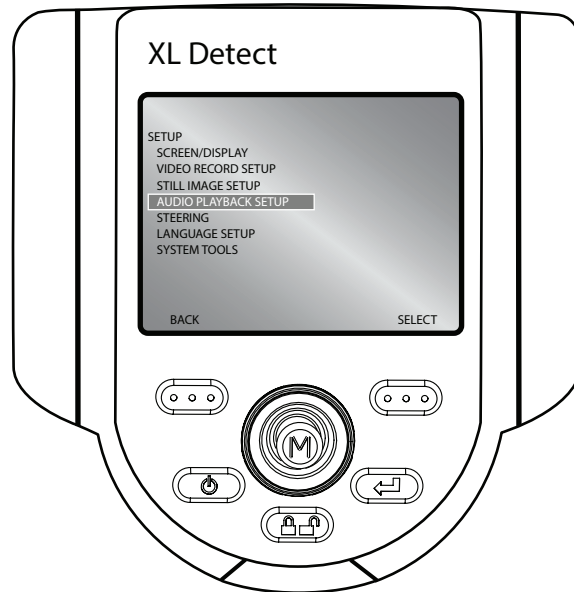


Note: To PLAY, RECORD OR DELETE AUDIO ANNOTATION, press the Joystick from a frozen image. Select ANNOTATION followed by AUDIO.

Note: XL Detect+ does not have a built in microphone, you must attach an external mic in order to record audio annotation.

5 - Operation

Live Main Menu > Setup > Audio Annotation Setup > Playback Volume

To set the playback volume, select PLAYBACK VOLUME from the AUDIO ANNOTATION SETUP menu. Use the joystick to control the volume from 0 to 10.

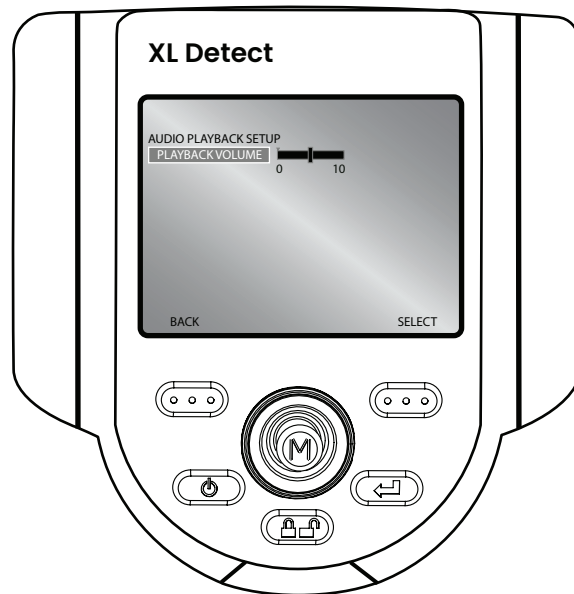


Note: XL Detect+ does not have a built in speaker, you must attach an external headset in order to playback audio annotation.

5 - Operation

Live Main Menu > Setup > Steering Setup > Steering


To manage probe articulation, select the steering increment. Options are *COARSE* or *FINE*.

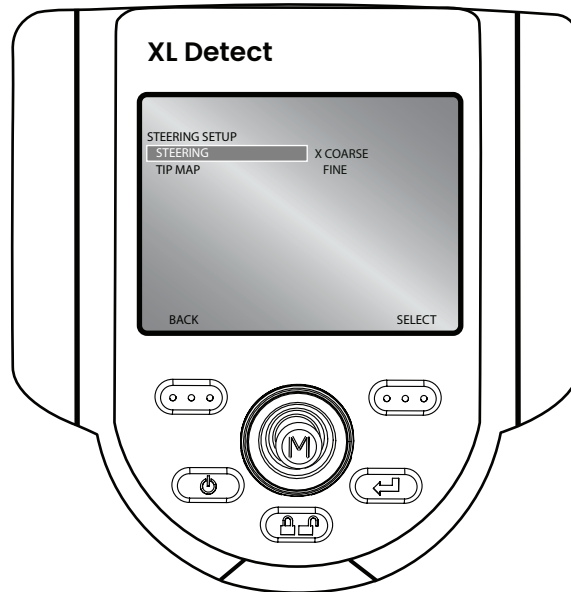

5 - Operation

Live Main Menu > Setup > Steering Setup > Tip Map


Tip Map is a grid that indicates probe-tip position. To turn Tip Map ON or OFF, select STEERING SETUP from the SETUP menu followed by TIP MAP.

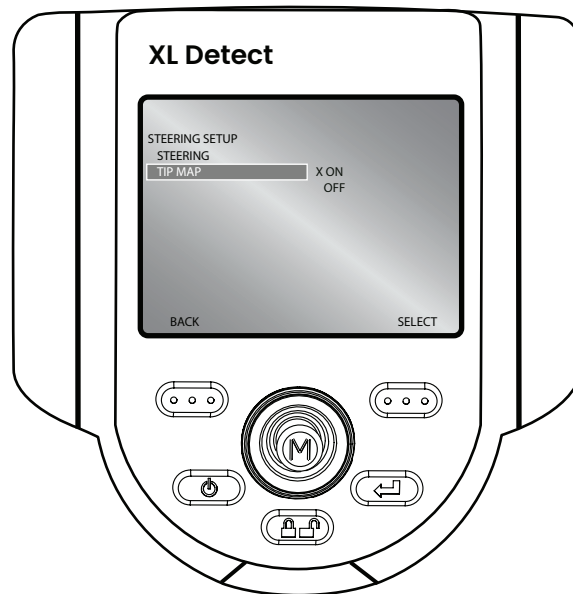

5 - Operation

Live Main Menu > Setup > Language Setup

To load or change the system language or external keyboard, select LANGUAGE SETUP from the SETUP menu followed by the appropriate language.

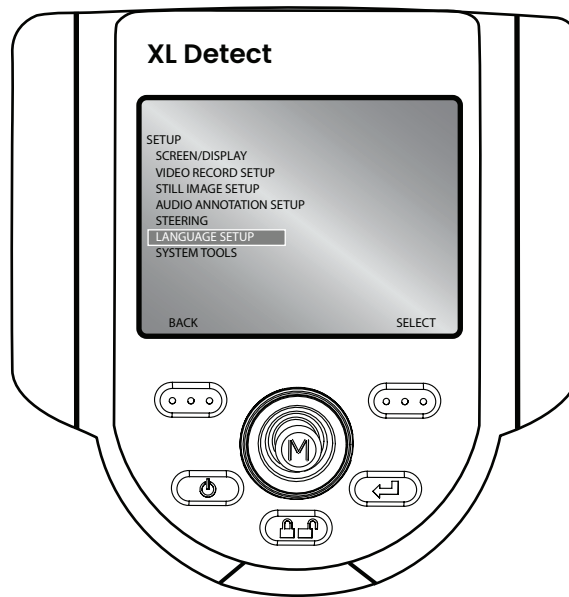


The following options are available:

- LOAD
- CHANGE
- KEYBOARD SETUP

5 - Operation

Live Main Menu > Setup > System Tools


To view system information or adjust power management, select SETUP from the LIVE MAIN MENU followed by SYSTEM TOOLS.

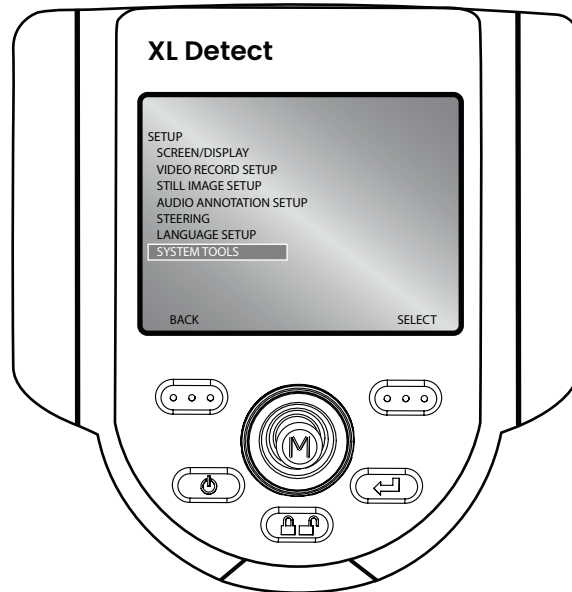

5 - Operation

Live Main Menu > Setup > System Tools > System Info


To view system information such as the software version or the amount of free disk space, select SYSTEM INFORMATION from the SYSTEM TOOLS menu.

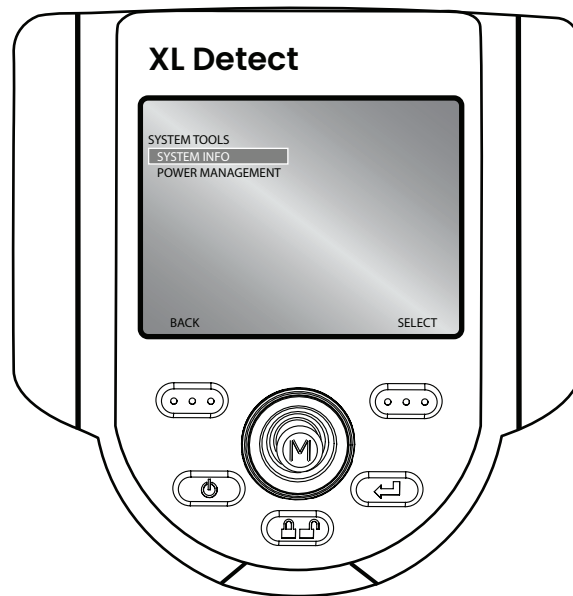

5 - Operation

Live Main Menu > Setup > System Tools > Power Management

Power management enables a sleep mode / auto off to save battery power. To enable or disable power management, select POWER MANAGEMENT from the SYSTEM TOOLS menu followed by ON or OFF.

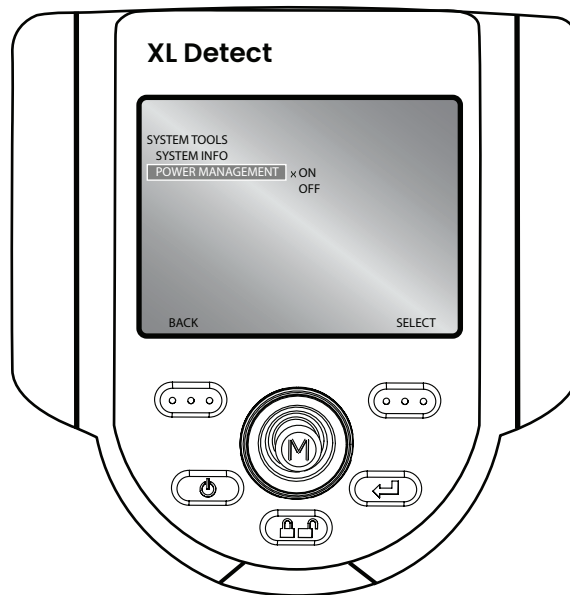

Sleep Mode

Occurs automatically under battery power if no buttons have been activated for 15 minutes. Sleep mode is indicated by the push button lights flashing in a rotating circle around the joystick.


Auto Off

If sleep mode is not interrupted by any button or joystick activation within 15 minutes the system will power off to conserve battery.

5 - Operation

Live Main Menu > File Manager

To manage files and folders on the XL Detect+ VideoProbe system, select FILE MANAGER with the joystick. For more details refer to the FILE MANAGEMENT section in the Operation Chapter.

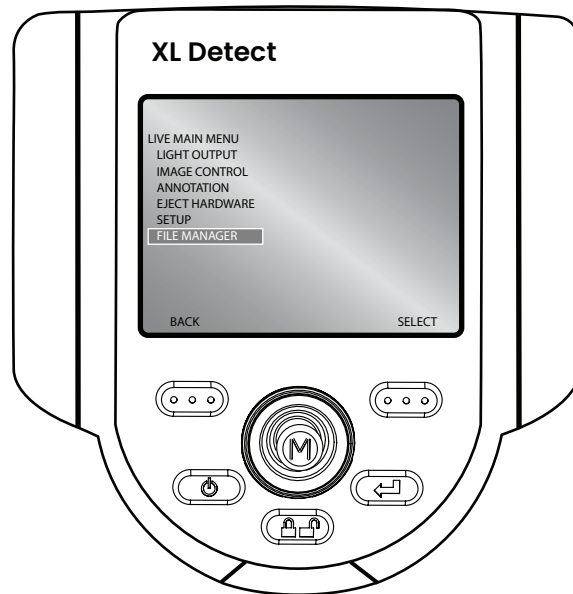

5 - Operation

Capturing Images and Video


Steering the VideoProbe

The joystick controls articulation (steering) of the probe tip. When viewing a live video image, move the joystick towards the desired inspection area.

Articulation Lock

To hold the bending neck in place while steering, press and release the  Steering Control key. A  lock icon will appear in the corner of the display to symbolize steer and stay is enabled. The probe will now stay in place when the joystick is released.

To unlock steering, press and release  Steering Control again. The  lock icon will disappear.

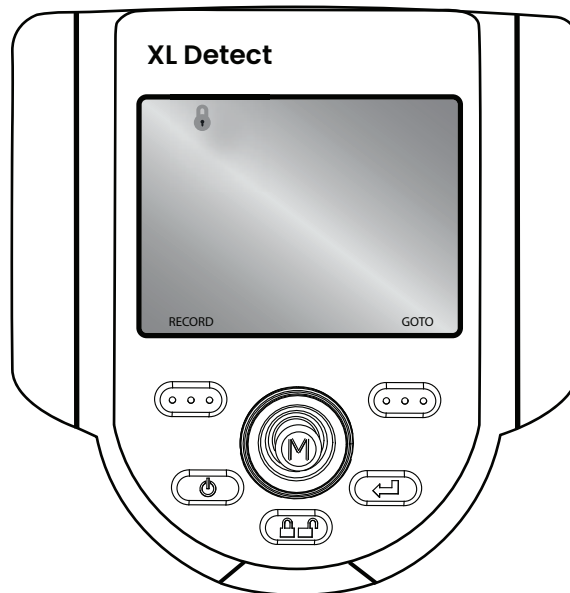


Note: While articulation lock is enabled, the XL Detect+ will steer in fine articulation mode.

5 - Operation

Articulation Home

Press and hold  to engage HOME function to straighten bending neck. A blinking  home icon will appear on LCD when enabled.

 HOME icon will disappear when system is finished.

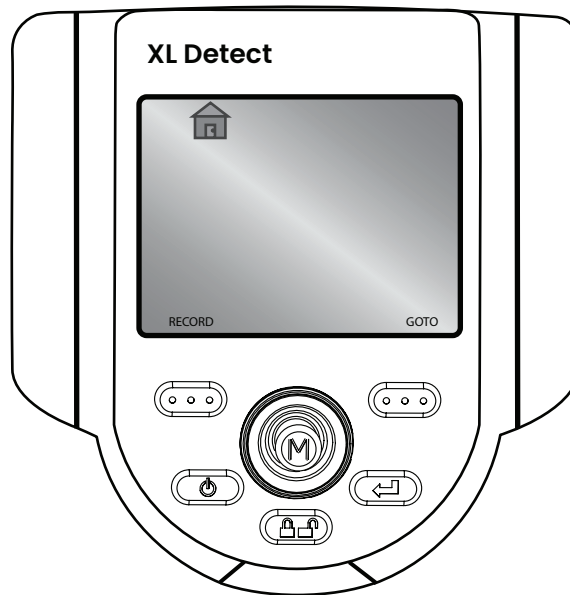


Note: It is recommended that a home operation is performed before withdrawing the camera from the asset being inspected, to avoid getting the camera stuck in the asset or damaging the XL Detect+.

5 - Operation

Freeze Frame

To freeze an image, press  Freeze/Enter. An “FF” will appear in the upper right corner of the display to symbolize that the image is frozen.


To disable Freeze Frame, press  Freeze/Enter again. The “FF” will disappear.

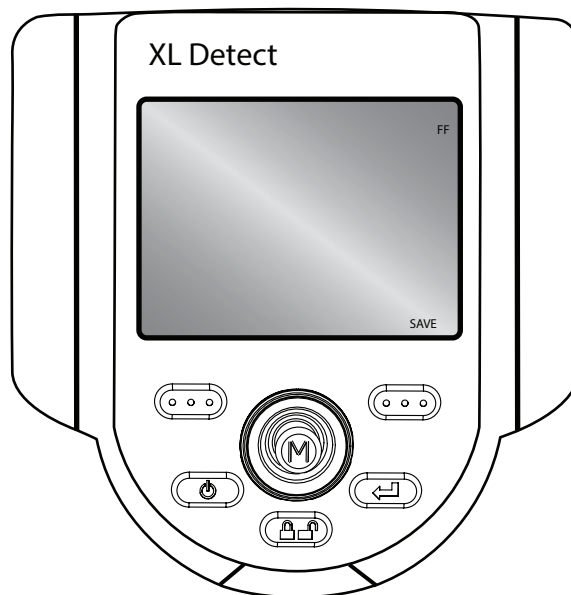

5 - Operation

Freeze Frame Menu

Once Freeze Frame is enabled, press the joystick to enter the FREEZE FRAME MENU.

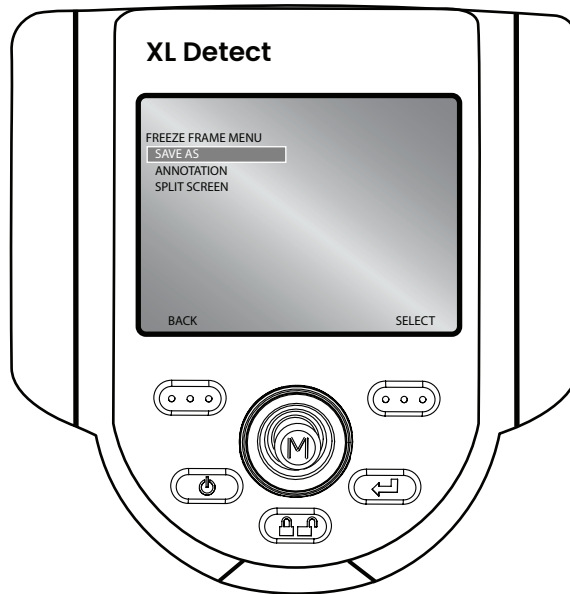


The following options are available:

- SAVE AS
- ANNOTATION
- SPLIT SCREEN

5 - Operation

Freeze Frame Menu > Annotation

To add, edit or delete an annotation, or to play, stop or pause an audio annotation, select ANNOTATION from the FREEZE FRAME MENU.

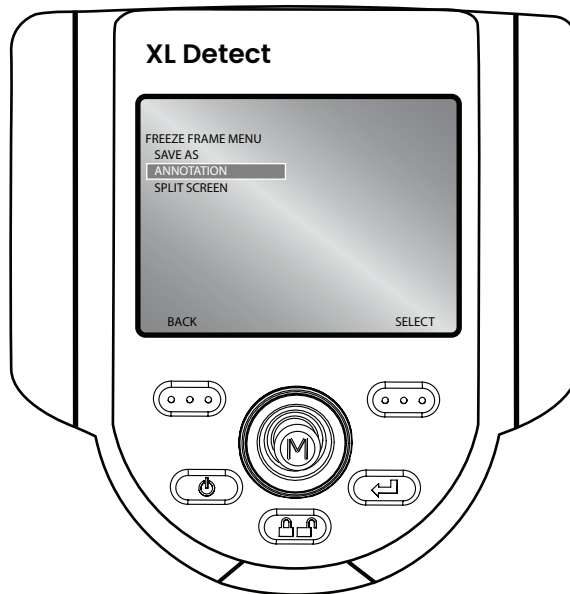

The following options are available:

- TEXT
- ARROW
- PRESET
- HIDE ANNOTATION
- AUDIO

5 - Operation

Still Image Capture and Playback

To save/capture a still image if freeze frame is enabled, press the  right soft key with SAVE on the LCD above to save to the default location. Alternately, press and hold  Freeze/Enter to auto-save.

Video Recording and Playback

To record live video, press the  left soft key labeled RECORD on the LCD above. A record symbol will appear in the upper right hand corner. When the video is stopped, it will automatically save to the default location.

To view recorded videos on a PC, use either QuickTime or VLC software. Both are included with the system, located on the documentation CD.



QuickTime



Still Image Capture During Video Recording

To capture a still image during video recording, pause the video using the  left soft key, press the  Freeze/Enter button to capture the image, press  right soft key to save the image, and press  Exit to resume video recording.


5 - Operation

File Manager

To access the FILE MANAGER, press the joystick to activate the LIVE MAIN MENU. Navigate to FILE MANAGER and select.

Recalling a File


To recall a file, select RECALL. Move the joystick to the right to locate the file(s) and use the  right soft key to select.

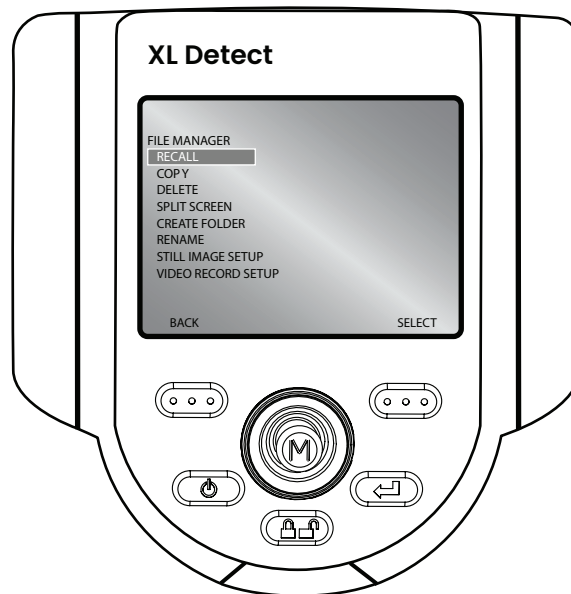

5 - Operation

Recalled Image Menu

After recalling an image, press the joystick to activate the RECALLED IMAGE MENU

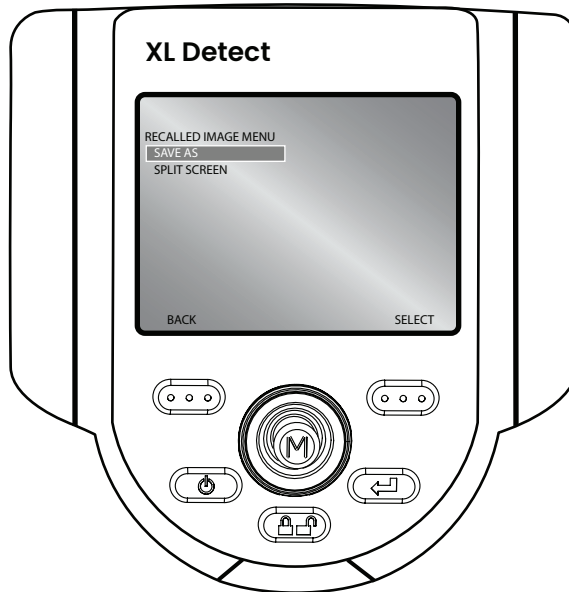


The following options are available:

- SAVE AS
- SPLIT SCREEN

5 - Operation

Video Playback Menu

To navigate a recalled video, either press the joystick left (rewind) or right (fast forward) or press the left  soft key to pause the video and then press the joystick left or right. If navigating a paused video, press the left  soft key to resume playback.

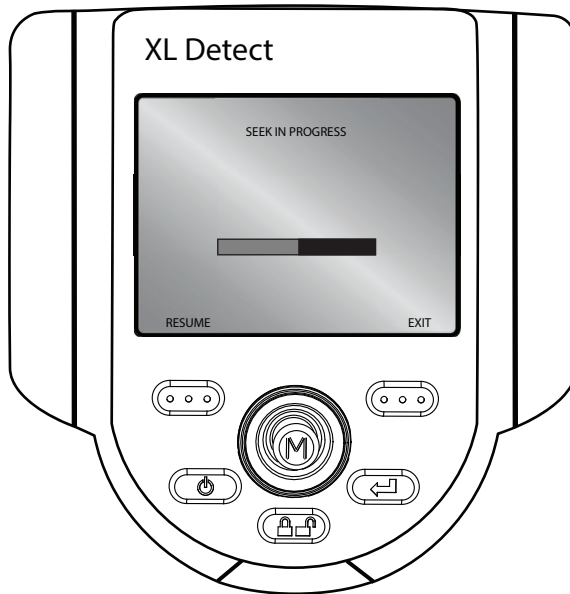


5 - Operation

Copying Files/Folders

To copy a file, select COPY. Move the joystick to the right to locate the file(s) and use the  right soft key to mark/unmark. Press  Freeze/Enter to copy.


Choose the destination for the copied file. Use the joystick to navigate to the desired folder. Press  Freeze/Enter to paste the copied file.

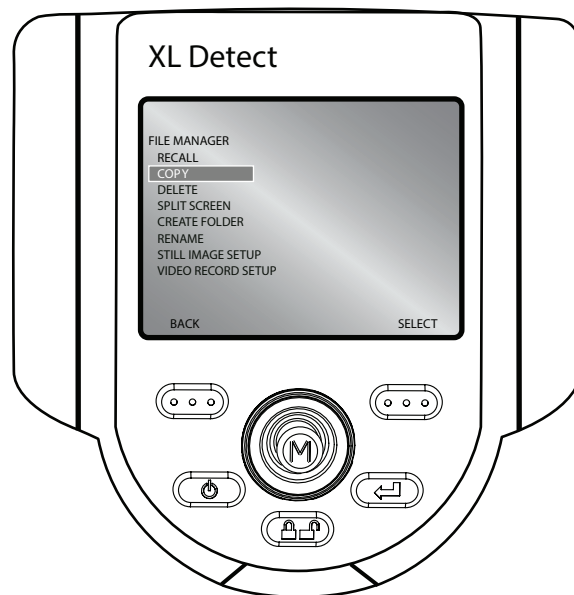

5 - Operation

Deleting Files/Folders


To delete a file, select DELETE FILE. Move the joystick to the right to locate the file(s) and select. Press  Freeze/Enter to delete.

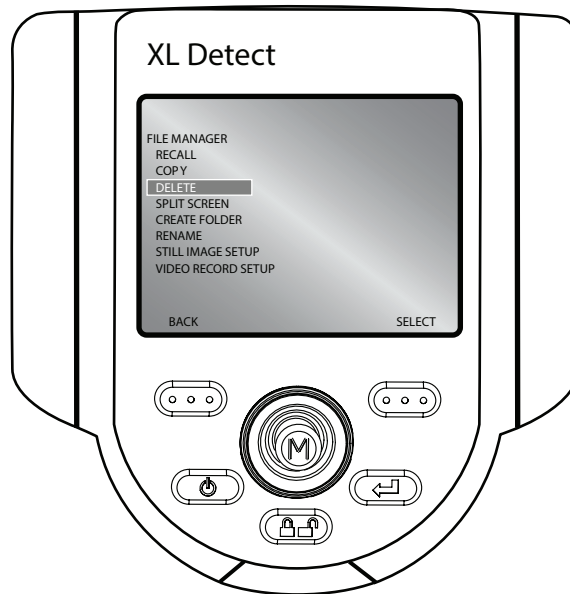

5 - Operation

Creating a Folder


To create a folder, select CREATE FOLDER. Select the location of the folder. Use the joystick to highlight and  Freeze/Enter to select each letter. When done, press the  right soft key to save the folder name.

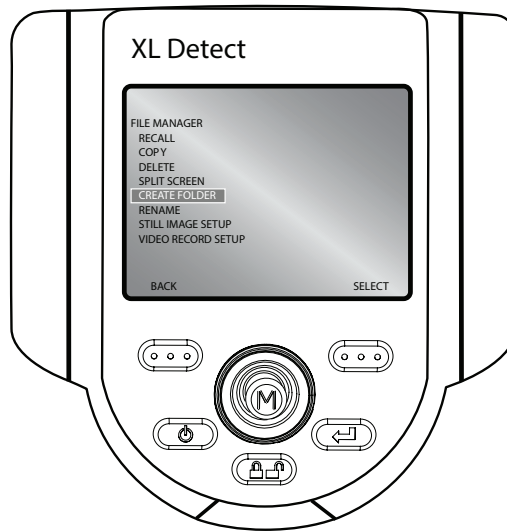

5 - Operation

Renaming Files/Folder

To rename a file, select RENAME. Navigate to the desired file/folder and use the  right soft key to select. Use the joystick to highlight and  Freeze/Enter to select each letter. When finished, press the  right soft key to save the file name.

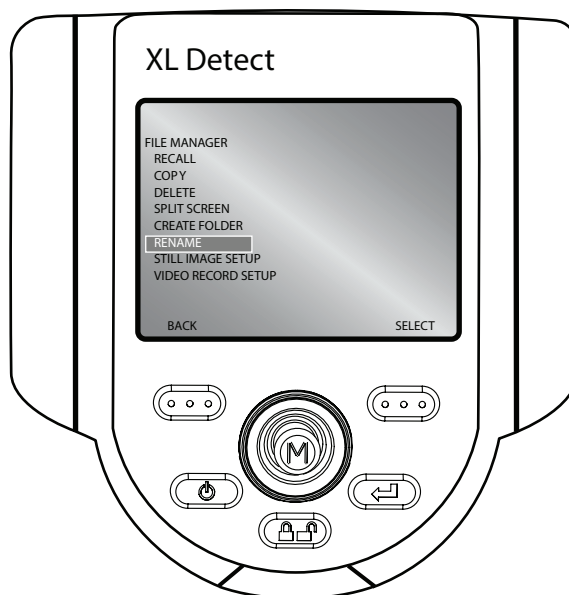

6 - Maintenance

Inspecting and Cleaning the System


Inspect and clean the XL Detect+ system before and after each use with a soft cloth and a 70% alcohol-to-water solution. If using the system in a dirty environment, clean the components more frequently, as needed.

If damage is found, contact Waygate Technologies for return instructions and an RMA (return material authorization) number. Early detection of minor conditions can prevent costly repair.

Cleaning Optical Tips

Dirty optical tip surfaces cause distorted or blurred images. For best image quality, clean the optical tip and camera head frequently.

To clean the probe tip, including the lens on the camera head, use glass cleaner or 70% alcohol-to-water solution and a pointed cotton swab. Three surfaces need cleaning: the head can optics, the outside of the tip, and the inside of the tip.

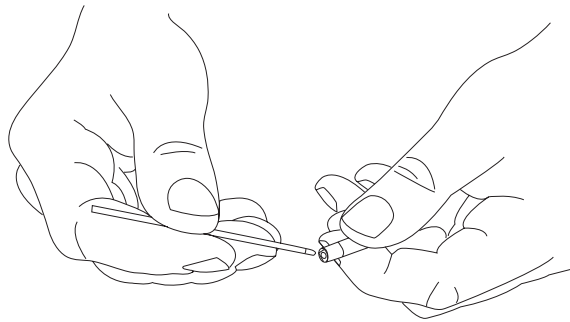

6 - Maintenance

Service

To obtain service for a VideoProbe system, please contact one of the service centers below. If the problem cannot be corrected over the phone, a Return Materials Authorization number (RMA) will be given along with instructions for shipment to an authorized service center.

Always contact an authorized Waygate Technologies service center for an RMA prior to returning a product for service and/or repair.

North/South America

Waygate Technologies
721 Visions Drive
Skaneateles, NY 13152
Tel: 888-332-3848
315-554-2000 ext. 1

Europe

Baker Hughes Digital Solutions GmbH
7 Robert Bosch Str. 3
50354 Huerth
Germany
Tel: +49 2233 601 111 Ext. 1

Asia/Pacific

Baker Hughes Solutions Pte. Ltd.
10 Lok Yang Way
Singapore 628631
Phone: +65 62135500

China

Baker Hughes Sensing & Inspection Co., Ltd.
No. 8 Xi hu Road, Wu jin high-tech zone
Changzhou, Jiang Su 213164
China
Tel: + 86 400 818 1099

Russia

Baker Hughes Rus Infra LLC
Industrial Park "Rosva"
Rosva Kaluga, 248001, Russia
Phone: +7 4842 716 576

7 - Technical Specifications

Product Specifications:

Operating Temperature	XL Detect	XL Detect+
Tip	-25°C to 100°C (-13°F to 212°F) Reduced articulation below 0°C (32°F)	-25°C to 100°C (-13°F to 212°F) Reduced articulation below 0°C (32°F)
System	-20° to 46° C (-4°F to 115°F) LCD requires warm-up period below 0°C (32°F)	-20° to 46° C (-4°F to 115°F) LCD requires warm-up period below 0°C (32°F)
Storage Temperature	-25° to 60° C (-13°F to 140°F)	-25° to 60° C (-13°F to 140°F)
Relative Humidity	95% max, non-condensing	95% max, non-condensing
Waterproof	Insertion tube and tip to 14.7 psi (1 bar, 10.2m of H ₂ O, 33.5 ft of H ₂ O)	Insertion tube and tip to 14.7 psi (1 bar, 10.2m of H ₂ O, 33.5 ft of H ₂ O)
Hazardous Environments	Not rated for use in hazardous environments.	Not rated for use in hazardous environments.
Camera		
Diameter Probe	6.1 mm (0.24") 8.4 mm (0.33")	6.1 mm (0.24") 8.4 mm (0.33")
Image Sensor	1/6" Color SUPER HAD™ CCD camera	1/6" Color SUPER HAD™ CCD camera
Pixel Count	440,000 pixels	440,000 pixels
Housing	Titanium	Titanium
Diameter Probe	4.0 mm (0.16")	4.0 mm (0.16")
Image Sensor	1/10" Color SUPER HAD™ CCD camera	1/10" Color SUPER HAD™ CCD camera
Pixel Count	290,000 pixels	290,000 pixels
Housing	Titanium	Titanium

7 - Technical Specifications

System	XL Detect	XL Detect+
System Dimensions	9.5 x 13.3 x 34.3 cm (3.8 x 5.3 x 13.5")	10.2 x 16.5 x 34.3 cm (4.0 x 6.5 x 13.5")
Case Dimensions (Non-wheeled-Case)	48.8 x 38.6 x 18.5 cm (19.2 x 15.2 x 17.3")	48.8 x 38.6 x 18.5 cm (19.2 x 15.2 x 17.3")
System Weight	In Case - 6.5 kg (14.3 lbs) Out of Case - 1.7 kg (3.8 lbs)	In Case - 8.39 kg (18.5 lbs) Out of Case - 1.98 kg (4.37 lbs)
Construction	Polycarbonate housing with integrated Versalon™ bumpers	Polycarbonate housing with integrated Versalon™ and tekprene bumpers
LCD Monitor	Integrated 9.4 cm (3.7") active matrix VGA color LCD, Transflective, sunlight readable display.	Integrated 12.7 cm (5.0") active matrix VGA color LCD, Transmissive display.
Joystick Control	360° All-Way® tip articulation, menu access, and navigation	360° All-Way® tip articulation, menu access, and navigation
Button Set	Access user functions and digital functions	Access user functions and digital functions
Audio	Integrated 2.5mm headset / microphone jack	Integrated 2.5mm headset / microphone jack
Internal Memory	4GB flash memory	8GB flash memory
Data I/O ports	2 USB 2.0 ports VGA Video Out	2 USB 2.0 ports VGA Video Out
Brightness Control	Auto and Variable	Auto and Variable
Illumination Type	White LED	White LED
Long Exposure	Auto - up to 16 seconds Manual - up to 2.5 seconds	Auto - up to 16 seconds Manual - up to 2.5 seconds
White Balance	Factory default or user defined	Factory default or user defined

7 - Technical Specifications

Power	XL Detect	XL Detect+
Lithium Ion Battery	8.4 V 38 Wh (2-hour) or 75 Wh (4-hour) 2-hour typical runtime - Standard 4-hour typical runtime - Optional	8.4 V 38 Wh (2-hour) or 75 Wh (4-hour) 2-hour typical runtime - Standard 4-hour typical runtime - Optional
Power Supply		
AC	90-264 Vac 47-63 Hz <1.2 A rms @ 90 Vac	90-264 Vac 47-63 Hz <1.2 A rms @ 90 Vac
DC	10.2 V +5% / -3% 4.9 A	10.2 V +5% / -3% 4.9 A
Standards Compliance and Classifications		
MIL-STD-810G	Tested to United States Department of Defense Environment Tests Sections 506.5, 507.5, 509.5, 510.5, 511.5, 514.6, 516.6, 521.3	Tested to United States Department of Defense Environment Tests Sections 506.5, 507.5, 509.5, 510.5, 511.5, 514.6, 516.6, 521.3
MIL-STD-461F	Tested to United States Department of Defense Electromagnetic Interference RS103 - ABOVE DECK	Not Available
Standards Compliance	Group 1, Class A: EN61326-1, UL, IEC, EN CSA-C22.2:61010-1, UN Manual of Tests and Criteria T1-T5 & T7	Group 1, Class B: EN61326-1, UL, IEC, EN CSA-C22.2:61010-1, UN Manual of Tests and Criteria T1-T5 & T7
IP Rating	Tested to IP55	Tested to IP65
Software		
Operating System	Real-time, multi-tasking operating system	Real-time, multi-tasking operating system
User Interface	Simple drop-down, menu-driven operation, menu navigation using articulation joystick	Simple drop-down, menu-driven operation, menu navigation using articulation joystick

7 - Technical Specifications

File Manager	Embedded file manager software supporting: file and folder creation, naming, deleting, storing to internal flash or USB ThumbDrive®, copying between USB and internal flash	Embedded file manager software supporting: file and folder creation, naming, deleting, storing to internal flash or USB ThumbDrive®, copying between USB and internal flash
Audio Data	PC compatible (.aac) file format	PC compatible (.aac) file format
Image Control	Invert, Zoom (5x digital), Image Capture and Recall	Invert, Zoom (5x digital), Image Capture and Recall
Digital Zoom	Continuous (5x)	Continuous (5x)
Image Formats	Bitmap (.BMP), JPEG (.JPG)	Bitmap (.BMP), JPEG (.JPG)
Video Format	MPEG4 (.MP4)	MPEG4 (.MP4)
Text Annotation	Built-in full-screen text overlay generator	Built-in full-screen text overlay generator
Graphic Annotation	User placement of arrows	User placement of arrows
Articulation Control	Steer & Stay Articulation lock/fine articulation, tip “Home” return to neutral forward-tip orientation User-selectable fine or coarse control	Steer & Stay Articulation lock/fine articulation, tip “Home” return to neutral forward-tip orientation User-selectable fine or coarse control
Software Updates	Field upgradable via USB ThumbDrive®	Field upgradable via USB ThumbDrive®
Languages	English, Spanish, French, German, Italian, Russian, Japanese, Korean, Portuguese, Chinese, and Polish	English, Spanish, French, German, Italian, Russian, Japanese, Korean, Portuguese, Chinese, and Polish
Application Software	Menu Directed Inspection (MDI) software digitally guides inspectors through the inspection process, intelligently names files and creates MS Word® compatible inspection reports.	Menu Directed Inspection (MDI) software digitally guides inspectors through the inspection process, intelligently names files and creates MS Word® compatible inspection reports.

7 - Technical Specifications

Probe Measurements for XL Detect / XL Detect+	
Diameter	Length
4.0 mm (0.16")	2.0, 3.0 m (6.6, 9.8 ft.)
6.1 mm (0.24")	2.0, 3.0, 4.5, 6.0 m (6.6, 9.8, 14.8, 19.7 ft.)
8.4 mm (0.33")	3.0, 10.0 m (9.8, 32.8 ft.)

Tip Articulation	
Insertion Tube Length	Articulation
2.0m, 3.0m, and 4.5m	Up/Down 160° min, Left/Right 160° min
6.0m	Up/Down 140° min, Left/Right 140° min
10.0m	Up/Down 120° min, Left/Right 120° min

Note: Typical articulation exceeds minimum specifications.

Appendix

A. Optical Tip Table

Tip	Diameter (mm)	View (DOV)	Color	Field of View (FOV)	Depth of Field (DOF)	Part Number
Standard Optical Tips						
	4.0	Forward	None	80	35-inf (1.38-inf)	T4080FF*
	4.0	Forward	Black	115	4-inf (.16-inf)	T40115FN
	4.0	Side	Red	115	1-30 (.04-1.18)	T40115SN
	4.0	Side	Blue	120	6-inf (.24-inf)	T40120SF
	6.1	Forward	None	50	50mm-infinity 1.97" - infinity	XLG3T6150FF
	6.1	Forward	White	50	12-200mm .47-7.87"	XLG3T6150FG
	6.1	Forward	Black	120	5-120mm .20-4.72"	XLG3T61120FG
	6.1	Forward	Orange	80	3-20mm .12-.79"	XLG3T6180FN
	6.1	Forward	Yellow	90	20mm-infinity .79"-infinity	XLG3T6190FF
	6.1	Forward Oblique	Purple	50	12-80mm .5-3.2"	XLG3T6150FB
	6.1	Side	Brown	50	45mm-infinity 1.77"-infinity	XLG3T6150SF
	6.1	Side	Green	50	9-160mm .35-6.30"	XLG3T6150SG
	6.1	Side	Blue	120	4-100mm .16-3.94"	XLG3T61120SG

Appendix

	6.1	Side	Red	80	1-20mm .04-.79"	XLG3T6180SN
	6.1	Side	Green	50	9-160mm .35-6.30"	XLG3T6150SG
	6.1	Side	Brown	50	45mm 1.77"-infinity	XLG3T6150SF
	8.4	Forward	None	40	250mm-infinity 9.84"-infinity	XLG3T8440FF
	8.4	Forward	Black	120	5-200mm 020-.87	XLG3T84120FN
	8.4	Forward	Gold	20	500mm-infinity 19.69"-infinity	XLG3T8420FF
	8.4	Forward	Yellow	80	25-500mm .98-19.69"	XLG3T8480FG
	8.4	Side	Brown	40	250mm-infinity 9.84"-infinity	XLG3T8440SF
	8.4	Side	Green	80	25-500mm .98-19.69"	XLG3T8480SG
	8.4	Side	Blue	120	5-200m .16-7.87"	XLG3T84120SN

Appendix

B. Chemical Compatibility

Chemical compatibility refers to the probe's ability to come into contact with various liquid substances and not be damaged.



WARNING Do not use this system in explosive environments.

These substances are safe for a short duration of contact with the insertion tube:

- Water
- Aircraft Gasoline
- Jet-A-Fuel
- Isopropyl alcohol
- JP-4 Fuel
- Kerosene
- Synthetic Turbo Oil
- Gasoline
- Diesel Fuel
- Hydraulic Oil
- Inhibited Transformer Oil

Subsequent to contact with the above fluids, the insertion tube must be cleaned prior to storage.

Appendix

C. Warranty

Waygate Technologies warrants its VideoProbe components, when new, to be free from defects in material and workmanship and to perform in accordance with manufacturer's specifications under normal use and service for a period of one year from the date of purchase from Waygate Technologies or its authorized distributors, except that, the light source is warranted for a period of 3 years from the date of purchase, the battery is warranted for a period of 30 days from the date of purchase, and where used, servo motors in the articulation drive system are warranted for the life of this VideoProbe product.

Waygate Technologies' obligation under this warranty is limited to the repair or replacement of components determined by Waygate Technologies to be defective within the warranty period at no cost to the original purchaser, except for return shipping expenses. It shall be the purchaser's responsibility to return the product to Waygate Technologies or one of its authorized service centers. The warranty does not cover accessories or optional equipment not manufactured by Waygate Technologies, but these items may be covered by separate manufacturers'

This warranty extends to the original purchaser and cannot be assigned or transferred to any third party. This warranty shall not apply to any damage or product failure determined by Waygate Technologies to have been caused by misuse, accident (including shipping damage), neglect, improper maintenance, modification or repair by someone other than Waygate Technologies or one of its authorized service representatives.

These express warranties are in lieu of any other warranties, express or implied, including the warranties of merchantability and fitness for a particular purpose, and no other person has been authorized to assume for Waygate Technologies any other liability in connection with the sale of its VideoProbe products. Waygate Technologies shall not be liable for any loss or damages, whether direct or indirect, incidental, or consequential, resulting from the breach of any express warranty set forth herein.

Appendix

D. Environmental Compliance



The equipment purchased has required the extraction and use of natural resources for its production. It may contain hazardous substances that could impact health and the environment.

In order to avoid the dissemination of those substances in the environment and to diminish the pressure on the natural resources, we encourage the use of appropriate take-back systems. Those systems will reuse or recycle most of the materials of end-life equipment in a sound way.

The cross-out wheeled bin symbol encourages the use of those systems.

If more information is needed on the collection, reuse, and recycling systems, please contact the appropriate local or regional waste administration.

EU Battery Directive



This product contains a battery that cannot be disposed of as unsorted municipal waste in the European Union. See the product documentation for specific battery information. The battery is marked with this symbol, which may include lettering to indicate cadmium (Cd), lead (Pb), or mercury (Hg). For proper recycling return the battery to your supplier or to a designated collection point.

What do the markings mean?

Batteries and accumulators must be marked (either on the battery or accumulator or on its packaging, depending on size) with the separate collection symbol. In addition, the marking must include the chemical symbols of specific levels of toxic metals as follows:

Cadmium (Cd) over 0.002%

Lead (Pb) over 0.004%

Mercury (Hg) over 0.0005%

The risks and your role in reducing them

Your participation is an important part of the effort to minimize the impact of batteries and accumulators on the environment and on human health. For proper recycling you can return this product or the batteries or accumulators it contains to your supplier or to a designated collection point. Some batteries or accumulators contain toxic metals that pose serious risks to human health and to the environment. When required, the product marking includes chemical symbols that indicate the presence toxic metals: Pb for lead, Hg for mercury, and Cd for cadmium. Cadmium poisoning can result in cancer of the lungs and prostate gland. Chronic effects include

Appendix

kidney damage, pulmonary emphysema, and bone diseases such as osteomalacia and osteoporosis. Cadmium may also cause anemia, discoloration of the teeth, and loss of smell (anosmia). Lead is poisonous in all forms. It accumulates in the body, so each exposure is significant. Ingestion and inhalation of lead can cause severe damage to human health. Risks include brain damage, convulsions, malnutrition, and sterility. Mercury creates hazardous vapors at room temperature. Exposure to high concentrations of mercury vapor can cause a variety of severe symptoms. Risks include chronic inflammation of mouth and gums, personality change, nervousness, fever, and rashes.

Visit http://ec.europa.eu/environment/waste/weee/index_en.htm for take-back instructions and more information about this initiative.

E. Agency Certifications

European Equipment Classification

Group 1, Class A

The  mark on this product indicates it has been tested to and conforms with the provisions noted within the 2014/30/EU Electromagnetic Compatibility Directive. The XL Detect+ system is in conformance with the following standard: EN61326-1.

Declarations of Conformity are held by Waygate Technologies GmbH:

Baker Hughes Digital Solutions, GmbH
Robert Bosch Str. 3
50354 Huerth
Germany
Tel: +49 2233 601 111 Ext. 1

Safety Mark

The XL Detect+ system is in compliance with the following standards:
UL 61010-1, IEC 61010-1, EN 61010-1 and CSA-C22.2 No. 61010-1.

Appendix

Additional Certification Testing

XL Detect

Tested to MIL-STD-461F: RS103

Tested to MIL-STD-810G: 506.5, 507.5, 509.5, 510.5, 511.5, 514.6, 516.6, 521.3

UN Manual of Tests and Criteria T1-T5 & T7

XL Detect+ -

Tested to MIL-STD-810G: 506.5, 507.5, 509.5, 510.5, 511.5, 514.6, 516.6, 521.3

UN Manual of Tests and Criteria T1-T5 & T7

FCC Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference
- 2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Canadian Notice

This equipment does not exceed the Class A limits for radio noise emissions as described in the Radio Interference Regulations of the Canadian Department of Communications.

Le present appareil numerique n'emet pas de bruits radioelectriques

Appendix

depassant les limites applicables aux appareils numeriques de la classe A prescrites dans le Reglement sur le brouillage radioelectrique edicte par le ministere des Communications du Canada.

F. Creating a Personalized Logo File

The XL Detect+ allows users to display a personalized logo on-screen or store with captured images. Typically, this file will be a corporate logo.

LOGO File Requirements

- 200 x 200 pixels maximum size
- 24 Color
- File name must be logo.jpg
- File must be Microsoft® Windows® compatible

Creating the Logo File

1. Open logo file with image editor.
2. Create custom background comprised of Red 255, Green 0, Blue 255. This will create a magenta-colored background that will appear transparent when loaded on the XL Detect+.
3. Save this file as a .png.
4. Close image editor.
5. Locate the saved file, right click, choose rename. Rename file from logo.png to logo.jpg. This will allow it to be recognized by the XL Detect+.
6. Transfer file to the USB ThumbDrive provided with system.
7. Insert ThumbDrive into USB port on the XL Detect+.
8. Press joystick to enter Live Main Menu
9. Navigate to SETUP > SCREEN/DISPLAY > LOGO
10. Select LOAD
11. Prompt will display "LOGO COPY COMPLETE"

Appendix

G. Open Source Software Availability

There are various open source software packages that have been utilized within this product, and to meet license and copyright obligations, a copy of the source code for each package is available upon request, along with the individual licenses and copyright notices for each, for three years from the date of original installation upon the product.

Requesting these source packages is NOT REQUIRED for operation or use of this product. Additionally, only portions of software on this product fall under open source software licenses, with the remainder merely being an aggregation on the product's storage volumes. Thus NO promise is made NOR implied that source code will be provided for the aggregated proprietary software.

With respect to each open source software distribution, no warrantee is expressed nor implied by either the original authors of the software, nor by any other party involved in the distribution of the software. More explicit warranty disclaimers are detailed within the license documentation of each software package, again available upon request. Furthermore such disclaimers and license requirements and restrictions only apply to each open source software package, and DO NOT REFLECT the warranty of the product as a whole.

There are no additional restrictions placed upon copying, distribution, or modification of each software package beyond those of the original licenses, expressed or implied, due to their inclusion in this product.

To request a copy of these open source software packages, please have your product model and serial numbers ready, and call technical support at +1 (866) 243-2638.

Appendix

H. Restoring Factory Defaults

To restore factory defaults, press and hold both Left and Right Soft Keys for five seconds and confirm restoration of factory defaults. Performing this action restores the following options:

- Batter Icon - On
- Date/Time - On
- Date Format - MM/DD/YYYY
- Logo - On
- Temp Icon - On
- Text Color - Green
- Image Format - BMP
- Power Management - On
- Steering Mode - Coarse


NOTE: Upon next restart of VideoProbe after restoring factory defaults, select the desired language from the initial language selection screen

Menu Directed Inspection (MDI)

Menu Directed Inspection (MDI)

Menu Directed Inspection (MDI) is the first software tool to standardize the inspection process in the NDT industry. MDI software helps guide inspectors through the inspection process and intelligently auto-generates a report—saving time, improving quality and increasing productivity.

Menu Directed Inspection (MDI) software provides an advantage and convenience during the inspection process. MDI makes labeling images and videos easier and automatically generates reports from the VideoProbe within a few steps.

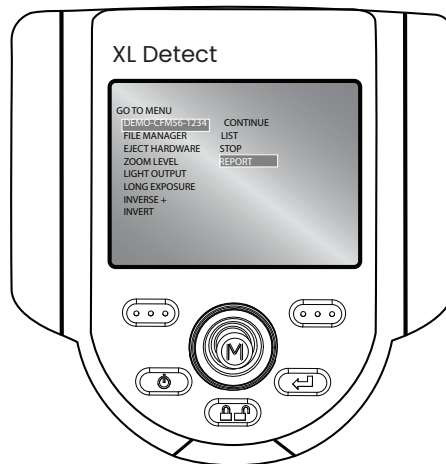

Benefits to using MDI include:

- Standardized Inspection Lists
- Consistent Report Creation in MS Word format
- Data Management
- Decreased reporting time by up to 70%
- Increased speed and ease of sharing data
- Reduction of errors with guided inspections

Customer Support Centers

USA

Waygate Technologies, LP
721 Visions Drive
Skaneateles, NY 13152
Tel: 888-332-3848
315-554-2000 ext. 1
E-mail: RemoteService@
BakerHughes.com

China

Baker Hughes Sensing &
Inspection Co., Ltd.
No. 8 Xi hu Road,
Wu jin high-tech zone
Changzhou, Jiang Su 213164
China
Tel: + 86 400 818 1099

Europe

Baker Hughes Digital Solutions
GmbH
7 Robert Bosch Str. 3
50354 Huerth
Germany
Tel: +49 2233 601 111 Ext. 1

Russia

Baker Hughes Rus Infra LLC
Industrial Park "Rosva"
Rosva Kaluga, 248001, Russia
Phone: +7 4842 716 576

Asia/Pacific

Baker Hughes Solutions Pte. Ltd.
10 Lok Yang Way
Singapore 628631
Phone: +65 62135500

waygate-tech.com

Assembled in USA

ISO 9001
REGISTERED COMPANY

©2021 Baker Hughes

All rights reserved. Specifications subject to change without notice.

Baker Hughes 

bakerhughes.com

XLDETECTBMAN Rev -